



This is a digital copy of a book that was preserved for generations on library shelves before it was carefully scanned by Google as part of a project to make the world's books discoverable online.

It has survived long enough for the copyright to expire and the book to enter the public domain. A public domain book is one that was never subject to copyright or whose legal copyright term has expired. Whether a book is in the public domain may vary country to country. Public domain books are our gateways to the past, representing a wealth of history, culture and knowledge that's often difficult to discover.

Marks, notations and other marginalia present in the original volume will appear in this file - a reminder of this book's long journey from the publisher to a library and finally to you.

Usage guidelines

Google is proud to partner with libraries to digitize public domain materials and make them widely accessible. Public domain books belong to the public and we are merely their custodians. Nevertheless, this work is expensive, so in order to keep providing this resource, we have taken steps to prevent abuse by commercial parties, including placing technical restrictions on automated querying.

We also ask that you:

- + *Make non-commercial use of the files* We designed Google Book Search for use by individuals, and we request that you use these files for personal, non-commercial purposes.
- + *Refrain from automated querying* Do not send automated queries of any sort to Google's system: If you are conducting research on machine translation, optical character recognition or other areas where access to a large amount of text is helpful, please contact us. We encourage the use of public domain materials for these purposes and may be able to help.
- + *Maintain attribution* The Google "watermark" you see on each file is essential for informing people about this project and helping them find additional materials through Google Book Search. Please do not remove it.
- + *Keep it legal* Whatever your use, remember that you are responsible for ensuring that what you are doing is legal. Do not assume that just because we believe a book is in the public domain for users in the United States, that the work is also in the public domain for users in other countries. Whether a book is still in copyright varies from country to country, and we can't offer guidance on whether any specific use of any specific book is allowed. Please do not assume that a book's appearance in Google Book Search means it can be used in any manner anywhere in the world. Copyright infringement liability can be quite severe.

About Google Book Search

Google's mission is to organize the world's information and to make it universally accessible and useful. Google Book Search helps readers discover the world's books while helping authors and publishers reach new audiences. You can search through the full text of this book on the web at <http://books.google.com/>

THE VAN NOSTRAND SCIENCE SERIES.

16mo. Boards. Price 50 Cents Each.

Amplly Illustrated when the Subject Demands.

- No. 1.—CHIMNEYS FOR FURNACES AND STEAM-BOILERS. By R. Armstrong, C.E. 3d American ed. Revised and partly rewritten, with an Appendix on 'Theory of Chimney Draught, by F. E. Idell, M.E.
- No. 2.—STEAM-BOILER EXPLOSIONS. By Zerah Colburn. New edition, revised by Prof. R. H. Thurston.
- No. 3.—PRACTICAL DESIGNING OF RETAINING-WALLS. By Arthur Jacob, A.B. Second edition, revised, with additions by Prof. W. Cain.
- No. 4.—PROPORTIONS OF PINS USED IN BRIDGES. By Chas. E. Bender, C.E. 2d edition, with appendix.
- No. 5.—THEORY OF COAL-BUILDINGS. By W. E. Butler.

Library

of the

University of Wisconsin

FRENCH OF A. BAKER. Second edition, revised, with results of American Practice by Richard H. Buel, C.E.


- No. 11.—THEORY OF ARCHES. By Prof. W. Allan.
- No. 12.—THEORY OF VOUSOIR ARCHES. By Prof. W. Cain. Second edition, revised and enlarged.
- No. 13.—GASES MET WITH IN COAL-MINES. By J. J. Atkinson. Third edition, revised and enlarged by Edward H. Williams, jun.
- No. 14.—FRICTION OF AIR IN MINES. By J. J. Atkinson. Second American edition.
- No. 15.—SKEW ARCHES. By Prof. E. W. Hyde, C.E. Illustr.
- No. 16.—A GRAPHIC METHOD FOR SOLVING CERTAIN QUESTIONS IN ARITHMETIC OR ALGEBRA. By Prof. G. L. Vose.
- No. 17.—WATER AND WATER-SUPPLY. By Prof. W. H. Corfield of the University College, London. Second American edition.
- No. 18.—SEWERAGE AND SEWAGE PURIFICATION. By M. N. Baker, Associate Editor "Engineering News."

THE VAN NOSTRAND SCIENCE SERIES.

- No. 19.—STRENGTH OF BEAMS UNDER TRANSVERSE LOADS.** By Prof. W. Allan, author of "Theory of Arches." Second edition, revised.
- No. 20.—BRIDGE AND TUNNEL CENTRES.** By John B. McMaster, C.E. Second edition.
- No. 21.—SAFETY VALVES.** Second Edition. By Richard H. Buel, C.E.
- No. 22.—HIGH MASONRY DAMS.** By E. Sherman Gould, M. Am. Soc. C. E.
- No. 23.—THE FATIGUE OF METALS UNDER REPEATED STRAINS.** With various Tables of Results and Experiments. From the German of Prof. Ludwig Spangenberg, with a Preface by S. H. Shreve, A.M.
- No. 24.—A PRACTICAL TREATISE ON THE TEETH OF WHEELS.** By Prof. S. W. Robinson. Second edition, revised.
- No. 25.—ON THE THEORY AND CALCULATION OF CONTINUOUS BRIDGES.** By R. M. Wilcox, Ph. D.
- No. 26.—PRACTICAL TREATISE ON THE PROPERTIES OF CONTINUOUS BRIDGES.** By Charles Bender, C.E.
- No. 27.—ON BOILER INCrustATION AND CORROSION.** By F. J. Rowan. New Ed. Rev. by F. E. Idell.
- No. 28.—TRANSMISSION OF POWER BY WIRE ROPES.** Second edition. By Albert W. Stahl, U.S.N.
- No. 29.—STEAM INJECTORS.** Translated from the French of M. Leon Pochet.
- No. 30.—TERRESTRIAL MAGNETISM AND THE MAGNETISM OF IRON VESSELS.** By Prof. Fairman Rogers.
- No. 31.—THE SANITARY CONDITION OF DWELLING-HOUSES IN TOWN AND COUNTRY.** By George E. Waring, jun.
- No. 32.—CABLE-MAKING FOR SUSPENSION BRIDGES.** By W. Hildebrand, C.E.
- No. 33.—MECHANICS OF VENTILATION.** By George W. Rafter, C.E. New and Revised Edition.
- No. 34.—FOUNDATIONS.** By Prof. Jules Gaudard, C.E. Second edition. Translated from the French.
- No. 35.—THE ANEROID BAROMETER: ITS CONSTRUCTION AND USE.** Compiled by George W. Plympton. Eighth edition.
- No. 36.—MATTER AND MOTION.** By J. Clerk Maxwell, M.A. Second American edition.
- No. 37.—GEOGRAPHICAL SURVEYING: ITS USES, METHODS, AND RESULTS.** By Frank De Yeaux Carpenter, C.E.
- No. 38.—MAXIMUM STRESSES IN FRAMED BRIDGES.** By Prof. William Cain, A.M., C.E. New and revised edition.

THE VAN NOSTRAND SCIENCE SERIES.

- No. 39.—A HANDBOOK OF THE ELECTRO-MAGNETIC TELEGRAPH.** By A. E. Loring.
- No. 40.—TRANSMISSION OF POWER BY COMPRESSED AIR.** By Robert Zahner, M.E. Second edition.
- No. 41.—STRENGTH OF MATERIALS.** By William Kent, C.E., Assoc. Editor, *Engineering News*. Second Ed.
- No. 42.—THEORY OF STEEL-CONCRETE ARCHES, AND OF VAULTED STRUCTURES.** By Prof. William Cain.
- No. 43.—WAVE AND VORTEX MOTION.** By Dr. Thomas Craig, of Johns Hopkins University.
- No. 44.—TURBINE WHEELS.** By Prof. W. P. Trowbridge, Columbia College. Second edition. Revised.
- No. 45.—THERMODYNAMICS.** By Prof. H. T. Eddy, University of Cincinnati.
- No. 46.—ICE-MAKING MACHINES.** From the French of M. Le Doux. Revised by Prof. Denton.
- No. 47.—LINKAGES; THE DIFFERENT FORMS AND USES OF ARTICULATED LINKS.** By J. D. C. de Roos.
- No. 48.—THEORY OF SOLID AND BRACED ARCHES**
By William Cain, C.E.
- No. 49.—ON THE MOTION OF A SOLID IN A FLUID.**
By Thomas Craig, Ph.D.
- No. 50.—DWELLING-HOUSES: THEIR SANITARY CONSTRUCTION AND ARRANGEMENTS.** By Prof. W. H. Corfield.
- No. 51.—THE TELESCOPE: ITS CONSTRUCTION, ETC.**
By Thomas Nolan.
- No. 52.—IMAGINARY QUANTITIES.** Translated from the French of M. Argand. By Prof. Hardy.
- No. 53.—INDUCTION COILS: HOW MADE AND HOW USED.** Fifth edition.
- No. 54.—KINEMATICS OF MACHINERY.** By Prof. Kennedy. With an introduction by Prof. R. H. Thurston.
- No. 55.—SEWER GASES: THEIR NATURE AND ORIGIN.**
By A. de Varona. 2d ed., revised and enlarged.
- No. 56.—THE ACTUAL LATERAL PRESSURE OF EARTH-WORK.** By Benjamin Baker, M. Inst. C.E.
- No. 57.—INCANDESCENT ELECTRIC LIGHTING.** A Practical Description of the Edison System. By L. H. Latimer, to which is added the Design and Operation of Incandescent Stations. By C. J. Field, and the Maximum Efficiency of Incandescent Lamps, by John W. Howell.
- No. 58.—THE VENTILATION OF COAL-MINES.** By W. Fairley, M.E., F.S.S., and Geo. J. André.
- No. 59.—RAILROAD ECONOMICS; OR, NOTES, WITH COMMENTS.** By S. W. Robinson, C.E.
-



PUBLISHED IN
VAN NOSTRAND'S SCIENCE SERIES.

BY THE AUTHOR OF

"House Drainage and Sanitary Plumbing."

Recent Practice in the Sanitary Drainage of Buildings. With Memoranda on the Cost of Plumbing Work. Second Edition, revised and enlarged. Price 50 cents.

The Disposal of Household Wastes. A Discussion of the best Methods of Treatment of the Sewage of Farm-Houses, Isolated Country Houses, Suburban Dwellings, Houses in Villages and Smaller Towns, and of Larger Institutions, such as Hospitals, Asylums, Hotels, Prisons, Colleges, etc., and of the Modes of Removal and Disposal of Garbage, Ashes, and other Solid House Refuse. Illustrated. Price 50 cents.

Gas Lighting and Gas Fitting. Including Specifications and Rules for Gas Piping, Notes on the Advantages of Gas for Cooking and Heating, and Useful Hints to Gas Consumers. Second Edition, rewritten and enlarged. Price 50 cents.

Other works by the same author :

Hints on the Drainage and Sewerage of Dwellings. Third Edition, profusely illustrated. Price \$1.50.

A Guide to Sanitary House Inspection ; or, Hints and Helps regarding the Choice of a Healthful Home in City or Country. Third Edition. Price \$1.00.

The Prevention of Fire. Second Edition. Price 60 cents.

The author's suggestions on fire prevention and fire protection, although written chiefly with reference to hospitals, lunatic asylums and orphans' homes, are equally applicable to hotels, warehouses, factories, mills, schools, churches, dwelling-houses and public buildings of all kinds.

HOUSE-DRAINAGE

AND

SANITARY PLUMBING

BY

WM. PAUL GERHARD,

*Civil Engineer, Consulting Engineer for Sanitary Works;
Member American Public Health Association;
Corres. Mem. Am. Inst. of Architects; etc.*

TENTH EDITION.



NEW YORK:
D. VAN NOSTRAND COMPANY,
23 MURRAY AND 27 WARREN STREET.

1902.

COPYRIGHT,
1882,
BY D. VAN NOSTRAND.

6709801

77322

MAR 12 1904

S X M

G 31

H

PREFACE TO THE FIRST EDITION.

THE essay reproduced herein was originally prepared for the annual report of the State Board of Health of Rhode Island. It was written both for professionals and laymen. Having met with a favorable reception, it was thought worth while to increase its utility by republishing it in an improved and more accessible shape. Many parts were accordingly rewritten, others were modified and omissions corrected. Such omissions, however, are sure to occur in any edition of a book containing descriptions of modern plumbing apparatus, as new appliances are continuously invented between the time the book is written until it is printed and published.

Many cuts of the original report have been omitted, particularly those illustrating plumbing fixtures, as these are contained in the well-known catalogues and

circulars of manufacturers of plumbers' supplies.

The author takes this opportunity to express his obligations to many friends for valuable hints and suggestions, which he has endeavored to embody in this improved edition. He would be glad if this little volume should prove to be of interest and value to architects, sanitary engineers, plumbers, sanitary officers, and householders in general.

W. P. G.

NEWPORT, R. I., December, 1882.

PREFACE TO THE SECOND EDITION.

THIS new edition has been carefully revised, and many additions have been made to the subject-matter.

May this little book, in its improved shape, find as many friends and meet with as kind a reception as the first edition.

THE AUTHOR.

NEW YORK, May, 1884.

PREFACE TO THE THIRD EDITION.

IN revising the pages of this book for a third edition, I have deemed it best to make as few changes as possible. The general principles of house drainage have not been materially altered or modified since the first and second editions were written, in 1882 and 1884. Perhaps there is now, more than ever before, a tendency towards simplification of the plumbing work, and this is thoroughly in accordance with the views always held by me.

In discussing the various types of closets I have omitted in the new edition any mention of the closets of the more prominent makes, first, because the many well illustrated catalogues of dealers and manufacturers in plumbers' supplies give a sufficiently accurate idea of the construction and method of operation of these closets, and second, because there are now so many kinds in the market as

so render it impossible to mention them all.

The reader is referred for further details regarding sanitary drainage of buildings to the author's companion-volume in the Science Series, entitled "*Recent Practice in the Sanitary Drainage of Buildings, with Memoranda on the Cost of Plumbing Work.*"

WM. PAUL GERHARD.

NEW YORK, December 1, 1890.
36 Union Square, East.

PREFACE TO THE SIXTH EDITION.

No changes were deemed necessary for this new edition, but the author desires to acknowledge his gratitude for the continued appreciation of this little book, and begs to call the attention of those interested to the fact that the *Science Series* now includes four volumes, viz. Nos. 63, 93, 97, and 111, in which he discusses plumbing, house-drainage, sewage disposal, and gas-fitting, and which, to a certain extent, supplement each other and should therefore be read together.

WM. PAUL GERHARD.

NEW YORK, March 1, 1894.
36 Union Square, East.

CONTENTS.

	PAGE
Introductory,	7
Sewer-Gas,	9
Defective and Good Plumbing Work,	17
Drains Outside of the House,	21
Drains Inside of the House,	39
Soil and Waste Pipes,	44
Essential Elements of a System of House-Drainage,	67
Extension of Soil and Waste Pipes,	68
Fresh-Air Inlet,	73
Trap on Main Drain,	77
Trapping of Fixtures,	86
Venting of Traps, and Trap Siphonage,	99
Evaporation of Water in Traps,	104
Loss of Water-Seal in Traps through Capillary Attraction,	107
Absorption of Gases by the Water in Traps,	108
Traps Forced by Back-Pressure,	111
Plumbing Fixtures,	112
Branch Wastes from Fixtures,	119
Safe Wastes,	126
Cistern Overflow-Pipes,	128
Refrigerator-Wastes,	129
Wash-Basins,	130
Bath-Tubs,	136
Laundry-Tubs,	143

	PAGE
Kitchen and Pantry Sinks, Laundry and House-	
maids' Sinks,	144
Grease-Traps,	146
Slop-Sinks and Slop-Hoppers,	153
Urinals,	156
Water-Closets in General,	162
Flushing of Water-Closets,	167
Types of Water-Closets,	177
Pan-Closets,	179
Valve-Closets,	182
Plunger-Closets,	185
Hopper-Closets,	187
Washout-Closets,	190
Latrines,	192
General Arrangement of Water-Closet Apartments,	195
Flushing Appliances,	206
Removal of Roof, Yard, and Surface Water,	209
Drainage of Cellars,	212
Dampness of Walls,	217
Record and Plan of Drainage and Plumbing In-	
spection,	218
Plumbing Regulations,	220
System of House-Drainage,	222

HOUSE-DRAINAGE

AND

SANITARY PLUMBING.

MANY erroneous ideas still prevail about "sewer-gas" and its danger to health which arises, by having so-called "modern conveniences" in our dwellings. It is the purpose of this paper, without in any way adding to the "plumbing scare," clearly to define wherein the danger consists, but at the same time to establish rules for the proper draining and plumbing of houses, which, if carefully observed, will secure to the anxious house-owner work of superior quality and of a positively safe character.

Plumbing fixtures, which were considered a luxury years ago, are now believed to be necessary, not only for comfort and convenience, but also, and even more so, for health and for cleanliness. Even a small house is nowadays generally

provided with a kitchen-sink, a water-closet, and sometimes a bath-tub, while in a costly modern residence, arranged with an elaborate system of plumbing, we find kitchen, pantry, and scullery sinks, slop-sinks, laundry-tubs, stationary wash-basins in closets near bedrooms, a great number of bath or dressing rooms, with water-closets, urinals, bath and foot tubs, bidets, and other fixtures.

The suggestions and recommendations of this report apply with equal force to the drainage and plumbing of tenements, small houses, costly residences, villas, apartment houses, hotels, factories, school-houses, or other public buildings. As every plumbing fixture is not only an outlet for the waste-water to the drain, but possibly may become an inlet for drain-air, the danger increases with the number of fixtures. A multitude of fixtures require a large number of soil and waste pipe stacks, and the chance of leakage of sewer-air through defective joints increases correspondingly. But be the house large or small, be it a mechanic's cottage or a wealthy merchant's

palace, its drainage and plumbing system should always be so arranged as entirely to exclude any possibility of the escape of noxious gases from the house drain or sewer.

SEWER-GAS.

I shall, first, briefly consider what is meant by the term "sewer-gas." This term, as Prof. W. Ripley Nichols has truly said,* is "an unfortunate one, and gives rise to a quite widespread but very erroneous idea. Many seem to suppose the 'sewer-gas' to be a distinct gaseous substance, which is possessed of marked distinguishing characteristics, which fills the ordinary sewers and connecting drains, and which, as a tangible something, finds its way through any opening made by chance or by intention, and then, and only then, mixes with the atmospheric air."

What is popularly known as "sewer-gas" is a mechanical mixture of a number of well-known gases, having their

* See Prof. W. Ripley Nichols' report upon chemical examination of the air of the Berkeley-street sewer, in Boston, Mass., 1878.

origin in the decomposition of animal of vegetable matter, with atmospheric air. This mixture is continually varying, according to the more or less advanced stage of putrefaction of the foul matters, which form a sediment and a slimy coating of the inner surfaces in drains and pipes. It is also variable with the character of this sediment or deposit, and with the physical conditions (moisture, heat, etc.) under which the decomposition takes place.

The principal gases found in sewers and drains are oxygen, nitrogen, carbonic dioxide, carbonic oxide, ammonia, carbonate of ammonia, sulphide of ammonium, sulphuretted hydrogen, and marsh-gas.

The three first-named gases are the principal constituents of the atmosphere surrounding the globe, and are found present in the following *average* proportion, viz. :

20.9 vols. oxygen	} in 100 vols. of air, together
79.1 vols. nitrogen	
with 2 to 5 vols. carbonic dioxide in 10,000 vols. of air.	

According to R. Angus Smith the amount of *oxygen* is :

In the average, 20.96 vols. in 100 vols. of air.

In pure mountain air, 20.98 vols. in 100 vols. of air.

At the sea-shore, 20.999 vols. in 100 vols. of air.

In streets of populous cities, 20.87 to 20.90 vols. in 100 vols. of air.

The air in sewers and drains contains much less oxygen, as some of it combines with the carbon of putrefying organic matter, forming carbonic dioxide. The amount of nitrogen in the air of sewers is little different from that in the atmosphere which we breathe; but the amount of carbonic dioxide present is greatly increased.

The lowest amount of oxygen in sewer-air is recorded to be 17.4 vols. in 100 vols. of air *; the amount of carbonic dioxide is in the *average* 2.3 vols. in 100 vols. Sulphuretted hydrogen varies greatly, but

* Parent-Duchâtelet records the percentage of oxygen in an old Paris sewer to be only 18.99 per cent.; this sewer, however, was really only an "elongated cesspool."—W. P. G.

the quantity is generally so small as not to be easily determined. Still more difficult is it to find by chemical analysis the proportion of other gases of decay.

In well-ventilated and well-flushed sewers Dr. Russell, of Glasgow, found the following ratio :

20.70 vols. of oxygen in 100 vols. of air.

78.79 vols. of nitrogen in 100 vols. of air.

0.51 vols. of carbonic dioxide in 100 vols. of air.

No sulphuretted hydrogen in 100 vols of air.

Traces of ammonia in 100 vols. of air.

Carbonic oxide is present only in excessively minute quantities, and, if so, it is generally due to leakage into the sewers of illuminating-gas from gas-mains.

In the absence of more satisfactory methods of analysis it is usual with chemists to determine the amount of pollution of the air, or the organic matter in it, by determining the amount of carbonic dioxide present, assuming that there is a certain fixed proportion between the amount of carbonic dioxide and the or-

ganic matter.* Thus, Prof. W. Ripley Nichols records, as the average of many carefully conducted experiments in Boston, the amount of carbonic dioxide in a sewer in that city as follows :

The average of

31 determinations in January, 1878, was 8.7 vols. of CO_2 in 10,000 vols. of air.

44 determinations in February, 1878, was 8.2 vols. of CO_2 in 10,000 vols. of air.

47 determinations in March, 1878, was 11.5 vols. of CO_2 in 10,000 vols. of air.

12 determinations in April, 1878, was 10.7 vols. of CO_2 in 10,000 vols. of air.

8 determinations in June, 1878, was 27.5 vols. of CO_2 in 10,000 vols. of air.

8 determinations in July, 1878, was 21.9 vols. of CO_2 in 10,000 vols. of air.

6 determinations in August, 1878, was 23.9 vols. of CO_2 in 10,000 vols. of air.

7 determinations in January, 1879, was 8.0 vols. of CO_2 in 10,000 vols. of air.

* Such is strictly true only for air fouled by respiration, while it may not give accurate results in other cases.

In regard to this interesting question, I refer to the report of Prof. Ira Remsen on the subject of organic matter in the air, published in the National Board of Health Bulletin, vol. 2, No. 11.

14 determinations in February, 1879, was 11.9 vols. of CO_2 in 10,000 vols. of air.

20 determinations in March, 1879, was 11.8 vols. of CO_2 in 10,000 vols. of air.

Prof. Nichols remarks: "It appears from these examinations that in such a sewer as the one in Berkeley street, which, being of necessity tide-locked, is an example of the worst type of construction, the air does not differ from the normal standard as much as many, no doubt, suppose. In a general way, as we have seen, there is a larger amount of variation from normal air during the warmer season of the year; but even when the amount of carbonic acid was largest, it was only extremely seldom that sulphuretted hydrogen could be detected." . . . "I think it should be said that the soil-pipes and house-drains are much more likely causes of discomfort and danger than the sewers."

Hence the importance of a thorough ventilation of all the soil, waste, and drain pipes in a building.

The question may be asked: Are the above-named constituents of sewer-air

the origin or cause of the sickness so commonly attributed to the inhaling of "sewer-gas"?

Many of the gases named are undoubtedly poisonous if inhaled into the system in large quantities, and may, even if present in smaller quantity, cause nausea, asphyxia, headache, vomiting, etc., but none of them can be said to *produce* any of the so-called "filth-diseases." To determine the exact origin of these is a still unsolved problem of physiology. While some believe that the particles of decomposing organic matter present in sewer-air, and known as "organic vapor," cause disease, others seek the origin of the latter in microscopic *spores* or *germs* which live and feed upon such organic vapor, and are capable of reproduction under favorable conditions, such as presence of putrefying filth, excess of moisture, heat, lack of oxygen, etc.

Whatever theory may be accepted as true, it is evident that, by preventing the decay of organic matter within sewers, drains, and soil-pipes, or by depriving

these germs (if such be the cause of disease) of the conditions facilitating their reproduction, we can best prevent the outbreak of excremental diseases. In other words, *by completely removing as speedily as possible all waste matters from the dwelling by pipes thoroughly and tightly jointed, and by a sufficient change of the air in these pipes by proper ventilation, the danger of infection arising from defective drainage and plumbing may be reduced to a minimum.*

It should be mentioned that some hygienists, notably Dr. Soyka and Dr. Renk, both assistants of Pettenkofer in Munich, have lately denied the existence of any *positive* proof of a connection between sewer-air and the spread of epidemic diseases—just as Naegeli and Emmerich doubt the possibility of infection from drinking water contaminated by sewage. Dr. Renk considers the exclusion of gases of decay from the interior of dwellings necessary only so far as they are offensive to the sense of smell. In this view, however, I cannot concur; in regard to “filth-

diseases," their causes and origin, I accept as more probable the theory of Dr. Simon, Parkes, and others, and I believe that, as long as there are doubts as to the causes of infectious disease, it is wise to err on the side of safety. At the same time there cannot be the slightest doubt about the unwholesome effect in general upon health of air contaminated by foul gases. Such contamination it is always possible to prevent, and the following pages are intended to show how this can be done in the simplest and most efficient manner.

DEFECTIVE AND GOOD PLUMBING WORK.

The unhealthiness of dwelling-houses has been greatly increased by plumbing work defective in design, materials, and in workmanship, through ignorance, but often through intention of builders. The consequence was a growing inclination with some to abandon all plumbing fixtures, to go back to the ill-famed privy in the backyard, and to follow the practice

of throwing the slops from the kitchen upon the grounds in the rear yard.

But cannot this risk be avoided with careful, conscientious, and honest workmanship, carried out under the strict supervision of an expert? Is it such a difficult thing to have a proper and judicious arrangement of the drainage system?

I shall endeavor in the following pages to explain what the elements of a well-devised system of house-drainage and sanitary plumbing are. Much has been written of late about this subject. It has been well and thoroughly treated by able writers, and my paper can hardly claim much originality or novelty, but should be taken as the outgrowth of much study and experience.

The essentials of a perfect system of house-drainage are simple, and can be readily understood by any householder when carefully explained. They involve nothing more than the proper application of well-known laws of nature; there is no mystery, no secrecy about any part of the work. Any one building a house is able

to secure good drainage and a safe arrangement of the plumbing work without having to resort to any patented system of trapping drains or ventilating soil and waste pipes, etc. The plumbing fixtures are, of course, mostly patented, as any useful appliance may be, and in speaking of these one cannot avoid recommending patented devices.

The entire sewage of the dwelling may deliver either into a regular system of sewers, or else discharge into an open water-course; or—in the absence of either—it may run into a cesspool, be it a leaching cesspool, or a well-cemented, tight vault of brickwork; or, finally, into a flush-tank, to be disposed of on the ground by surface irrigation, or below the ground by the subsurface-irrigation system.

So far as the arrangement of the *inside* plumbing work is concerned, it does not make any material difference which of the above systems of getting rid of the wastewater from habitations is available.*

* It is not intended in this volume to discuss the merits and faults of these different methods of sewage disposal. For a full discussion of the latter, see the author's book, "*The Disposal of Household Wastes*," No. 97 in Van Nostrand's Science Series.

Under all circumstances the three cardinal objects to be fulfilled by a perfect system of house-drainage are :

1. To remove from the inside of the dwelling as quickly as possible all liquid and semi-liquid wastes, whether it be the soapy discharge from wash-bowls, bath-tubs, and laundry-tubs, or the vegetable refuse from the scullery-sink, the greasy matter from kitchen and pantry sinks, or the foul discharges from slop-sinks, urinals, and water-closets.

2. To prevent the foul gases originating from the decomposition of the above matters in the soil and waste pipes, the drain, sewer, cesspool, or flush-tank from returning through the same channels into our dwellings.

3. To oxidize, dilute, and thus render innocuous by a copious flushing with air the foul gases due to the possible putrefaction of waste matters within the house-drains, soil and waste pipes, at the same time properly protecting all outlets of fixtures from the entrance of these gases.

DRAINS OUTSIDE OF THE HOUSE.

The house-drain is the means for conveying the sewage from the dwelling. Its proper material is a question of great importance. Outside of the dwelling it may be constructed of vitrified pipe, circular in shape, which is superior to cement pipe.

Iron pipe for outside drains is preferable in made ground, or in quicksand, also where trees are near the line of the drain, and where the drain must necessarily pass near a well furnishing water for the household.

Neither brick channels nor wooden conduits should be used as house-drains. Only strong, hard, well-burnt, vitrified pipe, free from cracks or other defects, should be used. Four-inch pipes and those of smaller size are especially liable to warping, and should be carefully inspected and selected. The interior of these pipes should be well-glazed and smooth throughout; the pipes should be impervious, true in section, perfectly

straight, and of a uniform thickness. Four-inch pipes should have a thickness of $\frac{1}{4}$ in. to $\frac{1}{2}$ in.; six-inch pipes $\frac{1}{4}$ in. to $\frac{1}{2}$ in.; nine-inch pipes should be not less than $\frac{1}{2}$ inches thick; twelve-inch pipes should be 1 inch thick; fifteen-inch pipes $1\frac{1}{4}$ in., and eighteen-inch pipes should have a thickness of $1\frac{1}{2}$ inches.

The joints of the pipes should receive particular attention. The danger arising from imperfect or leaky joints is twofold, namely, first, the sewage, by soaking into the ground, pollutes the soil and endangers the purity of the water supply in places where houses are dependent on wells and cisterns for water. The ground around and under the house is more and more subject to contamination, and in winter-time, when there is a strong inward draught into houses from fireplaces and stoves, the tainted "ground-air" is thus sucked into our very living and sleeping rooms, often producing severe illness. The second danger resulting from leaky joints is equally patent. The solid matters, carried in suspension in the pipes,

are deprived of a part of their liquid carrier, and thus tend to accumulate and form deposits in the house-drain, which deposits soon undergo decomposition and fill the drains and pipes with noxious gases.

Vitrified pipes are made either with a socket or hub attached to one end of the pipe, or with both ends plain. When socket-pipe is used, special grooves should be cut in the bottom of the trench for the hub, in order to give the pipe a solid bearing on its entire length. The pipes are laid with the socket pointing up grade, the plain or spigot end of one pipe being inserted into the socket of the next. Spigot and socket ends should be concentric. Into the annular space between both a gasket of picked oakum is introduced and firmly rammed by a hand-iron. The remainder of the space is then filled with pure cement, or cement mixed with an equal volume of sand. No lime should be used with the mortar, which should be prepared only in small quantities at a time, to prevent its setting before use.

Particular attention should be given to the bottom part of the joint, where the mortar should be pressed into it with the fingers. If water accumulates in the trench, this should be carefully removed from the grooves before making the joints, and sufficient earth should be thrown into the groove to support the mortar at the bottom of the joint until it has time to harden. The gasket of oakum prevents any cement from projecting into the inside of the drain, and renders the use of a rattan and rag, with which to wipe the inside of joints, unnecessary. Where the sockets are insufficient in depth to permit the use of a gasket, it becomes important to clean the joints of cement projecting at the inside ; but in this case a better device than a rattan with rag tied to it is a strong handle to which is attached a semi-circular disc of wood, of a somewhat smaller radius than the radius of the pipe.

The cylindrical pipe without sockets is preferred by some. The joints, in this case, are made by butting two pipes together and covering them with rings or

collars of unglazed terra-cotta, applying cement to the inside of the collar and to the ends of the pipes.

Some object to the use of cement for drain-pipe joints, claiming that the stiffness of the cement joint after hardening will tend to break the pipes in case of a slight settling. They also maintain that some cements increase considerably in volume when setting, and tend to burst the sockets. They much prefer a ring of puddled clay pressed into the joint and wiped around it, claiming that clay will make a tight and more elastic joint. But in ordinary cases the settling of drain-pipes may be prevented by providing a solid foundation of either gravel, sand, or concrete, or, in very wet ground, boards or piles, as supports to the pipe. In made ground I should recommend the use of iron pipes to prevent leaky joints or breakage of pipes. A good Portland cement will not much increase in volume after setting, and I believe it has been shown that those cements which largely increase their volume often lose their hardness

After some time, and would be, therefore, unfit for any use. While I fully appreciate the advantage of a somewhat elastic joint, I do not think that puddled clay will make as tight a joint as seems desirable for drains carrying foul sewage.

What is known as "Stanford's Improved Pipe-Joint" has been used extensively of late in works of house-drainage in England, and its merits are such as to recommend it, under certain conditions, for use with us. I therefore introduce a brief description: "In sewer work in bad or wet ground, just where a sound joint is most required, the difficulty of making it is the greatest. What is wanted, therefore, is a joint that will entail the least disturbance of the ground, that will not necessitate the absolute drying of the trench bottom, and that will require the minimum of time, skill, and labor in making it. These conditions will be fulfilled in the most complete manner by making the spigot of one pipe to fit mechanically into the socket of another, as in a bored and turned iron pipe joint. Such

a mechanical fit cannot be obtained with stoneware or earthenware pipes, owing to the difficulty of preserving perfect accuracy of form during the process of burning."

"In the Stanford joint tightness is obtained by casting upon the spigot and in the socket of each pipe, by means of moulds prepared for the purpose, rings of a cheap and durable material, which, when put together, fit mechanically into each other, and by making these rings of a spherical form a certain amount of movement or settlement may take place without destroying the accuracy of the joint. In laying these pipes, therefore, all that is necessary is to insert the spigot of one fairly and firmly into the socket of another previously laid, and the joint is complete and perfectly water-tight. A smearing of some kind of grease is frequently found to be of advantage."

Half-socket or access-pipes are sometimes useful where it becomes necessary often to inspect the house-drain. They should be located close to angles, bends,

junction branches, running traps, etc. They are not much used in this country, owing, probably, to the fact that should the main drain run over one-half full, sewage may leak out through the access-pipes into the soil.

Care should be taken to lay the pipes on a firm bed of sand or gravel, and if this is not available a concrete base should be provided in the trench. The pipes should be laid in straight lines ; all changes of direction should be effected by curves, of as large a radius as possible, formed of bent pipes. All branches should join the main under an acute angle, by special Y pieces, for a right-angled junction (by a T branch) tends to form eddies and consequently deposits in the main drain.

In laying drains care should be taken to avoid, as much as possible, trees. The roots of these are frequently found to penetrate and often choke the pipes, and are certainly a dangerous obstruction to the flow in the drain. If the line of the drain must necessarily pass near trees

the use of iron pipes is recommended. The coating of the pipes with coal-tar on their outside, the use of asphaltum for joints, and sometimes the surrounding of the drain with a strong layer of concrete are said to be effectual protections against roots of trees.

I now must speak of the *grade of the drain*, as this is a matter of prime importance. Upon the inclination of a pipe depends the *velocity* of the water flowing through it. If this velocity should be insufficient, deposits will occur, and the drain will in time become choked. Pipes of 4 inches diameter should have a velocity of flow of from 3 to $4\frac{1}{2}$ ft. per second; those of 6 and 9 inches diameter should have a velocity of not less than $2\frac{1}{2}$ to 3 ft. A velocity of 2 ft. per second should be considered the minimum allowable in house-drains. As a general rule the inclination of a house-drain should be as great as attainable, and must be, wherever local conditions will permit, continuous. It is not unfrequently found by uncovering old drains that, in order to save

digging, they are laid very flat, often perfectly level, from the point where they leave the house to nearly their junction with the sewer, at which place they are turned with a steep pitch downwards, and often enter the sewer at its crown. By distributing the whole available fall over the total length of the drain a much better grade would have been secured.

In order to lay a drain with a true grade, especially where the fall is little, a level should be used. The elevation of bottom of pipe, where it leaves the house—at a depth of not less than 3 feet in the New England States, as a protection against frost—should be ascertained, as well as the elevation of the junction with the sewer (or else inlet to cesspool or flush-tank). A profile of the ground along the line of the drain should also be determined by levelling. Thus the proper available fall can be determined, with a little additional trouble, it is true, which, however, will be well repaid by securing a much better quality of the work.

A fall of from 1 in 40 to 1 in 60 is de-

sirable for pipes of 4 or 6 inches diameter, but this cannot always be had. I would consider a grade of 1 in 100 as the least to be given to house-drains, in order to keep them self-cleansing. When laid with such fall, and running full or half-full, a six-inch drain has a velocity of $3\frac{1}{4}$ feet, a four-inch drain a velocity of nearly 3 feet, which is sufficient to carry along such suspended matters as only ought to enter a house-drain. Where the available fall is less than 1 in 100, special flushing apparatus, such as Field's flush-tank, Van Vranken's flush-tank, or Shone's hydraulic siphon-ejector, should be used.

I have thus fully explained the right method of laying drain-pipes, because, even with the best plumbing inside of the house, it is of the greatest importance to have the outside drains of good quality, properly laid, and properly jointed, in order to insure the instant removal of the wastewater, and also to prevent stoppages due to careless or imperfect workmanship.

The next question to be considered is:
What is the proper size for house-drains?

This will, of course, depend to some extent upon the grade of the drain, the size of the house and number of its occupants, the amount of water used per head per day, and finally, unless the rain falling upon the roof is stored in a cistern, upon the amount of rain-fall to be carried off in a certain time. This rain is a most beneficial scourer for drains, and unless the sewage of the dwelling is to be disposed of by irrigation, or the sewers of the town built according to the "separate system," which excludes the rain-fall from the channels carrying sewage, I should strongly advise to deliver it into the same channel which carries away the foul wastes of the habitation. Even with this double purpose in view the house-drain need not be very large, and the closer its size is proportioned to the volume of water it must carry, the more *self-cleansing* will it be.

To illustrate the advantage gained by reducing the size of drains as much as possible, or, in other words, by concentrating

Fig



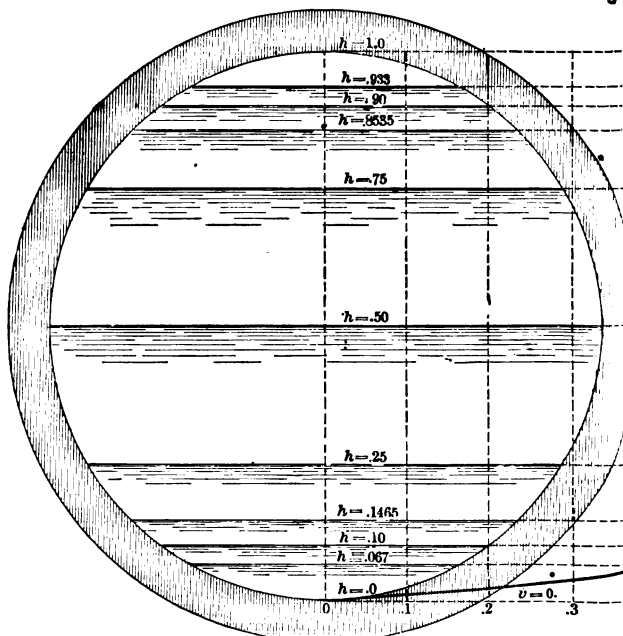


DIAGRAM REPRESENTING CHANGES OF VELOCITY
LAID AT A GIVEN GRADE, AT

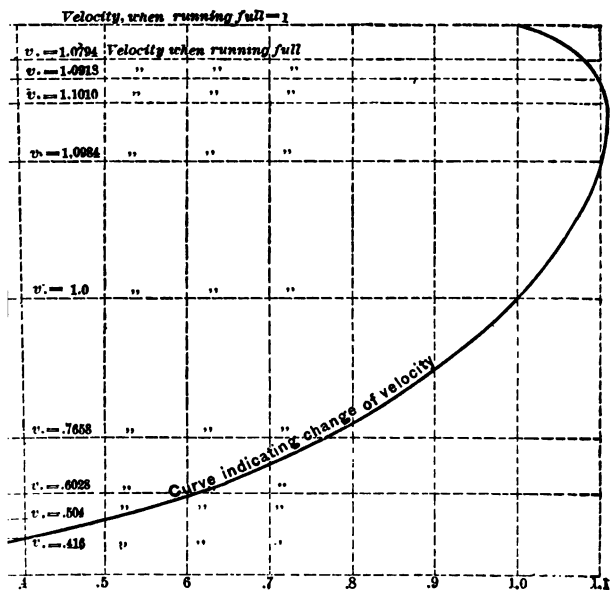

IN A CIRCULAR SEWER OF THE DIAMETER = 1,
DIFFERENT DEPTHS OF FLOW.



the sewage flowing through it, I have constructed the diagram, Fig. 1, which represents for different depths of flow in the same pipe the change of velocity. It is evident from this diagram that the velocity in a pipe greatly diminishes as the depth of the stream flowing through it decreases. The diagram shows that the velocity is the same for drains running full or half-full; it also shows that the maximum velocity of flow occurs, not when the sewer is running full, but when the depth of flow is about .813 of its diameter. The maximum velocity is about 11 per cent. greater than that of a pipe running full or half full. The maximum discharge, however, does not coincide with the maximum velocity. The discharge is a maximum when the depth of flow is about .95 of the diameter. At a depth of flow of one-fourth of the diameter the velocity is only about 77 per cent. of that when running full or half-full, and for lesser depths of flow it diminishes rapidly.

For an ordinary city dwelling a drain four inches in diameter is ample, even in-

cluding all the rain-fall. For a larger lot and residence a six-inch drain is all that is needed, even if the fall should be only 1 in 100. As a general rule, house-drains have been constructed of too large a diameter, and one often meets with the objection that a four-inch pipe will clog up with grease in a short time, or will be obstructed by solid substances. To this, I answer that, in regard to grease, the only safe way, where it is allowed to waste, or in case of large boarding-houses and hotels, is to keep it altogether out of the drain (which can be easily accomplished by a suitable grease-trap). Grease congealing in a drain is sure to clog it, no matter how large it is made. The stoppage would be only a question of time, and nothing could be gained by postponing this inevitable result. In regard to obstructions by solid matters, I may assert that nothing which passes through the strainer of a sink or from the water-closet bowl can possibly obstruct the drain. What may enter through the carelessness of servants, or of the householder, such as "sand,

shavings, sticks, coal, bones, garbage, bottles, spoons, knives, forks, apples, potatoes, hay, shirts, towels, stockings, floor-cloths, broken crockery, etc.," to quote from Mr. J. Herbert Shedd's Report on the Sewerage of Providence, cannot rightfully be expected to be carried away in a drain.* To guard against such obstructions the drain should be made accessible, especially near bends, junctions, and the main trap.

The following useful table, calculated by Robt. Moore, Esq., C.E., from Weisbach's formula for flow of water through open culverts, gives the size and velocity in house-drains, laid at different inclinations, and for various sizes of lots, the rain-fall being 2 inches per hour, and the pipes running $\frac{3}{4}$ full. It should be said that the smallest sizes of the table (below 3 or 4 inches diameter) are given only for the sake of completeness, and not as sizes to be recommended for actual use.

Take, for example, an ordinary city lot of 25×150 ft. = .0861 acre. The rain-fall to be provided for may be 2 inches

* See the author's book on "The Disposal of Household Wastes."

TABLE OF DIAMETERS OF HOUSE-DRAINS
 With various Grades, and for Lots of different sizes, capable of discharging 2 inches of rain per
 hour when running three-fourths full.

CALCULATED BY ROBERT MOORE, C.E., ST. LOUIS, MO.

Dimen- sions of lot in feet.	No. of acres.		Fall 1 per 100.	Fall 1½ per 100.	Fall 2 per 100.	Fall 2½ per 100.	Fall 3 per 100.	Fall 4 per 100.	Fall 5 per 100.
20x150	0.0689	Velocity Diam. Inches	2.69 ¾	3.16 ¾	3.54 ¾	3.87 ¾	4.17 ¾	4.68 ¾	5.11 ¾
25x150	0.0681	Velocity Diam. Inches	2.81 ¾	3.30 ¾	3.71 ¾	4.05 ¾	4.36 ¾	4.89 ¾	5.35 ¾
30x150	0.1083	Velocity Diam. Inches	2.91 4	3.43 ¾	3.84 ¾	4.20 ¾	4.53 ¾	5.07 ¾	5.54 ¾
35x150	0.1205	Velocity Diam. Inches	3.00 4½	3.53 4	3.96 ¾	4.33 ¾	4.66 ¾	5.23 ¾	5.73 ¾
40x150	0.1377	Velocity Diam. Inches	3.09 4½	3.59 4½	4.17 ¾	4.45 ¾	4.79 ¾	5.37 ¾	5.87 ¾
45x150	0.1550	Velocity Diam. Inches	3.16 4½	3.71 4½	4.17 4½	4.56 4	4.90 ¾	5.45 ¾	6.01 ¾

50x150	0.1722	Velocity..... Diam. Inches.....	3.23 5	3.79 4½	4.28 4½	4.85 4½	5.01 4	5.63 3½	6.14 3½
60x150	0.2066	Velocity..... Diam. Inches.....	3.35 5½	3.93 4½	4.41 4½	4.88 4½	5.19 4½	5.83 4	6.37 3½
70x150	0.2410	Velocity..... Diam. Inches.....	3.45 5½	4.06 5½	4.55 4½	4.98 4½	5.35 4½	6.01 4½	6.57 4½
80x150	0.2755	Velocity..... Diam. Inches.....	3.54 6	4.17 5½	4.68 5½	5.11 5	5.50 4½	6.17 4½	6.75 4½
90x150	0.3099	Velocity..... Diam. Inches.....	3.63 6½	4.27 5½	4.79 5½	5.23 5½	5.63 5	6.33 4½	6.91 4½
0 x150	0.3443	Velocity..... Diam. Inches.....	3.71 6½	4.36 6	4.89 5½	5.35 5½	5.75 5½	6.45 5	7.05 4½
125x150	0.4304	Velocity..... Diam. Inches.....	3.87 7½	4.56 6½	5.11 6½	5.59 6	6.01 5½	6.75 5½	7.38 5½
150x150	0.5165	Velocity..... Diam. Inches.....	4.02 7½	4.73 7½	5.30 6½	5.80 6½	6.24 6½	7.00 5½	7.65 5½
175x150	0.6026	Velocity..... Diam. Inches.....	4.14 8½	4.87 7½	5.47 7½	5.99 6½	6.45 6½	7.22 6½	7.89 6
200x150	0.6887	Velocity..... Diam. Inches.....	4.26 8½	5.06 8	5.62 7½	6.14 7½	6.61 6½	7.41 6½	8.10 6½

per hour. Though such storms are not frequent, provision should be made for them in the calculation of the size of house-drains, as the rain falling on roofs and on paved yards reaches the drain very soon after having fallen. A rain-fall of 1 inch per hour per acre very nearly yields 1 cubic foot per second, therefore 2 inches per hour give 2 cubic feet per second per acre. The number of cubic feet of rain from the above lot is therefore $.0861 \times 2 = .1722$ cubic feet per second, or $60 \times .1722 = 10.332$ cubic feet per minute.

We further assume 6 persons to the house, and a consumption of water of 75 gallons per head per diem, which is a very liberal allowance. The waste-water of the house is therefore $6 \times 75 = 450$ gallons per day. If one-half of this amount is estimated to run off in 8 hours, the maximum per hour would be about 28 gallons, or .0624 cubic feet per minute. This quantity is so insignificant compared with the rain-fall that we may safely neglect it.

Should the drain be allowed to run three-quarters full, and have a fall of 1 in

100, a diameter of $3\frac{1}{2}$ inches would suffice, according to above table.

As a second example, I shall take a large lot, say 80×150 feet = .2755 acre. The quantity of rain to be discharged will be, under the same suppositions as above, $2 \times 60 \times .2755$ acres = 33.06 cubic feet per minute. For a drain running $\frac{3}{4}$ full the table gives the necessary diameter = $5\frac{1}{4}$ inches.

For a convenient graphical exhibit of the relation between inclination, size, velocity, and discharge of drains and sewers see the author's "Diagram for Sewer Calculations," 1881, N. Y.

The foregoing explanations have, I believe, sufficiently proved that *no house-drain needs to be larger than six inches* under ordinary circumstances, while in most cases a 4-inch pipe will fully answer the purpose. Any increase of size would tend to be a detriment rather than a benefit.

DRAINS INSIDE OF THE HOUSE.

The earthenware drain should end at

about 5 to 10 feet outside of the foundation-walls of the house. From this point towards the inside of the house the drain should be of iron. The joint between iron drain and earthenware pipe should be made with pure hydraulic cement. Where the iron pipe passes through the wall a relieving arch should be built over it. Settlement of walls often occurs, and is liable to crack the pipe or even break it, unless the above provision is carried out. It is quite evident that, under no circumstances whatever, this part of the house-drain should consist of vitrified pipe.

Important as it is to have the drains outside of the house free from sediment or leakage, it is still more so to have all the pipe-joints inside of the dwelling perfectly air and water tight, for if any defect should exist here sewer-air will leak into the cellar and pervade the whole house. For this reason we sometimes find the cardinal rule laid down that no drains should run under a house, but should be taken outside of it as soon as possible. This is not practicable, as a

general rule, in the case of narrow city lots. Fortunately, however, we can, with perfect safety, run the drains across the basement or cellar-floor of a dwelling, provided we choose the only safe material—*i.e.*, *heavy iron pipes*. A good mechanic is able to make with these a perfectly air and water tight joint. The details of iron pipes will be discussed under the heading of soil and waste pipes.

The best course of the iron drains in the house is along the ceiling of the cellar or along one of the foundation-walls. In other words, wherever practicable, the iron drain ought to be kept *in sight*, in order to enable anybody to detect a leaky joint at occasional inspections. Sometimes fixtures located in the cellar, such as servants' water-closets, laundry-tubs, or sinks, make it necessary to lay the iron drain below the cellar-floor. In this case it may be laid with proper fall in a trench, the sides of which are walled with brick work, and the base of which should consist of a layer of from 4 to 6 inches of concrete, thoroughly rammed and properly

graded. The trench should be made accessible by closing it with movable covers of iron or wood. In no case should a drain below the cellar-floor be left inaccessible. If such a trench is not provided, proper manholes or inspection openings must be placed over all junctions, near traps, bends, and, where the drain is very long, at suitable intervals in the straight run of the drain.

If the drain is carried in sight, I much prefer supporting it by brick piers, where the ground is solid and not liable to "settle," instead of suspending it by iron hangers from the main joists of the floor above. For with the latter arrangement a slight lowering or bending of the beams supporting the iron drain would tend to loosen the joint between the water-closet trap and soil-pipe, as the latter is rigidly connected with the drain, thus creating a source of danger from leakage of sewer-air.

This is especially true of water-closets having a trap above the floor. The danger can be avoided by supporting the water-

closet on a base in rigid connection with the soil-pipe and entirely independent of the floor. This is done in the Durham system of house-drainage (see page 53).

As regards the proper inclination of iron drains in the cellar, the rules given for the outside drains should be observed.

The principles stated for the size of the outside drain apply with equal force to the inside drain. If no leaders enter the drain at its upper end or along its course through the house, a 4-inch pipe is ample for any ordinary-sized dwelling; a 6-inch drain is very seldom required.

As a good precaution for cases of repairs or obstructions of the drain, I would recommend to insert at distances of about 10 or 20 feet along the course of the iron drain, and especially at all changes of direction, Y or T branches, the ends of the branches being closed by a brass thimble caulked into the hub of the Y, and closed by a trap-screw, or else the use of handhole fittings closed with steam-plugs. By opening these and inserting a proper cleaning tool occasional obstructions

through introduction of foreign matters are easily removed.

The course of the main drain in the cellar should be as straight as possible. All changes of direction should be made by easy bends. All junctions with the main drain should be made by Y branches, in order to join the flow of both pipes without causing eddies; no right-angled junction should be made in any horizontal or inclined pipe.

SOIL AND WASTE PIPES.

Into the iron drain the vertical soil and waste pipes enter by means of either quarter bends or by a Y branch with an eighth bend.*

*As regards the exact meaning of the terms drain-pipe, soil-pipe, and waste-pipe, I quote the following clear explanation from the *Sanitary Engineer*. vol. 4: "The drainage system of a house, including the pipes or channels of any kind connecting it with the sewer or cesspool, may be divided into two parts—first, that part which is chiefly outside the house-walls, and, second, that which is generally inside the house. The first is called the *house-drain*, or simply *drain*, and conveys the whole body of waste from the house, including both the discharges from water-closets and urinals, and from baths, basins, sinks, etc., to the sewer or cesspool. The *drain* is practically *horizontal*, and may be considered as terminating either at the house-

The soil and waste pipe system is constructed either in lead or in iron, lead pipe being preferred in England, while in this country cast-iron and wrought-iron pipes are used almost exclusively.

All *cast-iron* pipes used in house-drainage should be thoroughly sound, of a *uniform* thickness throughout, and must allow of ready cutting without splitting. The inside should be truly cylindrical

wall or at the most remote point at which it receives the pipes from any fixtures. The word *drain* is, however, also used in another sense as distinguished from *sewer*. It then means the pipe or channel which conveys only rain or ground water as distinguished from sewage. An example of this kind of drain is the separate system of pipes used to convey only rain-water in some towns, and the tile pipe commonly employed in draining wet lands.

"That part of the house-drainage system which is generally inside the house, including the pipes from the various fixtures, is made up of *soil-pipes* and *waste-pipes*. *Soil-pipes* are those pipes which receive *human excreta* from water-closets and urinals, and they are still called soil-pipes even if they also receive the waste water from baths, basins, etc. On the other hand, *waste-pipes* are those which receive *only* the waste water from these latter, but not the discharge from water-closets and urinals. The *waste-pipes* of a house may either enter the *house-drain* independently or join the *soil-pipe* first and discharge their contents through it into the *drain*. As distinguished from the *drain* the *soil-pipes* and *waste-pipes*, at least for the longer lengths, are generally vertical."

and of smooth finish. The thickness of ordinary (so-called *light*) soil-pipe is about $\frac{1}{8}$ of an inch for 2, 3, and 4-inch pipes, and $\frac{5}{16}$ to $\frac{3}{16}$ of an inch for 5 and 6-inch pipe.

The only merits of this pipe are its light weight, making it easy to handle, and its cheapness. Its greatest objection is its liability to breakage and the frequent splitting of its hubs if a joint is being caulked. Not only for all large public or private buildings, but in every instance where sound and permanent work is expected, *extra heavy* soil-pipe should be used, which is about double as thick as the ordinary pipe.

The weights of extra heavy pipe are about as follows:

2-inch pipe,	5 $\frac{1}{2}$ lbs. per foot.
3-inch pipe,	9 $\frac{1}{2}$ lbs. per foot.
4-inch pipe,	13 lbs. per foot.
5-inch pipe,	17 lbs. per foot.
6-inch pipe,	20 lbs. per foot.

Great care should be exercised by plumbers, plumbing inspectors, architects, and

sanitary engineers in regard to obtaining iron soil-pipe of a *uniform* thickness. The writer has frequently seen specimens of extra heavy soil-pipe in which the pipe was almost as thin as a knife-blade on one side, while it had far more than the required thickness on the other side, the weight being as specified. Drain-pipes should be cast over-end same as gas and water pipes are, not in a lying position, to insure a perfect uniformity in the thickness of the shell. Measuring the thickness of iron drain-pipes by a pair of calipers should be recommended, but I am not aware that it is done at all now.

Iron soil-pipe, the inside of which has been made smooth by dipping the pipe into a hot solution of coal-tar pitch, is superior to ordinary iron pipe. This coating applied to the outside of the pipe forms a good preventive against rust or corrosion.

Where economy is no object, the *en-amelled* pipe may be used, which has a very smooth inside surface, thus securing

to well-flushed soil-pipes the greatest possible cleanliness. Whether iron pipes are coated with coal-tar pitch or enamelled, it is necessary, before applying either of these protective coats, carefully to test each pipe for defects, sand-holes, or cracks, by the hammer test. The coating may effectually cover these defects and render detection difficult.

Cast-iron pipes for drainage purposes are usually manufactured in lengths of five feet, with a hub and a spigot end, or else with double hub. It is, however, very desirable that such pipes should be sold in longer lengths, thus necessitating fewer joints, and therefore less risk from leakage of sewer-air.

The iron-foundries manufacture not only straight soil-pipe, but a large number of fittings, such as quarter bends, eighth bends, sixth bends, sixteenth bends, T branches, Y branches, double Y branches, half Y branches, offsets, single and double hubs, increasers, reducers, etc., to enable the plumber to make all possible connections and lines with iron pipe.

The use of *wrought-iron* for soil-pipes is of a more recent origin, although some architects have for many years made use of plain wrought-iron pipes for vent-pipes, and, in a few instances, for waste-pipes.

In the Durham system of house-drainage wrought-iron is used exclusively for all pipes above ground, whether drain, soil, waste, leader, or air pipes. To prevent corrosion the wrought-iron pipes are immersed, while hot, in a tank of hot liquid asphalt; occasionally the pipes are enamelled on the inside with the white porcelain enamel, or inside and outside with the black enamel of the Providence Enamel Co. It is quite likely that, in case the Bower-Barff rustless process should be more developed, all wrought-iron pipes will be protected by it against corrosion. But even the coating of asphaltum, *if properly put on*, will effectually prevent rusting, certainly as much on wrought-iron as it will on cast-iron pipes.

By using the standard wrought-iron,

lap-welded, coated steam-pipe in works of house-drainage one great desideratum is easily attained—*i.e.*, *tight joints*. For *screw-joints* in steam-pipes can easily be made sufficiently tight to stand a heavy internal pressure, such as, for instance, the pipes are subjected to by testing them with a force-pump and a manometer, or by the water-pressure test. Another advantage which wrought-iron pipe offers is the lesser number of joints required. For steam-pipe comes in lengths up to twenty feet; they can be cut according to measurements so as to run from floor to floor without intermediate joints.

A further point in favor of such pipe is its *uniform* thickness, its great strength, and the fact that every length is tested at the mills by hydraulic pressure.

In the words of the inventor of the system, C. W. Durham, Esq., C.E.: “Wrought-iron pipe is elastic, and *cannot be broken*. Its extreme fitness for the purposes of house-drainage ought to have been recognized years ago. When lengths

are screwed together in a wrought-iron coupling the joint is as strong as any other part of the pipe, and they will stand up vertically from a solid base to the height of any building without lateral support."

. . . "By the use of wrought-iron pipes and screw-joints we construct a 'drainage apparatus' within the building which is gas and water tight as regards the joints; rigid, yet elastic; entirely independent of walls or floors for support, and absolutely *invulnerable*. As a structure it will last as long as any building will stand, *without any outlay for repairs*."

In the use of wrought-iron pipes consists the chief departure of the Durham system of house-drainage from the plumbing work as ordinarily put up. There are other points, however, of equal importance.

In this connection it should be mentioned that for all drains under the ground the Durham system uses cast-iron pipes—not ordinary, nor extra heavy plumbers' pipe, but *heavy gas-pipe*, such as used for *gas-mains* in streets. This comes from the

foundry in lengths of twelve feet, consequently there are fewer joints, and these are *gas* and water tight, as the hubs or bells of such gas-pipe are made very heavy, being designed to withstand considerable knocking of the caulking tools to make a joint which will prevent leakage of illuminating-gas. Of course, the cast-iron pipe is coated by Dr. Angus Smith's process for protection against rust, and is always tested by the application of hydraulic pressure before leaving the foundry.

All fittings used in the Durham system of house-drainage are "special" fittings coated with asphaltum. Those for wrought-iron pipe are entirely different from standard steam-fittings; these latter present interior recesses or depressions which would be apt to collect soil, hair, etc., while the Durham fittings are tapped with a shoulder. When the wrought-iron pipe is screwed home the inside of pipe and fittings are practically even.

In addition to the fact that all upright pipes without large offsets are erected free

from walls or floors without lateral support, it should be mentioned that in this system water-closets are supported, if near a vertical pipe, directly from the soil-pipe, independently of the floor; they are secured to the cast-iron fitting, upon which they rest, by set screws which clamp the flange of the closet, or else by brass clamps. Any settlement of the floor cannot, therefore, affect the integrity of the joints. Water-closets at a distance from the soil-pipe are supported on a branch which connects to the soil-pipe by a flexible joint.

According to one of the best English authorities on plumbing,* the advantages claimed for *lead* pipe are briefly as follows :

1. It is smoother, cleaner, not so corrosive, more durable.
2. It can be bent to suit any position ; it is more compact.
3. Its joints are more to be depended upon than iron-pipe joints.

* S. Stephens Hellyer, "The Plumber and Sanitary Houses," second edition.

4. Urine, being very corrosive, acts more on iron than on lead.

5. Iron pipe rusts on the outside, and painting iron pipes, to prevent it, is expensive, and is generally not done thoroughly at the back of the pipe.

6. Lead branch wastes or traps cannot easily be joined to iron pipe.

7. Iron pipe does not allow caulking joints with lead, therefore cement is used for the joint.

From all this I disagree ; for :

1. Tarred or enamelled iron pipe is fully as smooth as lead pipe, and the iron pipe is thereby well protected from corrosion. Making iron pipes rustless by the Bower-Barff process is likely to prove still more effective.

2. The above-enumerated variety of special fittings enables the plumber readily to adapt his iron pipe to almost any position ; moreover, I do not see why iron pipe should take up a great deal more room than lead pipe of same bore.

3. *Well-caulked* joints of heavy cast-iron pipes, and *well-made screw-joints* in

wrought-iron pipes, are just as sound and trustworthy as wiped joints in lead pipes, and any good mechanic is able to make them.

4. Urine does not corrode an iron soil-pipe, protected by a coal-tar pitch solution or by enamel, more than a lead pipe. Iron made rustless by the Bower-Barff process appears, from recent investigations made in France, to be unaffected by urine.

5. The outside of iron pipe can be efficiently protected from rusting by paint, coal-tar pitch, or enamel.

6. Lead cannot be caulked into iron, but a good plumber always solders a brass ferrule by a wiped joint to the lead pipe (or trap), and caulks the brass ferrule into the hub of the cast-iron pipe; lead pipe is joined to wrought-iron by means of brass screw-nipples.

7. Any one who will take the trouble carefully to examine the joints of iron pipe made by an honest and conscientious plumber will readily admit the possibility of making tight joints with iron pipe. Iron pipe of a sufficient strength

to withstand the knocking occasioned by caulking the lead should, of course, only be used in good plumbing work.

But, while iron pipe is fully equal in all the above respects to lead, it has great advantages over it. "Lead soil-pipes are very heavy, and, therefore, liable to sag and split open, to have holes eaten into them by rats, and have nails driven into them by carpenters, and also to corrode, and they require much greater skill to put up, and involve more expense; therefore the statements of Hellyer prove nothing, although they demonstrate the absurdity of bricking soil-pipes into a wall, and the necessity of so placing them that they are at all times readily accessible for inspection; and also prove, what few people seem to realize, that the drainage system of a house requires periodical testing and inspection just as much as a steam-boiler or piece of machinery." *

Soil-pipes should not, as a rule, be larger than four inches inside diameter;

* See articles on "Plumbing Practice" in the *Sanitary Engineer*, vol. iv.

this size will answer for half a dozen or more water-closets on one vertical stack of pipe. From a late account of the sewerage of the city of Pullman, near Chicago, I learn that several hundred soil-pipes of 3-inch bore were used in the houses, and, "in the case of three-story flats, one pipe frequently has six closets connected to it." Very few instances of stoppage occurred, and these were always "due to obstructions that got in during construction, and never to the use of a small-sized pipe." Such a reduction of the size of soil-pipes will undoubtedly increase the danger of "siphonage of traps," and for this reason it is hardly safe to use soil-pipes smaller than four inches inside diameter.

Waste-pipes of iron should be $1\frac{1}{2}$ or 2 inches in diameter. This is ample for the waste water of one or more bath-tubs and a large number of wash-bowls.

I may here remark that, contrary to the generally entertained opinion, a nearly horizontal or inclined pipe can be kept clean by flushing much easier than a ver-

tical pipe. The flushing water in this latter case soon assumes a whirling motion, and the scattered drops fall downward without exerting much scouring action upon the interior of the pipe. Hence the importance of having the inside of soil and waste pipes as smooth as possible to prevent solid matters from adhering to the sides, where hardly any amount of flushing will take them off.

The arrangement of soil and waste pipes should be as direct as possible. It is desirable that each vertical stack should extend from cellar to roof in a straight line. In planning the plumbing for a dwelling too much care cannot be taken to secure such an arrangement. Every offset, every bend in the pipe, forms an obstruction to its proper flushing, with both water and air. Horizontal soil-pipes are especially objectionable; the water-closets, baths, bowls, and sinks should always be located in groups, and as near to their respective pipes as possible.

It is desirable to run soil-pipes and waste-pipes in sight, so that they may be

accessible. I decidedly condemn the usual plan of architects of building recesses or niches in the walls for pipes. The difficulty of caulking the back part of pipe-joints in this position is very great. Where objection exists to having the pipes in sight, they should be boxed up, but I would always insist upon having the cover fastened by screws, which can be easily removed, and not by nails.

Cast-iron soil and waste pipes should be supported at distances of not over five feet by strong iron hangers or hooks. The wrought-iron soil and waste pipes used lately in the Durham system of house-drainage are erected free from floors or walls, if the pipe runs up in a straight line, by simply providing a strong support at the base of each stack. The pipe is thus rendered entirely independent of any settlement of the building.

Branch pipes should enter the vertical stack by means of a Y or half-Y branch, wherever possible ; a nearly right-angled junction, by a graded T branch, is not objectionable here, as in the case of hori-

zontal or inclined pipes, and is much more easily placed in proper position.

In badly-drained houses, with cheap plumbing work, it is not uncommon to find the joints of pipes made only with sand and paper, or with putty, mortar, cement, sulphur and pitch, and red lead, or other material. All of these joints are worthless and extremely objectionable.

Joints in cast-iron pipe should be made by first inserting a little picked oakum into the socket, care being taken that no part of this gasket enters the pipe. The oakum prevents the molten lead from running into the pipe, where it might form an obstruction to the flow. Molten lead is then poured into the hub, enough quite to fill it. As lead shrinks in cooling, it must afterwards be carefully hammered with a special caulking tool, thus filling the space between spigot and hub, so as to make a perfectly gas and water tight joint. In order to be able at all times to inspect the joints, it is a good practice to leave the caulked lead without a cover of paint, cement, or putty, the

marks of the caulking tool being thus left exposed to view.

A tight joint can also be made with a mixture of sal-ammoniac, iron filings, and sulphur. Such "rust joints," however, are not much used for soil-pipes, but they are frequently adopted for pipes serving as a steam blow-off, in which case caulked lead joints cannot be relied upon. Caulked joints in soil and waste pipes are also affected to some extent by extreme changes of temperature, such as occur if hot and cold water are alternately discharged through a pipe.

Where wrought-iron is used for soil and waste pipes, the joints are screw-joints, and are made tight, as in steam-fitting work, by screwing lengths of pipe into couplings or fittings, as the case may be, by means of a pair of chain pipe-tongs, and using a paste of red lead on the threads.

When all the iron piping in the house is completed the tightness of the joints should be thoroughly tested before connecting the fixtures. The test which is

usually applied is the "water-pressure test." The end of the iron pipe outside of the foundation-walls is tightly closed by a wooden plug, or, better, a disc of india-rubber, which can be squeezed between two iron discs. All branches of soil-pipes and waste-pipes are similarly closed. The pipes are then filled with water, which must stand in them for some time. If the subsequent inspection shows a lowering of the water level, there must be a leak at some joint, or else some defect exists in the iron piping. Of course the leak must be found and repaired, and the test should then be repeated until all joints are water and air tight.

An equally reliable pressure test is made by using a force-pump and a manometer.

For occasional inspections of old plumbing work, and in making sanitary examinations of houses, the "peppermint" and the "smoke" test become useful. The peppermint test is thus described: "When called on to detect a leak in the soil-pipe of a house, the plumber goes at once to

the roof, if the soil-pipe be carried above the roof; if not, he goes to the uppermost water-closet, and pours into one or the other something like an ounce of peppermint, and follows it up with enough water to insure its being carried the full length of the soil-pipe." (The top of soil-pipe should be closed, in order to prevent the oil from escaping into the outside air.)

"Another man then traces the soil-pipe from the bottom throughout its course knowing that if there is any crevice through which sewer-air can enter the pungent odor of the volatile essential oil will be readily perceptible, even in the presence of odors of a baser kind. Great care must be taken not to carry the peppermint about the house, otherwise the smell cannot be traced to the drains."

Captain Douglas Galton describes another test thus: "To test the drains the fumes of ether or of sulphur may be used. If ether is poured down a soil-pipe the fumes will be perceptible in the house at any leaks in the soil-pipe or failures in the traps. Sulphur fumes may be ap-

plied by putting into an opening made in the lowest part of the drain an iron pan containing a few live coals, and throwing one or more handfuls of sulphur upon the coals, and closing up the opening to the drain with clay or otherwise. The fumes will soon be very perceptible at any leaks or rat-holes in the soil-pipe, drains, or traps."

The connections between fixtures and the soil or waste pipes are made with lead pipe, which can easily be handled, and may be bent and cut to suit all possible positions, and requires but few joints. It is manufactured in long coils, of all sizes and of any desired thickness. In good plumbing work only heavy drawn lead pipe should be used, to prevent its being quickly destroyed by the corrosive action of sewer-air. It is desirable that lead pipe should be used as little as possible in *concealed* places, as it may be gnawed by rats or split by nails through carelessness of carpenters.

It is not uncommon to find vertical waste-pipes of lead, as these are easily

placed inside of a partition and covered with plaster. But this cannot be regarded as good practice ; iron for waste-pipes is decidedly to be preferred. Occasionally a smell of sewer-air can be traced, after diligent searching, to a picture-nail driven into a lead vent-pipe concealed behind the plaster of a room.

Vertical lines of lead pipe should be fastened to boards by soldering hard metal tacks to the pipe and screwing the flanges of the tacks to the board. Horizontal lines should be continuously supported on boards between joists.

Lead pipes should be joined by what is called a "wiped joint." The end of one pipe is flanged out so as to form a cup, into which the other pipe, the end of which should previously be sharpened, is introduced. Hot solder is then applied to the joint, and wiped around it so as to form an oval lump.

Where lead pipes are joined to cast-iron pipe, the connection should be effected by means of a brass ferrule of the same bore as the lead pipe, and soldered

to it, wherever space allows, by a wiped joint. The ferrule is introduced into the hub of the iron pipe, and caulked tightly with a gasket of oakum and molten lead.

Where lead pipes join wrought-iron pipes a brass screw-nipple is used, tightly screwed into the soil-pipe fitting, and joined to lead pipe by means of a wiped joint.

The size of lead waste-pipes should be as small as is consistent with the office which they have to perform. Wastes for bath-tubs or laundry-trays should be sufficiently large to empty these vessels in a short time. It is highly desirable that the basin, sink, and wash-tray couplings connecting the fixtures with the waste-pipes should be made with a larger water-way than those at present in the market. A funnel-shaped coupling, the top being wider, would seem advantageous, as in that case a larger quantity of water would be delivered down the waste-pipe, which would thus aid in scouring the trap under the fixture.

The following sizes of waste-pipes for fixtures may be recommended :

	Inches diameter.
For one wash-basin.....	1½-1¾
For a row of wash-basins,	1½-2
For wash-basin overflows.....	1½-1¾
For one bath-tub.....,	1½-2
For bath overflows.....	1½
For a row of bath-tubs, likely to be used at once.....	2-3
For wash-tubs, each tub.....	1½
For a set of tubs.....	2
For kitchen-sinks	1½-2
For pantry-sinks.....	1½-1¾
For slop-sinks.....,	2-3
For one urinal.....	1½
For a row of urinals.....	2

Local conditions—for instance, unusually heavy water-pressure in the supply-pipes—may sometimes demand a deviation from these sizes.

The weight of lead pipe should be about as follows :

1¼ inch pipe.....	2 lbs. per foot.
1½ " "	3 " "
2 " "	5 " "
4 " "	8 " "

ESSENTIAL ELEMENTS OF A SYSTEM OF HOUSE-DRAINAGE.

We have thus far considered only the material, size, general arrangement, and

manner of jointing the drain, soil, and waste pipes in a house. We must now consider what the essential features of the system are to secure to the house perfect immunity from sewer-air. Briefly stated the essential features are :

1. *Extension of all soil and waste pipes through and above the roof.*

2. *Providing a fresh-air inlet in the drain at the foot of the soil and waste pipe system.*

3. *Trapping the main drain outside of the fresh-air inlet, in order entirely to exclude the sewer-air from the house.*

4. *Providing each fixture, as near as possible to it, with a suitable self-cleansing trap, safe against siphonage, back pressure, evaporation, etc.*

5. *Providing vent-pipes to such traps under fixtures as are liable to be emptied by siphonage.*

EXTENSION OF SOIL AND WASTE PIPES.

The *first* requirement asks for a vertical extension of all soil and waste pipes through the roof. This extension affords

a ready outlet for all gases that would otherwise tend to accumulate inside the pipe system. In the case of soil-pipes nothing short of an extension the *full bore* of the pipe will answer this purpose. It has been proposed, of late, to enlarge the soil-pipe from the highest floor to the roof to six inches diameter, in order completely to prevent any stagnation of air in the pipe. Waste-pipes should be enlarged, from the point where they pass through the roof, to four inches diameter, as smaller outlets are liable, in cold climates, to become obstructed by the freezing of condensed vapor. Plumbers sometimes use galvanized sheet-iron or even tin pipes of small diameter for this extension, but this is decidedly bad practice. It should be of the same material as the main soil-pipe, and its joints should be worked with equal care.

To run the upper part of a soil or waste pipe into a chimney-flue is a practice which must be decidedly condemned. Bricks readily absorb sewer-air. There is at times a reversed draught in such flues,

causing sewer-air to escape at open fire-places into the rooms.

The extension of soil and waste pipes should terminate at a distance from any windows, louvred skylights, or ventilating-flues, and at least two feet below the top of the nearest chimney. It is desirable to have this extension as high as possible above the roof, so as well to expose the mouth of pipe to the influence of air-currents. In order to prevent any obstruction of the soil-pipe, plumbers often cover the mouth with a return bend. This, however, is objectionable, as it interferes with proper ventilation. Less bad is the plan of capping the soil-pipe with a suitable fixed cowl, such as, for instance, Emerson's or Wolpert's ventilator. The best plan seems to be to do away entirely with any cover to the soil-pipe mouth. Capt. Douglas Galton, in his book, "Construction of Healthy Dwellings," says in regard to this question: "A tube or shaft with an open top acts best. It is, however, necessary to protect the top, to prevent rain from entering the tube ; but a cover tends

more or less, according to its shape, to delay the current in the tube or shaft." This necessity of covering ventilating-tubes or chimney-tops to protect them from rain does not exist in the case of soil-pipes; these may only want protection against malicious introduction of stones or similar articles. A galvanized iron, copper, or brass wire basket set into the mouth of the soil-pipe will answer this purpose.

There is no doubt that open-mouthed pipes have a better upward ventilation than pipes covered with cowls, if the wind blows horizontally or nearly so. Wolpert, in his "Treatise on Ventilation and Heating," states the average useful effect in per cents. of the velocity of the wind, as derived from a number of experiments, to be :

- 68.6 per cent. for open-mouthed tubes,
- 51.9 per cent. for pipes capped with Wolpert's new cowl,
- 35.8 per cent. for pipes capped with Wolpert's old cowl,

for a horizontal direction of the wind. In

other words, the upward suction in a tube without any cowl is in the average equivalent to over $\frac{1}{3}$ of the force of the wind, blowing over it in a horizontal direction. For pipes capped with Wolpert's new cowl it is only a little more than $\frac{1}{4}$ of the wind force, and for the old cowl it is $\frac{1}{4}$ of it. As an average for other directions of the wind Wolpert finds the upward draught in pipes covered with his new and old cowls to be 51.5 per cent. and 34.5 per cent., respectively, of the wind force.*

The result of an elaborate series of about one hundred experiments upon ventilating cowls, made on seven different days, at different times of the day, and under different conditions of wind and temperature, by Messrs. W. Eassie, Rogers Field, and Douglas Galton, was as follows :

* The current of air in these experiments was created by a powerful fan, the velocity of the current varying from 8 to 31 metres per second (from 17.9 to 69.3 miles per hour), equivalent to high winds and hurricanes respectively. The diameters of the cowls tested varied from 0.787 to 3.937 inches. It is to be regretted that the author did not extend his experiments so as to include much smaller velocities of current. It is very likely that for the latter the percentage of useful effect of cowls would be much smaller.

“After comparing the cowls very carefully with each other, and all of them with a plain, open pipe as the simplest and, in fact, only available standard, the sub-committee find that none of the exhaust-cowls cause a more rapid current of air than prevails in an open pipe under similar conditions, but without any cowl fitted on it. The only use of the cowls, therefore, appears to be to exclude rain from the ventilating-pipes; and as this can be done equally, if not more efficiently, in other and similar ways, without diminishing the rapidity of the current in the open pipe, the sub-committee are unable to recommend the grant of the medal of the Sanitary Institute of Great Britain to any of the exhaust-cowls submitted to them for trial.”

FRESH-AIR INLET.

The *second* requirement calls for a fresh-air inlet or fresh-air pipe. This is no less important than the extension of the soil-pipes through the roof. In order to effect a constant movement and change of

air in the pipes, two openings are required, an outlet and an inlet. The extension of the soil-pipe through the roof provides only an escape for the foul air generated in the soil-pipes and waste-pipes through the decomposition of foul organic matter, clinging to the interior of pipes and lodging in traps under water-closets and fixtures. But in order to oxidize and thus render harmless this matter undergoing putrefaction within the pipes, a constant introduction of fresh air from the outside atmosphere is necessary. As the soil-pipe is warmer in winter-time (being in the constantly-heated house) than the fresh-air pipe located outside of it, an almost continuous upward current in the soil-pipe results. In summer-time this current is only seldom reversed; for as a general rule the top of the soil-pipe is heated by the sun more than the fresh-air pipe near the ground.

There is a second and almost equally important reason for providing a fresh-air inlet wherever the third requirement, the trapping of the drain, has been complied

with. If a water-closet is used or a pail emptied into a slop-sink, the water discharged into the soil-pipe acts like a piston; although it is not likely to fill a 4-inch pipe, it certainly carries the air on its course downward with it by friction. Thus the descending water drives air before it and out through the fresh-air pipe; if this had not been provided it would very likely force the nearest traps under fixtures, and send a puff of sewer-air into the living-rooms. This reversed action of the fresh-air inlet does not occur sufficiently often to warrant the apprehension of any danger in the location of the inlet. Of course it should not be too near under windows of living-rooms or dormitories, nor should it be placed too near the front steps of a city house. A little judgment should be exercised in locating the fresh-air inlet. In cities having between the house and the street a wide parking it is best to build in this a small manhole, at the bottom of which the trap and opening for fresh air are located. The top of the manhole should then

be closed with a cover, having numerous openings so as to permit the outer air to enter the drain freely, and also to prevent as much as possible obstructions by snow or ice in winter-time. For this reason it cannot be recommended to open the fresh-air pipe into a gully in the sidewalk, or in the floor of an area. Equally objectionable is the location of the fresh-air pipe in a coal-slide. It seems best to carry the fresh-air pipe some distance away from the house, and this is always practicable in the case of country houses, where the fresh-air pipe should preferably be hidden from view by shrubbery.

If the main trap is located inside the foundation-walls, the fresh-air pipe should enter the drain just above the trap by a T or Y branch. Only in rare cases does it become necessary to carry the fresh-air pipe vertically upward through the roof. This plan would neither be very efficient, as the difference in temperature of inlet and outlet pipe would be small, nor very economical.

As regards size of the fresh-air pipe, I

would say that a 4-inch opening is generally sufficient. This opening should be protected against obstructions by a strainer, grating, or a wire basket similar to that used for the upper end of soil or waste pipes.

TRAP ON MAIN DRAIN.

Our *third* requirement calls for a trap on the main drain between the sewer, cesspool, or flush-tank and the fresh-air pipe. A *trap* is practically a suitable bend or dip in the pipe, which retains a sufficient quantity of water to prevent the passage of sewer-air.

The opinions of experts as to the advisability of trapping the main drain are divided, some considering the trap necessary, while others claim it should be omitted.

The objections urged against the use of traps in such a position are as follows :

1. They impede the ventilation of the public sewers.
2. They form an obstruction to the flow of the sewage in the house-drain, and are, therefore, the

cause of accumulations of foul matter in the drain, which by its decomposition will generate noxious gases ; also,

8. Foul matters will lodge in the trap.

While the first objection does not strictly belong to the subject of this paper, I will say that it is accepted by most authorities that house-drains and soil-pipes should not be used as ventilators for the street-sewers. In exceptional cases—such as, for instance, where an entirely new sewerage system is built, designed and constructed according to uniform plans, and where not only the construction of sewers but also the house-plumbing is under constant supervision of the engineer and designer of the system *—the trap (and consequently the special fresh-air pipe) may, perhaps, be left out. But I believe that a proper ventilation of sewers can be effectually carried out without ventilating through the houses.†

* For instance, at Memphis, Tenn., and at Hamburg, Dantzic, Frankfort-on-Main, Berlin, Breslau, and other places in Germany.

† See Mr. Edward S. Philbrick's articles on " Ventilation of Sewers," in the *Sanitary Engineer*, vol. 1. See also *Sanitary Engineer*, vol. v., number 12, page 246.

In regard to the second and third objections, I would say that obstructions do not frequently occur if the drain is carefully laid with sufficient and continuous fall to insure a cleansing velocity of the flow. If such an inclination cannot be given to the drain, proper flushing appliances should be used, and these will, by daily or more frequent washings, insure the removal of all matters liable to lodge in the trap. Another most necessary precaution to prevent accumulations in the trap where the fall is very slight may be found in the use of a proper grease-trap, about which I shall speak hereafter.

No amount of care in laying the drain will prevent its obstruction through carelessly introduced articles; these will often lodge in the trap. A cleaning-hole should, therefore, be provided with the trap, and is rarely omitted in good work, or else a Y branch, closed with a trap-screw, should be inserted just a little above the trap.

In vol. iii. of the *Sanitary Engineer* will be found an exhaustive discussion of the advisability of trapping the main

drain. My own opinion, as stated in a communication to that journal, is as follows :

“ If we could have *ideal* sewers, house-drains, and soil-pipes, it might, perhaps, be possible to dispense with such a trap altogether. But since all sewers may have temporary stoppages from some cause, since house-drains may settle or leak, and joints of soil-pipes crack, thus allowing sewage matter to undergo putrefaction and enter the interior of houses, I would in all cases advise the use of a safeguard, consisting in a disconnecting trap and a *well-ventilated soil-pipe*. This latter arrangement is a *conditio sine qua non*, and rather than have a trap *without* ventilation I would advise to have none at all. . . . I would always condemn as unsafe a system of house-drainage in which the public sewers are ventilated through the houses. . . . The work of ventilating public sewers should, in my opinion, be done by the same public authorities who devise the sewer system, and not by the house-holders.”

Leaving aside, however, the case of a house-drain connecting with a public sewer, it seems quite evident that, in the case of a house discharging its sewage into a cesspool, an effective barrier should be imposed to the gases constantly generated in that receiver of all foulness from the household ; and equally so in the case of a flush-tank, which temporarily holds a large amount of fæcal and other refuse matter, which sometimes undergoes decomposition.

The principle of disconnecting each house from the street-sewer was first advocated in England, and its importance becomes most apparent in the case of an epidemic, as by the use of a trap for the main house-drain each house will be isolated, while if all houses have an open connection with a sewer, this and the house-drains may become the channels for spreading the disease from one house to another. It has been said by those not in favor of such disconnection that the air of the house-drain, the soil-pipe, and the branch wastes is much worse than

that of most city sewers, and that consequently no harm could be done by allowing the sewer to breathe through the pipes in the house. Such statement may be true in regard to the sewers of some cities ; in others, sewers, especially if built long ago, are extremely foul. But it seems to me that just where the air of drains and pipes is foul it needs a strong dilution and purification by abundant *fresh air*, which an opening to the outside atmosphere can furnish, but never a direct connection with a sewer.

An open connection of the house-drain with a sewer or cesspool is necessarily based upon the condition that every joint in the house is perfectly tight, and every trap perfectly trustworthy. As plumbing is done in most houses these conditions are only seldom fulfilled. But even where in new work such a standard of design and workmanship has been reached, the work may not remain so for ever. It is, therefore, advisable to use a trap on the main drain as a safeguard, but in addition to this to insist upon occasional in-

spectations. These become a necessity in the case of large buildings, such as hotels, schools, large factories, jails, and almshouses.

Incidentally it should be mentioned that a trap on the drain performs a most useful office during repairs or alterations of the plumbing work, in keeping from the interior of the building the gases from the sewer.

Much, of course, depends upon a proper kind of trap for such disconnection. The old, so-called "cesspool trap" is, next to the pan-closet and the D-trap, the worst device ever proposed in connection with house-drainage. As usually constructed it is of very large size, with square corners, and soon accumulates filth, becoming in a short time in reality a *cesspool*.

The common running-trap, which is manufactured in earthenware as well as in iron, is the simplest and at the same time the best of all forms. It should preferably have a vertical drop of a few inches from the drain to the water-line in

the trap, in order to break up and more easily expel any solids that would tend to lodge in it. The running-trap is often provided with a cleaning and inspection hole at the house side of the water-seal, which serves as a fresh-air inlet when the trap is placed in a manhole outside of the house. In other instances a rain-leader is inserted into the opening of the trap, which thus receives abundant flushing at each rain-fall. The running-trap is sometimes located on the line of the iron drain, just inside of the foundation-wall, so as to be at all times easily accessible. A trap, in iron, with a cleaning-hole and a cover, is then used. Care should be taken to close the cover perfectly air-tight.

In all cases the trap should be so located as not to be liable to freeze in cold climates or exposed localities.

In England various "disconnecting traps" have been used, such as Molesworth's trap, Professor Reynolds's and Dr. Buchanan's disconnectors, Hellyer's Triple-Dip Trap, Pott's Edinburgh "air-chambered sewer-trap," Stiff's "inter-

ceptor" sewer-trap, Weaver's disconnecting-trap, Mansergh's, Buchan's, Banner's, Stidder's, Bavin's traps, the "Eureka" sewer air-trap, and many others.* All of these may have certain merits, but nothing could be better nor cheaper than the common running-trap with fresh-air pipe used almost exclusively in American plumbing.

For those exceptional localities where undue pressure in the sewer from wind blowing into the outlet of the sewer, or from sudden changes of temperature (when exhaust steam is allowed to enter a sewer), or from heavy accumulations of surface-water gorging the sewer, or from the action of the tide in tide-locked sewers, frequently forces the seal of the trap, two running-traps with a proper vent-pipe between them have been recommended. I have myself for some time advocated such an arrangement, which, after further experience, I think complicated and unnecessary. It would require either a pipe

* For illustrations of these see the author's "Hints on the Drainage and Sewerage of Dwellings," New York, 1884. 3d Edition, 1893.

extended through the roof, between the two traps, or else an open shaft (a man-hole) between them, and besides this, in every case, a fresh-air pipe entering the drain above the upper trap.

TRAPPING OF FIXTURES.

The *fourth* essential, as stated above, calls for a suitable trap placed as near as possible under every fixture.

As regards this point I cannot agree with the views of Prof. Osborne Reynolds, of Owens College, Manchester. In his otherwise excellent little book, "Sewer-gas, and How to Keep it out of Houses," after explaining the necessity of a disconnecting-trap on the main drain, and giving particulars about its construction, he continues: "There will then be no need to have traps within the house."

Traps under fixtures become a necessity, as much of the so-called "sewer-gas" is actually generated in the drain and soil pipes of the house. Even the waste from a wash-bowl becomes coated in time with a soapy slime, emitting bad

odors. The trap on the main drain would offer no protection against the foul gases derived from organic matter decomposing within the pipes. We thus see that, while some advocate the trap on the main drain, but no traps under fixtures, others leave out the main trap, but trap the outlets of all fixtures. In my opinion both the trap on the main drain and traps under fixtures are usually necessary.

Traps should be located as close as possible to fixtures, in order to reduce the length of waste-pipe on the house-side of the trap, which is liable to become foul with long use. Probably the best material for traps is lead, as this permits of making a good joint with the lead waste-pipes. As Mr. Hellyer has truly pointed out, the junction of the trap with the waste-pipe is of far more importance than its junction with the fitting, because the former is on the sewer-side of the trap, and, unless properly made, would afford a passage for gases from the waste-pipe system into the rooms.

Whatever kind of trap may be used

under fittings (and there is an endless number of such patented devices), it is of the greatest importance that the trap should be *self-cleansing*; for this reason traps with square corners or large spaces, liable to accumulate sediment, are objectionable. Much depends on a proper size of traps for waste-pipes: the smaller the trap the better will it be scoured. Traps should never be larger in bore than the waste-pipe to which they are attached. It is preferable to have the house-side of the trap funnel-shaped where it joins the fixture, as this increases the scouring action of the flush. I would recommend to choose a trap a quarter or half an inch smaller than the diameter of the waste-pipe to which it is attached. The flushing stream is thus concentrated, and its scouring power increased within the trap, while, on the other hand, a trap an inch larger than the waste-pipe is sure to fill up in time with sediment.

The following rules will serve as a guide :

Traps under water-closets with 4-in. soil-pipe should be $3\frac{1}{2}$ in. to 4 in. diameter.

Traps under wash-basins with $1\frac{1}{2}$ -in. to $1\frac{3}{4}$ -in. waste-pipe should be $1\frac{1}{2}$ in. to $1\frac{3}{4}$ in. diameter.

Traps under bath and foot tubs with $1\frac{1}{2}$ -in. to 2-in. waste-pipes should be $1\frac{1}{2}$ in. diameter.

Traps under laundry-tubs with $1\frac{1}{2}$ -in. to 2-in. waste-pipe should be $1\frac{1}{2}$ in. to 2 in. diameter.

Traps under sinks with $1\frac{1}{2}$ -in. to 2-in. waste-pipe should be $1\frac{1}{2}$ in. to 2 in. diameter.

Traps under slop-sinks with 2-in. to 3-in. waste-pipes should be 2 in. to 3 in. diameter.

As regards the proper dip of traps, I would say that traps under those fittings which receive solids (water-closets) should not have a greater dip than $1\frac{1}{2}$ to 2 inches, because otherwise the solids are not readily removed, and lodge in the trap. For traps of minor wastes a larger dip or "water-seal" is advantageous, as affording a better protection against loss of seal through evaporation, siphonage, or back-pressure.

It is desirable that traps under those fixtures which receive a thorough flushing after use should hold as little water in volume as is consistent with a proper

and effective water-seal. The contents of these traps will thus be more readily changed after each use of the fixture.

It is a good practice to follow the emptying of a bowl, bath-tub, laundry-tub, or sink with some clean water from the faucet, in order to have *clean* water only standing in the trap.

If traps are provided with access-holes or cleaning-screws, these should preferably be arranged below the water-line in the trap.

Traps may be classified, according to the means used for the exclusion of gases, into :

1. *Water-seal traps.*
2. *Mechanical traps.*
3. *Mercury-seal traps.*

The characteristic of all water-seal traps is that they have in their lowest part a bulk of water divided by a dip in the pipe, so as to stand on the house-side as well as on the sewer-side one or several inches higher than the lowest point of the dip, thus making a seal which, under

ordinary circumstances, prevents the passage of gases.

Traps of the second class have, in addition to the water-seal, a mechanical contrivance, such as floats, balls, valves, flaps, etc., to exclude sewer-air.

Traps of the third class have, in addition to a water-seal, a seal of mercury as a protection against sewer-air.

Of water-seal traps I mention the common bell-trap, Antill's trap, Jennings's improved bell-trap, the old-fashioned D-trap, Smeaton's Eclipse trap, the Helmet trap, Hellyer's Mansion trap, Adee's patent stench-traps, Brandeis's Paragon trap, Brandeis's Climax trap, the round trap and the bottle-trap, Connolly's Globe trap, Claughton's trap, the well-known S, P, and $\frac{1}{4}$ -S traps, Hellyer's and Buchan's Anti-D-traps, Pickering Putnam's anti-siphon "Sanitas" trap, and many others.

There is an endless variety of mechanical traps, amongst which I name *floating ball-valve traps*, such as Bower's traps, Putzrath's traps, Knight's trap; *gravi-*

ty-valve traps, such as Cudell's trap, Garland's trap, Buchan's trap, Waring's trap, Turner's trap, Jennings's trap, Ben-nor's siphon-trap, Randolph's trap ; *flap-valve traps*, such as Pietsch's stench-trap, Clement's trap, Stidder's trap, Barrett's trap, etc.

Of *mercury-seal traps* I mention Nicholson's mercury-seal trap, Spratt's mercury-seal trap, Cohen's mercury-seal trap, Edwards's "metallic-bar" trap, and others.*

The bell-trap, A, Fig. 2, is objectionable on account of insufficient water-seal and improper shape. It is frequently found at the outlet of sinks and yard gullies, and, having in its upper part a movable strainer, the latter is often lifted by servants or thoughtless persons, and then the gases from the drain-pipe freely enter the house.

Antill's trap, B, avoids this defect, having a *fixed* strainer, but is objection-

* For illustrations and descriptions of many of these traps the reader is referred to the author's work, "Hints on the Drainage and Sewerage of Dwellings." 3d Edition. New York, 1893. Wm. T. Comstock, Publisher.

able on account of shape and small water-seal.

The D-trap, C, and the bottle or pot trap, D, constitute small cesspools; they violate the principle that a trap ought to be self-cleansing. The D-trap accumulates dirt and grease in the upper corner, which receives no scouring from the water passing through the trap; and the bottle-trap often chokes up, as shown at E. A pot-trap of improved shape is shown at F, which may keep cleaner on account of its round bottom.






Adeé's trap, G, is little better in this respect, though it has this to recommend it: that it is not so easily siphoned, having a large air-space above the water, and a large body of water in the trap. This is also true of the round trap when new and clean; when choked with grease, as shown at E, it is as much liable to siphonage as the S-trap.

The Climax trap, H, has a large dip and a round cup at its bottom, which is removable for cleaning purposes. Its resistance to siphonage is not greater than

that of any of the other traps, or that of the common S-trap with same depth of water-seal.

The P-trap, I, and S-trap, J, are shaped so as to be perfectly self-cleansing when adapted in size to their waste-pipes. They are of uniform diameter throughout, and have no nooks or corners to accumulate dirt. The old hand-made S-traps with seams have been superseded by lead traps cast in a mould. Much better than hand-made and cast traps are the drawn lead traps, known as "Du Bois" traps, made by hydraulic pressure, same as lead pipe, and, therefore, free from sand-holes, flaws, or other defects. As regards cleanliness, S-traps are undoubtedly superior to all other traps of which I have knowledge. They cannot, however, be relied upon to exclude sewer-air, as their water-seal is frequently destroyed either by siphonage or by evaporation. They are shown in Fig. 2, I and J, with a vent-pipe attached at the highest bend of the trap on the sewer-side of the seal. The object of this vent-pipe is to prevent



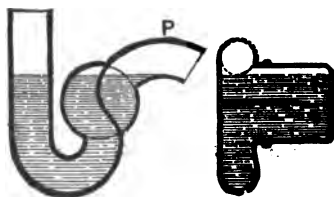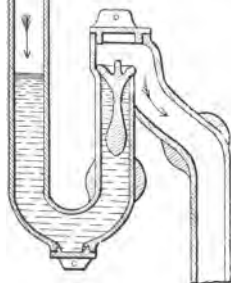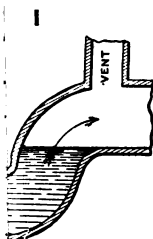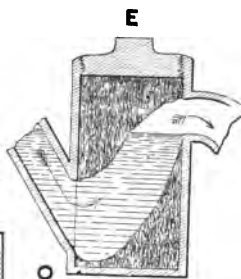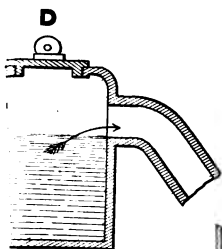

siphonage, as will be explained hereafter.

Putnam's anti-siphoning "Sanitas" trap, shown in two sections at P, Fig. 2, is a recently-devised water-seal trap of unusual shape and construction, which was designed by Mr. J. Pickering Putnam, architect, of Boston, to answer the following requirements of a trap :

1. The seal to be a water-seal without additional mechanical seal.

2. The trap to be *self-scouring*.

3. The trap to be capable of resisting the severest tests of *siphonage*, *momentum*, and *back-pressure* that can ever possibly be brought to bear upon it in plumbing, and this without the aid of special ventilation.

4. The trap to contain sufficient depth of water to be practically safe against *evaporation*.

- 5, 6, and 7. The trap to be *simple*, *economical* to manufacture, and to be made of *durable* material.

8. To be so constructed that its *interior can be inspected* without removing the trap or any part of it.

9, 10. To have a tight-fitting *clean-out cap*, arranged to be removed with perfect ease, and to admit of removing any foreign substance that may have lodged in any part of it. All parts of the clean-out cap to be under water.

11. The trap to be so formed as to offer the *minimum of resistance* to the flow of water.

12. The trap to be independent of the fixture to which it is attached, and to be *easily connected or disconnected*.*

In order to prevent the loss of the seal by the passage of air-currents through it during siphonage, this trap has been given such a form that, "*without increasing the sectional area of any part*, the water shall be entirely reflected back and separated from the air before it reaches the outlet." "While in outward appearance the body resembles a small pot-trap placed horizontally, it has, in principle, the self-scouring form of the S-trap."

Bower's trap is shown at K. This trap

* See articles by J. Pickering Putnam, Esq., on "Sanitary Plumbing" in the *American Architect*, 1883-84.

has a water-chamber into which the waste-pipe from the fixture enters at the centre, and an outlet-pipe on one side. The mouth of the inlet-pipe is sealed by the water in the chamber, but in addition to this a floating ball of india-rubber in the water-chamber is held tightly against the mouth of the inlet-pipe, forming a seal, which, however, depends on the quantity of water in the chamber. The water, in passing through this trap, removes the ball from its seat and rotates the same, thus keeping it clean and free from matters adhering to it. An additional advantage of this trap lies in the ball, which, being compressible, allows the water in the chamber to freeze without danger of the bursting of the cup. Unless the soil-pipe is extended full size through the roof this trap may have its water lowered by siphonage so much that the ball will drop from the mouth of the inlet-pipe; but with proper ventilation of soil and waste-pipes it forms an efficient trap for wash-bowls, tubs, and sinks, although it is not as self-cleansing as the common S-trap.

Waring's check-valve is shown at O. This valve forms a seal by its weight, and the seal is dependent upon the accuracy of the turned seat. Hair and particles of other matters may adhere to it and prevent a tight shutting of the valve.

Cudell's trap, L, and Buchan's trap, M, are constructed much upon the same principle, but have a heavy metallic ball instead of a conical-shaped valve. This ball may keep cleaner by being revolved, but in this case, as above, the tightness of the seal will depend upon the accuracy of turning the seat.

Nicholson's mercury-seal trap, N, has an inverted porcelain cup inside of its cylinder, the edge of which rests on mercury, forming a tight seal. The cup is lifted at each discharge by the force of the water entering at the bottom of the cylinder ; after all water has passed from the basin the cup falls back in its place. This trap is generally made in earthenware with brass couplings ; it is therefore a more expensive trap, but the mercury

seal very efficiently prevents the entrance of sewer-air, even if the water in the cylinder should be removed by siphonage or evaporation.

VENTING OF TRAPS AND TRAP SIPHONAGE.

The *fifth* requirement asks for a proper vent-pipe for such traps under fixtures as may otherwise be siphoned. This siphonage constitutes in many cases a danger, especially so with S-traps. Traps may be siphoned under the following conditions:

1. Traps with an easy bend, on a rather steep line of waste-pipe, and with small depth of seal, are liable to empty themselves by the momentum of the water rushing from the fitting through them. The air in the upper bend of the trap is expelled and replaced by water, which causes the trap to act as a siphon. When the fixture has discharged all its water, and air breaks the siphon, the water in its inner limb will partly drop back into the trap; but in case of a small dip it would be insufficient to seal the trap.

Unless a slow after-flush takes place the trap remains unsealed.

2. Traps under fixtures may be siphoned by a flow of water coming from another fixture on the same branch waste-pipe.

3. Traps may be siphoned, by a discharge of a water-closet, a tub, or a pail of water poured into a slop-sink, into the main soil-pipe, to which the branch waste of the trap is connected.

To guard against the *first* danger the dip or water-seal of the trap should be as great as possible. A special vent-pipe attached to the highest part of the bend in the trap on the sewer-side of the water-seal will prevent the self-siphonage, otherwise a mechanical or a non-siphoning trap should be used.

To guard against the *second* danger the trap of each fixture may be vented ; if this cannot be done a non-siphoning trap should be used. Wherever possible each fixture should discharge independently into the soil-pipe, thus reducing the danger from siphonage to cases 1 and 3.

The *third* danger from siphonage by a discharge into the main soil-pipe, either above or below the point where the waste from the trap enters it, will in some cases be sufficiently prevented by the complete and thorough ventilation of the soil-pipe. In other cases the venting of the trap becomes necessary. In many cases, however, a non-siphoning trap may safely be used.

Where a number of water-closets discharge into the same inclined branch of a soil-pipe the air-vent to the water-closet trap becomes necessary, especially so with water-closets discharging quickly a large body of water, such as the various patterns of the plunger-closets (Zane, Demarest, Jennings) and some of the "wash-out" closets.

Where slop-hoppers are trapped by an S-trap this must be properly guarded against siphonage, as the trap is very likely to lose its seal from the momentum of the water rushing through it each time a pail of slops is quickly emptied into the sink.

The material used for air-pipes is lead, wrought-iron, or cast-iron. The short

branches from the crown of the traps to the vertical air-pipe stack are generally run with lead pipe, as this allows of a more ready connection with lead traps. All main vertical and horizontal lines of air-pipe of two or more inches diameter should be run with *heavy* cast-iron or wrought-iron pipe, and its joints made thoroughly tight. It is a mistake, frequently made, to use inferior material for such air-pipes. They are invariably filled with more or less foul air; their joints should, therefore, be as tight as those of soil and waste pipes. Care should be taken to lay these air-pipes with a slight inclination, in order to prevent accumulation of water from condensation in the pipes. Vent-pipes for fixtures on different floors may be joined, if convenient, and may enter the soil-pipe above the highest fixture. But it is preferable to run them to a main vent-pipe of lead, or better of iron, which goes through the roof independently. Where this passes through the roof it must be enlarged to four inches diameter, as it might, if of

smaller size, be obstructed by ice in winter-time. It should not be covered at the top with any kind of ventilator. The diameter of the vent-pipe should never be less than that of the trap, except for water-closet traps, where it should be two inches in diameter; but in the case of two or more water-closets it should be three inches, and sometimes even larger, especially for high buildings and for long lengths of pipe.

It is always costly and often very inconvenient to run vent-pipes to the roof. The plumbing work is greatly complicated, and the number of joints which may leak sewer-air greatly increased by trap ventilation. There is also danger that the vent-pipes for traps under tubs, sinks, and bowls may stop up with soapsuds or grease, in which case they would cease to act properly. The continuous current of air in the vent-pipe, in passing over the water in the trap, undoubtedly increases its evaporation.* Finally it becomes neces-

* See report to the Boston City Board of Health upon experiments on the evaporation of the water-seal of traps.

sary, in the case of high buildings, largely to increase the diameter of vent-pipes, in order to make up for the loss through friction necessarily occurring with long air-pipes. Therefore, while I consider vent-pipes for traps a necessary evil in many cases, especially for water-closet traps, I am inclined, in other cases, to prefer a good non-siphoning water-seal or mechanical trap, *provided the soil and waste pipe system has ample ventilation*. Such a mechanical or anti-siphoning trap may be used under sinks, tubs, and bowls, but for water-closets and slop-hoppers (if without a strainer) the simple lead water-seal trap with vent attached is the only safe device, except a few water-closets having an unusual depth of seal.

EVAPORATION OF WATER IN TRAPS.

Nothing short of continuous use of the fixtures will prevent evaporation of the water in traps. A large dip is recommended for traps on waste-pipes, to guard against a rapid loss of the seal. When a house remains unoccupied for a long

time, but especially during the hot summer months, special precautions should be taken to prevent sewer-air from entering the rooms and saturating carpets, wall-paper, and furniture. Replacing the water in traps with oil or glycerine may be recommended, or else the use of common rock-salt, which attracts sufficient moisture from the atmosphere to make up for the loss by evaporation.

Where fixtures are likely to remain out of use for some length of time it may be better to use a well-shaped bottle-trap with deep water-seal or a mechanical trap, or else a mercury-seal trap.

Attention is called to the increased rapidity with which evaporation of the water-seal takes place in traps with vent attached, as compared with non-ventilated traps.

It is also true that the ventilation on the house-side of the trap by pipes run to special hot flues must largely increase the evaporation, which is of importance in case fixtures are not continuously used, as in guests' rooms, hotels, etc.

Mr. J. Pickering Putnam, in his article on "Sanitary Plumbing," referring to the much-increased evaporation of the water-seal by trap ventilation, thus truly and forcibly states the dangers incurred :

"Traps are left in disuse, and subject to the danger of loss of seal by evaporation, much oftener than is generally supposed. Thus they are unused in city houses which are left unoccupied during summer ; in country houses which are unoccupied during winter ; in hotels and apartment-houses during the quiet seasons, or at times when they are only partly filled ; in private houses in the spare chambers reserved for visitors ; in business offices between the expiration and renewal of their leases ; in school-houses, and all public and private office-buildings, at times of vacation ; in houses or chambers closed on account of the absence of their owners for travel, sickness, death, or any other cause ; in cases of drought, or 'cut-off' of water-supply for repair of pipes, rebuilding, or other cause ; in extra fixtures in houses, and in other places

and at other times which will, upon reflection, occur to the readers."

LOSS OF WATER-SEAL IN TRAPS THROUGH CAPILLARY ATTRACTION.

The water-seal in traps may also be lost through the effects of siphonage and capillary attraction. If a small amount of lint or a few hairs or jute remain in the body of the trap, with one end lying over the outlet bend, a part of the water in the trap may be drawn off by capillary attraction and the seal destroyed. This action may frequently occur with traps which are not self-cleansing; and it may also happen with self-scouring traps, if they remain for any length of time imperfectly flushed. Entrance of sewer-air and bad odors in bath-rooms may often be due to such cause. Mr. J. Pickering Putnam has lately made numerous careful and valuable experiments on this subject, and his conclusions are that capillary attraction can conduct the water only to a certain distance above the water-level in the trap, the limit of this distance

being $3\frac{1}{4}$ inches. Hence a deep seal is a protection not only against back-pressure, self-siphonage, evaporation, and siphonage, but also against loss of seal by capillary attraction. He further calls attention to the fact that capillary attraction greatly increases the loss by evaporation in ventilated traps.

We think that if traps were constructed as suggested heretofore, without nooks or corners, and so restricted in size as to be thoroughly flushed at each discharge of the fixture, the danger from bits of twine or lint remaining in the trap is not great. To arrange traps under fixtures in such a manner that their water-seal can always be seen is certainly desirable; still, it cannot be expected that the majority of householders should take the trouble to examine each day all traps in the house to see if their water-seal is intact.

ABSORPTION OF GASES BY THE WATER IN TRAPS.

It is well known that water has the property of absorbing gases, and it was

believed that the water in traps would readily absorb sewer-air from the soil-pipe and give it off at the house-side of the trap by evaporation. It has also been asserted that microscopic organisms (germs of disease) floating in gases of decay would pass through the dip of the water-seal and enter the house through the fixtures, and that consequently the water-seal of traps offered no security against the invasion of sewer-air. Dr. Fergus, of Glasgow, Scotland, was the first to call attention to this matter, and made an extensive series of experiments in 1873-74, which led him to condemn as unsafe the system of water-carriage in general, and the trapping of fixtures. The views of sanitarians, based upon Dr. Fergus's experiments, have been much modified by recent experiments of Dr. Carmichael, of Glasgow, by researches of Dr. Frankland in London, Wernich and Naegeli in Germany, Prof. Rafael Pumpelly and Prof. Smyth in Newport, R. I., and others.

Dr. Fergus's experiments were made

with gases in a concentrated condition, and as such are quite as reliable as the more recent experiments. But the latter more closely resemble actual cases, being made by experimenting directly with soil-pipe gases. Referring to what has been said about sewer-air, it will be seen that ammonia, sulphuretted hydrogen, and other gases of decay are present in drains and soil-pipes only in minute quantities. Dr. Carmichael found that the amount of these gases passing through a water-seal trap was so extremely small that no danger could be apprehended. With a thoroughly ventilated system of soil and waste pipes this peril may be taken as insignificant.

Another set of experiments by Dr. Carmichael, made to determine the passage of germs through water, seems to indicate that germs, even if contained in the water of traps, are not liberated from it, as was hitherto supposed, unless the water is violently agitated. Frankland in England, Naegeli in Germany, and Prof. Pumpelly in Newport, R. I., arrived at the same

conclusion, after careful investigations and experiments.

Dr. Carmichael sums up his conclusions by saying : " Water-traps are, therefore, for the purpose for which they are employed—that is, for the exclusion from houses of injurious substances contained in the soil-pipe—perfectly trustworthy. They exclude the soil-pipe atmosphere to such an extent that what escapes through the water is so little in amount and so purified by filtration as to be perfectly harmless; and they exclude entirely all germs and particles, including, without doubt, the specific germs or contagia of disease. . . ."

Further scientific researches will undoubtedly throw more light on this yet little-investigated subject.

TRAPS FORCED BY BACK-PRESSURE.

It has already been explained how traps under fixtures may be forced by back-pressure. This cannot, however, occur with traps under fixtures, if all soil and waste-pipes are properly extended through

- the roof and provided with a fresh-air opening at their foot.

PLUMBING FIXTURES.

The various plumbing fixtures which receive and deliver to the drain the foul wastes of the household will be reviewed here only from a sanitary point of view.*

Plumbing fixtures should be concentrated in a house as much as possible in vertical groups, so as to render necessary only few vertical stacks of soil and waste pipes, and to avoid long horizontal runs of pipes, which are objectionable, between floor-joists—first, because they necessitate the cutting of beams; second, because they prevent the running of waste-pipes with proper fall. Much may be effected, in planning a new building in this direc-

* For more detailed technical descriptions of plumbing appliances I refer to the interesting series of articles on "Modern Plumbing," by T. M. Clark, Esq., in the *American Architect* for 1878, and to the numerous papers on "Plumbing Practice" in the *Sanitary Engineer*; also to the valuable series of papers on "Sanitary Plumbing," by J. Pickering Putnam, Esq., Architect, in the *American Architect*, and to the author's articles on "Domestic Sanitary Appliances," published in *Good Housekeeping*.

tion, by a proper attention of architects to its drainage system.

To householders and persons about to build a house I would give the general advice to have only few plumbing fixtures, as few as they can possibly get along with, but to have these of the very best quality and fitted up in the very best manner. It is much better to have only one water-closet in a house, used constantly by all its occupants, and therefore frequently flushed, than to have half a dozen or more, each used only little. Plumbing fixtures constantly used need not be a menace to health, *if properly arranged and well taken care of*. The danger arises chiefly from apparatus not always used, from fixtures in spare rooms, from plumbing in houses left unoccupied for a great length of time, from unflushed overflow-pipes, and water-seals of traps lost by evaporation.

It has recently been proposed by some, in view of the great danger to health from defective plumbing, to arrange all fixtures in an annex, separated from the

living and sleeping-rooms of the house. This would be not only inconvenient but impracticable in cold climates, unless such annex can be separately heated. All that needs to be done is to remove plumbing fixtures from sleeping-rooms, as sewer-air, entering these through leaky joints or defective traps and fixtures, would be much more dangerous to persons inhaling it during sleep than during hours of active exercise. Wherever possible it is desirable to locate water-closet apartments and slop-sink closets so as to be cut off from the main part of the house. This would involve the separation of the water-closet from the bath-room, such as is common in Europe, but little known in this country, and which arrangement I am inclined to favor, especially in the case of a house with only few plumbing fixtures, occupied by a large family.

If proper regard were paid to the ventilation of rooms containing plumbing fixtures the risk from sewer-air would be infinitely reduced. Unfortunately, it has hitherto been the habit with most

people to care more for the bright look of their fixtures, for decorated china-ware, costly marble slabs, silver-plated faucets, chains, and tubs, for handsomely-finished woodwork around bowls, water-closets, sinks, and tubs, than for the proper trapping and ventilating of such apparatus. Tight woodwork around bowls, tubs, sinks, slop-hoppers, and water-closets, which is the rule in ninety-nine out of every hundred houses, forms harboring-places for vermin; such corners accumulate in time dust, and become exceedingly filthy, damp, and foul-smelling. The encasing of plumbing fixtures should be abandoned for sanitary reasons. Dampness and nasty odors can be prevented by keeping such spaces entirely open, so that a free current of pure air sweeps around the fixtures, the most remote corner of which is thus made accessible to servants for cleaning purposes. But even with good sanitary appliances, properly ventilated and connected with self-cleansing traps and waste-pipes, the householder should not forget that constant care and

watching is imperative, as well as a thorough cleansing and scrubbing as often as once a week, and preferably oftener.

Sufficient hints will be given in the following pages as regards the merits and defects of the various plumbing fixtures, especially the different types of water-closets, to guide the householder in selecting proper and satisfactory appliances. In regard to the selection of a proper water-closet—and, in fact, of every plumbing fixture—a certain embarrassment arises to every householder, in so far as almost every manufacturer naturally thinks his goods the best and safest to be used. Should the householder be unable to make a selection from his own judgment, he should consult an architect or sanitary engineer of reputation. Should he decide from personal opinion and examination of closets, let him bear in mind that closets almost without exception present a good and cleanly appearance in manufacturers' showrooms. The real test of the efficiency of a water-closet is some months' severe use in a frequented place

(which, however, should be under constant supervision of a janitor). In this connection I would advise to choose none but the very best apparatus for the use of the servants. A servants' water-closet is likely to receive a rougher treatment and less cleaning than closets for use of the family; closets with movable machinery (pan, valve, and plunger closets) are especially objectionable, as they frequently get out of order; no cheap kind of hopper should be used. An automatic flushing arrangement for servants' and children's closets will secure better cleanliness than arrangements to be worked by hand.

In speaking of water-closets in general further points of importance for the selection of such apparatus will be mentioned.

The material for plumbing fixtures should be strong and durable, non-absorbent, non-corrosive, and highly smooth on the surface. The arrangement of fixtures should always be as plain and direct as possible. Outlets of all fixtures, except water-closets, must be protected against obstruction by a fixed strainer.

Wherever there are plumbing fixtures there should also be an abundant and never-failing water-supply to insure cleanliness, flushing of fixtures, and a perfect water-seal in the traps. Fixtures should never be located in rooms without proper and ample ventilation. It is preferable to locate water-closets and urinals in well-lighted apartments having windows to the outer air. This insures cleanliness and prevents fouling of fixtures through improper use.

Each fixture connected to the soil or waste pipe system must be provided near its outlet with a suitable and reliable trap. The water in the trap of any kind of plumbing fixture ought to be frequently changed. Stagnation of water or air should be avoided, not only in the drains and vent-pipes, but in the traps as well.

It is useful and, where cost is no objection, advisable to ventilate the house-side of the traps and overflow-pipes by a vent-pipe running into some *special* flue, constantly heated for such purpose. A draught is thus created from the room through the

fixtures into the heated flue, and any gases given off at the house-side of the water-seal may thus be effectually removed. This arrangement, however, should be adopted *only* for fixtures in *constant* use, for it is obvious that the draught from the hot flue will largely increase the evaporation of the water in the trap. As long as fixtures are in constant use the traps will, of course, be always refilled.

BRANCH WASTES FROM FIXTURES.

Fixtures are connected to the soil and waste pipe system by branch wastes carried under the floors. The material used almost exclusively for such branch wastes is lead, and the sizes adapted to different fixtures have already been stated. The connection is very simple in the case of a single fixture, such as a kitchen-sink or a lavatory. The problem becomes more intricate in the case of a set of fixtures, such as are generally located in a bath or dressing room. A bath-room of the better class of city houses contains a water-closet, a bath-tub, and a lavatory,

sometimes also a hip-bath or bidet. It is desirable that each of these fixtures should have a separate connection to the soil-pipe. Such is seldom possible, except when the soil-pipe is located in a special shaft, or where it is possible to conceal the pipe and Y branches by a "false ceiling," as the height of timbers does not generally allow of the placing of more than one Y branch.

A very common but most defective manner of overcoming the difficulty consists in emptying the wastes of bath-tub and bowl into the water-closet trap below its water-line, supposing the water-closet to be of such type as requires a lead trap below the floor. As the waste-pipes have only a slight fall to the trap, the water of the latter, which frequently holds excremental matter, will stand for a long distance back in the waste-pipe and keep it continually foul; the free flow from the bath and bowl is much retarded, the waste being air bound between the water-closet trap and the traps of bowl and bath. Matters are even worse when the

water-closet trap is meant to serve also as trap for the bowl and bath, these having no traps placed under them. The foul water standing back in the waste-pipes will then readily evaporate into the dressing-room and fill it with noxious odors. Moreover, it frequently happens that this trap becomes displaced by tipping over, or that the waste-pipe attached to the trap sags, so as to render the water-seal, which is rarely over an inch in depth, ineffective. It will be readily understood how, under such circumstances, the foul gases of the soil-pipe—especially if this be unventilated, as is so often found in examining old houses—gain an easy access into our rooms. Should the main drain have an untrapped connection to a sewer or cesspool, the gases from these would ascend and permeate the whole building. Such instances of faulty work are by no means rare, and are causes of much preventable headache and sickness. To run such wastes into the water-closet trap above its water-line is equally wrong.

Where the water-closet is some distance

away from the soil-pipe, it is possible to insert between its trap and the junction with the soil-pipe, on the horizontal part of the soil-pipe, two 4" \times 2" Y branches, or else one double Y branch for bath and bowl wastes. Where the water-closet is quite near the soil-pipe, and the connecting-pipe between them is of lead, the wastes from bowl and bath may join the latter beyond the trap. Wherever there is room enough, a 4" \times 2" double Y branch may be inserted vertically below the water-closet branch on the soil-pipe, or else one 4" \times 2" Y for bowl above the water-closet branch, and a 4" \times 2" Y below it for the bath waste. It seems desirable that the iron-works should manufacture a combined Y branch, having a 4-inch opening for the water-closet waste, and one or two 1½ to 2-inch openings for the smaller wastes.*

Long lengths of waste-pipes under floors are objectionable; to avoid them it is sometimes better to provide a special stack

* A Y branch with 4-inch outlet for the water-closet and 2-inch side-outlets for a bath or bowl is manufactured for use in the Durham system of house-drainage.

of 1½ to 2-inch vertical iron waste-pipe near lavatories or baths, where these are remote from the main soil-pipe.

It is customary to provide bath-tubs, wash-bowls, and pantry-sinks with an overflow-pipe, in order to prevent flooding of floors if the outlet of any of these fixtures should be closed by a plug and a faucet carelessly left running. These overflow-pipes should enter the waste between the fixture and its trap, or else they should enter the trap below the water-line, so that the trap serves for both waste and overflow. Overflow-pipes do not receive a thorough flushing, and are liable to become foul with soapsuds, emitting unpleasant odors. For baths, fortunately, the overflow-pipe can be safely dispensed with by using the standing overflow, and the same arrangement of a standing waste may take the place of a chain and plug and overflow-pipe in a pantry sink. Wash-bowls with "patent overflow"—*i.e.*, a concealed channel in the earthenware bowl—have the length of the overflow reduced to a minimum, while tip-up lavatories do

away entirely with the objectionable overflow-pipe. Such is also the case with all forms of washbasins with standing overflow in place of chain and plug.

A set of laundry trays is generally trapped by only one trap, thus leaving a long length of waste-pipe in connection with the air of the room. Such wastes, properly restricted in size, and laid with sufficient inclination, can be kept well flushed, but I prefer to trap each laundry tub separately.

In the case of a set of water-closets or urinals, I consider it imperative to have a separate trap under each fixture.

It is of the utmost importance that the connection between a water-closet and the soil-pipe should be *absolutely tight*. The different types of water-closets are provided at their outlets either with a lead trap under the floor, or else they have a trap of iron or earthenware, as the case may be, above the floor, or they are so-called "trapless" closets, in which case the only water-seal against gases is formed by the water held in the bowl (either by a

valve, pan, or plunger, or by a special shape of the bowl). For water-closets having a lead trap under the floor a brass ferrule is connected by a wiped joint to the end of the trap, and the ferrule is inserted into the hub of the iron soil-pipe and caulked tightly. The house-end of the lead trap is flanged out, and the earthenware or iron horn of the closet inserted into it, resting with its horizontal flange upon a ring of soft india-rubber, or of oakum, saturated with red lead. Wood screws, drawn through the horizontal flange into the floor, tighten the connection.

In the case of trapless closets and such with a trap above the floor, the outlet is generally connected by a lead thimble to the soil-pipe in the same manner as just described for lead traps.

Such a connection is in neither case a perfect one. But in the case of closets with trap under the floor this connection is on the house-side of the trap, and the danger from leakage of sewer-air from the soil-pipe is prevented by the water-

seal. With trapless closets (such as some pan-closets, valve-closets, and plunger-closets), with closets having the trap above the floor (short hopper and some plunger closets), and, finally, with all "wash-out" closets, such a connection is dangerous, and a better joint than is used at present should be devised—such as, for instance, a connection by means of a brass floor flange or plate between water-closet outlet and the lead-pipe connecting with the iron soil-pipe.

In the Durham system of house-drainage water-closets are supported on an iron base or iron trap with flange in direct and rigid connection with the soil-pipe, thus being made entirely independent of floors, and not affected by settling or shrinkage.

SAFE-WASTES.

In order to prevent the flooding of floors and ceilings, fixtures, such as wash-bowls, bath-tubs, water-closets, etc., are often lined with a safe of sheet-lead provided with a waste-pipe. In bad plumbing work these "drip-pipes" are either

connected to the nearest soil or waste pipe—often even without a trap—or else, in the case of water-closet safes, are made to run into the water-closet trap. Such drip-pipes should not be connected at all to the drainage system. They should run vertically downward to the cellar, and discharge either over a sink or terminate at the cellar ceiling. Should it be feared that the drip-pipes might become the channels for leading the cellar air into the upper rooms, their mouths should be closed with paper glued over them, or the pipes should have an upward bend closed by a ball which is prevented from dropping by wire bands.

Lead safes and drip-pipes may be necessary in the case of expensively-decorated ceilings. In all plain work it is much better to dispense with them altogether, substituting for the clumsy and ill-looking safes a water-tight floor of Portland cement, terrazzo or mosaic work, slabs of slate, a marble floor, a floor laid in white Minton tiles, or even a plain, well-jointed, hard-wood floor.

CISTERN OVERFLOW-PIPES.

Both underground cisterns and cisterns in the attic of a house should be provided with an overflow. The usual custom has been to connect this overflow-pipe to the drain, or, if inside a house, to the soil-pipe. In consequence of this most pernicious practice the water was contaminated ; and since water is known to be a carrier of disease germs not less so than the air, sickness and deaths were traced to this faulty arrangement.

No overflow from a cistern for cooking, washing, or drinking water should be connected to any part of the drainage system under any circumstances. Even if properly trapped the danger is not removed, as the water in this trap evaporates, and, as an overflow seldom occurs, no water refills the trap and drain-air passes freely into the tank. This overflow should be made to run into the gutter of the roof wherever this is practicable. In cold climates or in exposed places its outlet should be protected by a flap-valve. If, for some reason, the above course cannot

be followed, the overflow should discharge over an open sink in the basement or cellar. If the cistern is located outside of the house the overflow should be carried to some low point, where it should have an open outlet, protected by a strainer against the entrance of mice or vermin. Blow-offs for water-tanks should be treated similarly to the overflow-pipe.

REFRIGERATOR WASTES.

It is not safe to have a direct connection between a refrigerator waste and drain or soil pipes, for reasons given above for overflows of cisterns. Small refrigerators may waste into a pail, to be removed and emptied periodically.

Wastes from large refrigerators are very apt to become coated in a short time with slime and dirt. They frequently stop up and become offensive, especially if the ice used is very impure.

Such large refrigerators should empty over an open tray. This, in its turn, may have a waste-pipe and a stop-cock to disconnect the tray from the drain-pipe sys-

tem in case the refrigerator is put out of use for a long time. The waste-pipe must also be trapped before joining the nearest soil or drain pipe, and for such wastes a non-siphoning trap or a trap with a mechanical seal is decidedly preferable to the common vented S-trap.

WASH-BASINS.

Little of sanitary importance may be said with regard to wash-basins. If properly fitted with waste-pipes of proper size and material, and efficiently protected by a good trap, they may be considered perfectly safe conveniences in dressing-rooms. Their use in sleeping apartments and in closets or boudoirs near bedrooms without independent ventilation is attended with considerable risk, and the habit of putting stationary lavatories in such rooms, which has become so general nowadays, should be earnestly discouraged, especially for such rooms as are not continually occupied (summer residences, hotels, etc.) This, however, is equally true of any other plumbing fixture.

Wash-basins are usually made in earthenware, this material being the cleanest and best for the purpose. Iron-works manufacture cheap iron washstands, plain, painted, galvanized, or enamelled, which may answer for office use, for prison cells, etc. Copper basins are rarely used.

Earthen bowls are attached by brass basin-clamps to marble slabs, the joint between them being made tight by means of plaster of Paris. To prevent damage to ceilings the bowls are provided with a number of holes near the upper rim, leading to a short horn to which a lead overflow-pipe is attached. Some bowls have a "patent" overflow, a concealed channel in the side of the bowl.

The outlets of bowls are commonly closed by means of india-rubber, brass, or plated plugs, to which a chain is attached. The annoyance caused in lavatories of public places by too frequent breakage of the chain, necessitating the removal of the plug by placing the hands into bowls containing dirty water used by some un-

known person, has led to the invention of a number of valve-wastes for bowls. In most of these— as, for instance, McFarland's and Foley's waste-valves, Moore's non-overflow basin and waste-valve, Maddock's Sanitary Valve wash-basin, Cooper, Jones & Cadbury's secret valve-waste, Bennor's basin-valve, Jennings's pull-up waste-valve, Tylor's quick-waste valve, Boyle's valve, and the Boston waste*— the outlet is closed some distance away from the bowl, thus leaving the bowl in connection with the valve-chamber, which, after each use, remains coated with soap-suds and foul slime. At the next use of the bowl the clean water mingles with this waste matter and becomes soiled even before use. Moreover, the valve-chambers get more or less foul after some use and emit noxious smells into the rooms.

A device which closes the bowl directly at its bottom is "Weaver's waste." By simply touching a knob connected with a

* For illustrations of these valves see the author's "Hints on the Drainage and Sewerage of Dwellings." New York, 3d Edition, 1893. William T. Comstock, Publisher.

lever the stopper in the bottom of the bowl is lifted and held in place. Stidder's discharge-valve for basins is similar to it, and Underhay's registered basin-valve is a flap-valve, closing the bowl at its bottom.

Jennings's "tip-up basins" also do away with chain and plug, and are very convenient for use, as the basin is emptied by simply tilting it, thus discharging its contents into a bowl underneath, which is concentric with the upper basin and to which the trapped waste is attached. It appears at first sight to be a cleanly device, but it gradually accumulates foulness in the lower basin, which receives no special cleansing, and for this reason tip-up basins should only be used where a stricter regard to cleanliness of plumbing fixtures is paid than is usual in most households. The manufacturer has recently improved these tip-up basins by hanging the bowl in such a manner that it can be lifted for cleansing purposes without trouble or mechanical action. An advantage of "tip-up" lavatories consists

in the absence of a special overflow-pipe, which latter is often the cause of annoying odors.

The objection raised against most valve-wastes for bowls—namely, that the walls remain coated with a more or less foul slime after emptying the bowl—is also true in regard to the bowl itself. In private houses these are, of course, well taken care of and daily cleaned ; but in public lavatories, used rapidly in succession, a decided lack of cleanliness is felt. An entirely new departure in wash-bowls, so far as this country is concerned—for it has been manufactured by J. Tylor & Sons and others in England—would be a *flushing-rim lavatory bowl*, supplied with hot and cold water through a nozzle, to which both supply-pipes are attached. By opening either faucet hot or cold water, as desired, would enter the bowl simultaneously at all sides, and give it a thorough downward rinsing flush. The outlet of the bowl may then be closed and the bowl filled with clean water. With such a flushing-rim bowl some of the valve-wastes would

become unobjectionable even to the most fastidious.

The same firm, J. Tylor & Sons, manufactures a back-outlet flushing-rim lavatory, which empties itself quickly, and is, therefore, to some extent self-cleansing.

To make the flushing-rim lavatory perfect in neatness and cleanliness the marble slab to which the bowl is clamped should be supported by handsome brackets of iron, brass, or marble, leaving off all carpentry underneath. The floor under the bowl and the rear wall may be neatly finished in white tiles, or in cement or terrazzo floor, so as to be impervious, thus doing away with the unsightly safe-lining underneath the bowl. If tiling or a terrazzo floor is considered too expensive, a well-finished hard-wood floor should be used.

The arrangement suggested for fitting up flushing-rim lavatories applies equally to common wash-stands. Hitherto more or less tight woodwork has been used to encase the space under wash-bowls in order to hide from view traps, supply and

waste pipes, safe-linings, drip-pipes, etc. Such tight, unventilated spaces with dark corners must necessarily accumulate dirt, and become damp from leaky fixtures, and nasty in general. With first-class plumbing work it is unobjectionable to have lead pipes and traps in sight; leakage is easily detected and cleanliness of servants better enforced where there is plenty of light and air around a wash-basin.*

BATH-TUBS.

Bath-tubs are made of wood, or wood lined with galvanized sheet-iron, or lead, or with zinc or heavy copper—which may be tinned and planished or nickel-plated—of cast-iron with porcelain enamel, and of stoneware. Any of these may be used, the selection depending chiefly upon their cost and upon the personal preference of house-owners. For private residences copper bath-tubs are used more than any others, the weight of the copper being from 16 to 24 oz. per sq. ft. for the best tubs.

* See illustrated suggestions for arranging wash-basins without tight carpentry in the above-quoted book.—W. P. G.

Enamelled-iron tubs are also used extensively, especially in hotels, hospitals, asylums, etc. The porcelain bath-tubs, although perfectly non-absorbent, most cleanly and attractive in appearance, are not in general use, being very expensive, heavy, and often clumsy.

For bathing establishments enamelled iron and copper tubs are not to be recommended, the former losing their enamel by continued use, the latter being easily knocked out of shape and requiring constant attention to keep on them a bright polish. In such places earthenware tubs will answer very well, being easily cleaned, and as they are used rapidly in succession they do not chill the water after the first bath, an objection raised sometimes against marble or porcelain tubs in private houses. Tubs in bathing establishments are often constructed of brickwork, lined with slate, or with white tiles or marble flags.

Many devices have been introduced to do away with the chain and plug arrangement of tubs, which device gets unclean

from soapuds here as in the case of wash-bowls. Such improved bath-wastes are, for instance, Weaver's, McFarland's, Foley's, H. C. Meyer's, Jennings's, Stidder's, Tylor & Sons', and others.* None of these is preferable to the "standing overflow," a most simple and cleanly contrivance, consisting of a tube of same bore with the bath waste-pipe, with a trumpet-shaped mouth at its top, which tube is inserted in place of the plug at the bottom of the bath-tub. It renders a special overflow-pipe unnecessary. The only objection, sometimes made against it, is that it may be in the way while bathing, especially with short, so-called "French" bathtubs. This can, however, be easily avoided by arranging a proper recess at the foot end of the tub.

While it is not my intention to consider the supply of hot and cold water to fixtures in general, nor to discuss the relative merits of ground-cocks, compression-bibbs, and self-closing faucets, I must briefly touch, for reasons that will appear

* Illustrated in the above-quoted book.

hereafter, upon the manner of supplying water to bath-tubs.

If the hot and cold water faucets are placed near the top of the tub, the hot water speedily fills the bath-room with steam (although this can be partly overcome by using a double bath-cock with only one supply-inlet); the noise of the falling water is also sometimes objected to. To avoid this inconvenience the supply has been made to enter the bath, hot and cold water mixed, through the same hole that serves as an outlet for the foul water. Thus soapsuds and filth, coating the waste-pipe and left there from the time the bath was last used, mingle with the clean water. Such a device is unsanitary, and must be utterly condemned.

If it is desirable to avoid the steam or noise in filling bath-tubs, the supply-inlet may be placed at the foot end of the tub, near its bottom. An advantage which this arrangement offers is that servants cannot draw water into pails or pitchers in a bath-tub, a frequent cause of the

chipping off of the enamel of iron tubs and the bruises made in the sides of copper tubs. It appears, however, that such a location of the supply-inlet below the water-line of the bath-tub is in certain cases endangering the purity of the water-supply. This risk always occurs wherever the bath-tub is supplied directly from the rising main and the pressure of water is insufficient to supply at all times the upper stories of city houses. The *American Architect* of 1882, in calling attention to this danger (which danger is well known to exist in the case of water-closets flushed directly from the service-pipe), says as follows :

“Thousands of fixtures are in daily use which are liable to have their supply fail altogether on certain days and hours, or to have it withdrawn temporarily by the opening of a faucet below. All such fixtures are exposed to the worst consequences of intermittent supply. If any person having access to fixtures so placed will try the experiment of opening a faucet at the time of low water the rush of

the air sucked back into the pipe will be plainly heard, or by placing the finger over the mouth of the faucet the inward pressure can be felt. Even where the head is considerable, an artificial lowering may be, and often is, caused by the opening of faucets in the lower stories, which will leave a vacuum in the pipe supplying the upper fixtures, and in such cases substances near the mouth of the upper faucets are liable to be sucked through them into the supply-pipes. We have known the opening of a pantry-cock in a lower story to siphon out in this way and discharge into the pantry-sink the entire contents of a bath in a room above, much to the amazement of its occupant. The bath happened to be fitted with a bottom supply."

This may even happen with a supply from a tank in the attic, and the only means to prevent the occurrence would be to run special lines of hot and cold water from boiler and tank respectively to the bath inlet, or else to place a check-valve in the cold-water supply to the

bath, which remedy, however, cannot be relied upon to work for ever.

There are many varieties of tubs used for personal cleanliness, such as foot-tubs, hip-baths, bidets, shower-baths, etc. They need no further explanation, as the principles for the sanitary construction of bath-tubs apply equally well to them.

Bath-tubs of wood, lined with metal, necessarily require some exterior finishing woodwork, which also serves to hide from view the supply-pipes, the overflow, trap and waste-pipe.

In Europe metal bath-tubs are made sufficiently heavy to stand without a casing. This method of fitting up bath-tubs has much to recommend it from a sanitary point of view ; such bath-tubs stand free on the floor, perfectly accessible and with all pipes in sight, which seems entirely unobjectionable. Iron porcelain-lined bath-tubs are sometimes left without woodwork in our hospitals and asylums, and glazed stoneware tubs are fitted up in handsome residences in the same manner, both giving complete satisfaction.

LAUNDRY-TUBS.

Laundry-tubs are made of various materials, such as wood, wood lined with sheet-lead, enamelled or galvanized cast-iron, cement-stone, slate, soap-stone, or earthenware. Wooden tubs are objectionable, as this material readily absorbs the dirty water and becomes foul, emitting a close odor when not in use. Being alternately wet and dry, they are liable to leak, and will quickly rot. Cement-stone laundry-tubs are cheap, durable, and cleanly. They have no seams, each tub being manufactured in one piece, and therefore will not leak. Galvanized or enamelled iron and soap-stone trays are equally good and much in use. The white crockery or "ceramic" tubs are undoubtedly the neatest, and are always perfectly clean and sweet. They are not subject to wear or leakage, nor do they absorb dirty water, and therefore do not become foul from use. They are, of course, more expensive than any of the others. Woodwork about wash-tubs should be dispensed with as much as possible, and the tubs treated in

this respect as suggested in general for plumbing fixtures.

**KITCHEN AND PANTRY SINKS, LAUNDRY
AND HOUSEMAIDS' SINKS.**

Sinks are made of wood, of wood lined with lead or with copper, of cast iron—which may be painted, galvanized, or enamelled—of wrought-steel, of copper, soap-stone, slate, or earthenware.

For pantry-sinks tinned and planished copper is generally used, being preferable to porcelain or soap-stone sinks, as glass and crockery are not as liable to breakage in them.

For kitchen and laundry sinks soap-stone or iron is much used. Galvanizing or enamelling the iron much improves the appearance of the sinks; but even these protective coatings wear off in time, and then the iron rusts rapidly.

Possibly the protective coating of the black magnetic oxide of iron, offered by subjecting the iron or steel to the Bower-Barff "rustless" process, may effectively protect the surface of iron sinks against

rust. Of late earthenware sinks have been manufactured up to large sizes, and are undoubtedly the cleanest and neatest of all kinds.

Housemaids' sinks, used only to draw water, may be of small size and look most cleanly when manufactured in earthenware, although other materials are often employed.

Sinks should be provided with strong metallic strainers, either open or plug strainers. In both cases the strainer should be securely fastened to the sink, so as *not to be removable* by servants, in order to prevent obstructions of the waste-pipe and trap. With plug strainers it is important that the sink should have an overflow pipe of sufficient capacity to carry off the full supply, in case the supply-cock should be accidentally left open.

In most houses kitchen-sinks are encased in tight woodwork, and consequently a close, damp, and foul smell is often noticeable in the compartment under a sink. This method of fitting up

sinks is decidedly objectionable, and the common practice of using such unventilated, closed spaces under a kitchen-sink for the storage of kitchen utensils, or, what is worse, cleaning-rags, etc., should be strongly condemned. The space underneath a kitchen-sink should be free to light and ventilation, and readily accessible for frequent cleansing. The sink may be supported by brackets, properly fastened to the walls, or it may rest on legs. The floor under the sink and the rear wall may be finished with white Minton tiles, which makes a neat and most cleanly arrangement.

The remarks just made as to the desirability of keeping the spaces under sinks entirely open apply also to pantry-sinks and housemaids' sinks.

GREASE-TRAPS.

Through kitchen and pantry-sinks a large amount of grease, derived from washing dishes, etc., is emptied into the drainage system. This grease proves to be of all the waste matters in the house

the most difficult to deal with. Being dissolved by hot water, it passes the strainer of the sink in a fluid condition, but soon becomes chilled, adheres to the sides of the waste-pipes or drains, lodges in traps, and becomes putrid and offensive.

If the drain inside and outside of the house has a very good pitch, the grease will probably be carried far away from the house before becoming solid. This is more likely to happen where sinks have plugged outlets, as the rush of the water carries the grease very far. The ammonia of urine will remove grease, and thus pipes receiving above the point where the waste from the kitchen or pantry sink enters the cellar-drain a water-closet or urinal discharge are often found to be comparatively free from grease.

But in large houses, or hotels, etc., the grease should not be allowed to enter the house-drain at all; it should be intercepted by a proper grease-trap, placed as near to the sink as the locality may permit.

In a recent paper, read at the meeting of

the Sanitary Institute of Great Britain at Newcastle-upon-Tyne, Mr. W. Eassie, the well-known English engineer, spoke about grease-traps as follows: "Though it must be conceded that fatty matter will congeal and rise to the top of water, and sometimes reach the sewer, yet it must also be admitted that it will not always reach the outfall even with reasonably ample fall of the drain, and that it has a tendency to adhere to the insides of the trap when cool, and to the sides of the drain, in some instances stopping them up. Many suppose that there is no necessity for any special treatment of the grease which is sent into the house-drain from the scullery or kitchen sink, and this is made a hard-and-fast rule. This might be taken as correct were the house to be treated a cottage or small villa, with but a few inmates, say eight or ten in number, because the quantity of produced fats in cookery and washed-off grease from pans and plates would be inconsiderable, and a liberty might be taken in supposing that the bulk of the grease would reach

the sewer, and that it would ride safely in globules to the sewer on the surface of the flushing-water. But the case is varied and a new issue joined when the house to be dealt with might, by courtesy, be termed a *mansion*, and when some ten or a dozen of the family, and a retinue of servants—steward, butler and under-butler, housekeeper, footman, cook, scullery-maids, still-room maid, house-maids, and odd men—are all in residence. The grease introduced into the drain under these conditions is, to say the least, enormous, and its passage into the house-drain is facilitated by a plethora of hot water, and by careless or thoughtless scullery-maids who will not take the trouble to scrape off any superlying grease from the interior of the pans before cleansing them for next usage.

“ Given a six-inch, well-laid drain-pipe, with a clear out-go inside, free from obstructions due to unequal collaring, and even smooth as salt glaze or glass glaze will make it, is it to be supposed that because such a drain will work well in a

small house that it is certain to do so with a residence of any size—a hotel, or club, and the like? I venture to think not, and the difficulty is in no way obviated by enlarging the size of the drain; indeed, it is then very often increased, because there is more surface for the grease to cling to when the wetted perimeter of the pipe is enhanced during a sudden flushing of the drain, intentionally or during a storm. . . .

“If, in all cases, the scullery-sink were near to the outfall into the sewer, for instance, close to the front area, and a properly built disconnection chamber, one might perhaps venture, even in a large establishment, to rely upon the fat-laden water being driven to the sewer. But, unfortunately, in the bulk of houses, and in large mansions especially, the scullery-sink is situated at the far end of the premises, sometimes a hundred feet or more away from the flap in the sewer. And if it be a risk to take when the house is a small one, the family few, and the drain a short one with a splendid fall,

that every particle of grease shall reach the sewer, what shall be said when the drain is a very long one, the gradient bad and cannot be improved, and the residence at a palatial figure? Surely here some provision must be made for grease interception, plus the sand factor."

The grease-trap may be placed either *within* the house, in the basement or directly underneath the sink, or else *outside* the house. The latter arrangement is much the best, provided the distance from the kitchen sink to the grease interceptor is not too great, otherwise the grease would congeal on its way to the interceptor. A circular tank made of bricks, laid in hydraulic cement, should be constructed of dimensions depending somewhat upon the size of the house. It should be large enough to allow the water time to cool. Its overflow-pipe consists of a quarter bend, or better, of a T branch, dipping at least six inches below the water-line, in order not to disturb the grease in the intercepting tank. *This grease-trap should be frequently cleaned and inspected.*

The grease, floating on top of the water, can easily be removed. Efficient ventilation by a large vent-pipe should be provided. Wastes from kitchen and pantry sinks only should discharge into the grease-trap.

If inside of the house and in the basement, the grease-trap may be made of earthenware, of wood lined with heavy lead, or of copper. But such a grease-trap in the basement cannot be recommended.

If directly under the sink it may be made of enamelled or galvanized iron, of copper or of crockery ware. A number of patented sinks have an iron receptacle for grease immediately below and attached to them. It is doubtful whether these tanks under sinks can be made of sufficient size, without becoming clumsy, to allow the grease to cool and congeal. Unless properly attended to—and the kitchen-sink is liable not to be kept perfectly clean by the servants—grease-traps inside of a house constitute, in my opinion, cesspools on a small scale, holding

fatty waste matters which readily become putrid and offensive. If there is no convenient place for an outside grease-trap, better use none at all and trust to the action of the alkalies to "cut" the grease in the pipes. A valuable cleansing agent for pipes, where the use of a grease-trap is omitted, may be found in occasional flushing with hot solutions of common washing-soda, or, better, of potash.

SLOP-SINKS AND SLOP-HOPPERS.

We have hitherto considered only those fixtures which receive foul water unmixed with discharges from the human system. Slop-sinks and slop-hoppers, as well as water-closets and urinals, intended to convey to the drain these foul discharges, are more liable to become filthy outside and inside, unless carefully kept and used.

Slop-hoppers are provided on bedroom floors to enable servants to empty chamber slops into them. They must be flushed, after each use, by a sufficient quantity of clean water from a cistern,

or else at frequent intervals by automatic flush-tanks, to expel the foul water from the trap and to wash the inner sides of the hopper-bowl or sink. Considering the character of the foul water poured into such vessels, an efficient flush is fully as necessary for them as it is for water-closets or urinals.

Slop-sinks are made either of enamelled cast-iron or of earthenware. Their outlet should always be provided with a fixed strainer to prevent any obstruction of the trap or the soil-pipe by carelessly-introduced articles, such as scrubbing-brushes, etc.

Instead of a deep sink a combination of a sink and a hopper, such as Merry's slop-hopper sink, is sometimes used, and, if provided with a strainer, it will answer very well.

An earthen bowl, with improved flushing-rim, placed on top of an iron or lead hopper, will make a cleanly device. The neatest arrangement is a slop-sink, made in one piece of earthenware, enlarged at the top to a square sink, and provided

with a flushing-rim and liberal supply of hot and cold water.

Slop sinks and hoppers should be treated in their external finish similar to kitchen-sinks and water-closets. Air and light should find easy access to them; there should be no tight woodwork around the apparatus with the usual amount of dust and untidiness. The floor may be of white tiles or of cement, and the walls may be laid with tiles or with enamelled bricks.

If water-closets without movable parts (hopper and washout closets) are fitted up without woodwork (except the seat), they may also serve the purpose of a slop-sink, provided the flush is not forgotten after emptying slops. The practice of using pan, valve or plunger closets, to get rid of chamber-slops, is decidedly objectionable. These closets are necessarily encased in woodwork, which becomes impregnated with the foul water, carelessly emptied and often spilled. In the case of valve-closets, the overflow-pipe from the bowl is befouled, and the same is true

of the plunger-chamber and overflow of plunger-closets.

URINALS.

No fixture is so liable to become unclean and foul smelling as a urinal, owing to the rapid decomposition of the urine. A small amount of splashed urine is apt to become quite offensive. Urinals, therefore, require a very liberal amount of flushing-water, running either in a constant stream, or else delivered automatically through flush-tanks at frequent intervals. The material for urinals should be non-absorbent and non-corrosive.

Swinging and lipped urinals have been much used in modern private residences, but I should certainly advise doing away with them entirely, as a properly-constructed water-closet may safely take their place.

For offices, however, and public places, such as hotels, schools, railroad depots, places of amusement, etc., they become a necessity, but should be under constant

supervision of a conscientious janitor, and should receive a thorough cleaning with hot water and soap at least once a week, and preferably oftener. The ventilation of urinal apartments should also, for reasons stated above, receive careful attention.

Three kinds of urinals are in use—viz., single-lipped bowls, fastened along a wall, or in corners, and generally known as “Bedfordshire” urinals; urinal troughs and round urinals.

Lipped urinal bowls are made in earthenware and of enamelled iron; the latter, however, cannot be recommended, as the enamel is apt to scale off, leaving the iron to corrode quickly. A number of porcelain-lipped urinals are frequently placed along a wall, with board, slate, or marble partitions between them. They are sometimes flushed by a stop-cock, to be turned by hand, but this is a very unsatisfactory device. Not only is the opening of the stop-cock frequently neglected, especially in public places, but a flush directly from the supply-pipe will,

in most cases, be insufficient thoroughly to rinse the sides of the urinal. If located in upper stories, the pressure is at times insufficient to fill the pipes, and air, possibly tainted and filled with disease-breeding germs, may be sucked into the supply-pipes on opening the stop-cock.

A much better flush can be obtained by supplying flushing-water to the urinal from a special cistern, worked by chain and handle. For public places, however, where urinals are so largely used, I consider an automatic flushing arrangement as being much superior. This may be accomplished by operating the flushing cistern from the door leading to the urinal; or else a treadle-action flushing apparatus may be used. Both arrangements are liable to get out of order, and preferable to either are siphon-tanks, such as Field's annular siphon-tank, Guinier's siphon-tank, Hyde's flush-tank, Rhodes' flushing cistern, Doulton's automatic flushing-tank, Jennings's flushing-jar, Bolding's self-acting urinal cistern, or tilting tanks, such as McFarland's and others.

Modified forms of the Bedfordshire urinal have recently been manufactured both in England and in this country, which seem to possess many advantages over the common forms, the bowls being shaped so as to hold water (similar to a wash-out closet) to a certain depth. Such improved urinals are, for instance, Stidder's urinal, Tylor & Son's flushout urinal, the Armstrong urinal, and others. In such bowls the urine is immediately diluted with water, and consequently it is much easier to keep the bowl clean by frequent automatic flushing.

Urinal troughs are made of wood lined with lead, or of galvanized or enamelled cast-iron, or else of slate or stone.

Round urinals are adapted to out-of-door location, in parks, etc.; they have a large circular bowl, holding a body of water, with a number of projecting lips around its circumference, separated by suitable slate partitions. A constant stream of water should trickle into trough or round urinals, in order frequently to change the water in the bowl, and to se-

ensure an immediate and thorough dilution of the urine.

A modification of the trough urinal is sometimes constructed as follows: The back wall of the urinal apartment is suitably prepared so as to be impervious and non-absorbing. No material is better than slate or glass for this purpose. A horizontal supply-pipe of copper or brass is fastened to the wall about five feet from the floor, running from one end of the trough to the other. It is provided with a large number of openings, or sometimes with a water-spreader, from which the water is constantly trickling down the walls. The floor should be made equally impervious, and should have a gutter with sufficient fall to carry off the water mixed with urine. The whole floor should be constructed sloping toward this gutter. Suitable stands or gratings are sometimes provided at the stalls, which are separated by marble or slate partitions. The outlet in the gutter must be provided with a strainer to prevent obstructions of the trapped waste-pipe attached to it.

A gutter-urinal, constructed under direction of Mr. Edw. S. Philbrick, C.E., at one of the buildings of the Massachusetts Institute of Technology in Boston, seems to deserve special mention. The aim was to present vertical surfaces covered by flowing water, without, however, increasing the waste which a constant flow would produce. Over each urinal-stall is placed a tank operated by treadle-action. A sprinkling-pipe, perforated with holes, is extended across the back-slab, 4 feet above the floor, and is connected with the cistern by a small pipe. As soon as the urinal is used the tank-valve is opened by treadle-action, and immediately water flows over the whole surface of the slab below the level of the sprinkling-pipe. If the person leaves the flow of water stops at once. The whole of the rear wall and the gutter or trough at the foot of each stall are made of soap-stone. Slabs of slate would have been preferable; but best of all for such rear walls of gutter-urinals is undoubtedly thick glass.

WATER-CLOSETS IN GENERAL.

The most important and useful plumbing fixture in a house is the water closet.

Water-closets should be in all houses that make any pretensions towards convenience. That they are a vast improvement over the old-fashioned, offensive privy-vault in the back-yard everybody will acknowledge. But it is equally true that, unless of a good pattern, properly fitted up, properly used, carefully watched, and frequently cleansed, they may become not only the sources of foul smell, but also the cause of disease.

Leaving aside the question of the pollution of the soil and of well-waters, of which the privy-vault must sooner or later be the cause, it is in itself a nuisance and an abomination. In cold weather and during rain-storms persons are liable not to use it when they ought to, and trouble of the digestive organs is sure to follow, as every physician knows. This is especially the case with females and with delicate children. Sick persons and invalids may suffer severely from exposure

to the weather. Add to this the often unbearable stench emanating in hot weather from such vaults, and it will be readily seen how superior in point of convenience, health, and cleanliness a well-kept indoor water-closet is.

There are other improved devices for receiving fæcal matters, such as earth-closets, ash-closets, tubs, or pails, which are far preferable to privies, and should be recommended wherever water is scarce; but these do not properly belong to my subject, which refers only to the "water-carriage" system.

There is an endless list of water-closets, and each year increases the number of newly invented and patented articles. It is, of course, impossible, nor is it even desirable, that this book should give a complete description of all of them. I shall limit myself to describing the chief features of the various *types* of closets, without mentioning examples of each type.

After reviewing the different types of water-closets in use, we shall speak of the general arrangement of the water-

closet apartment with respect to light and air.

The essential points to be considered in examining water-closets are : *the material and shape of the bowl or vessel receiving fæcal matter ; the apparatus for discharging the contents of the bowl ; the manner of trapping the water-closet ; the manner of flushing the bowl and the trap, and the ventilation of the water-closet.*

The best material for water-closets would be glass, and it is to be hoped that the manufacture of annealed glass may be soon improved sufficiently so as to allow of making glass water-closets as well as other glass plumbing fixtures.

However, good earthenware or glazed stoneware answers well enough the purpose. Iron closet-bowls should be enamelled or porcelain-lined, to prevent roughness from rusting. Iron bowls lined with glass are used with some kinds of closets.

The smoother the surface of a closet-bowl, and the less *surface* a water-closet has *exposed to fouling*, the cleaner and

better will it be. All foul discharges should pass into water as quickly as possible. Thus the fouling of the sides of the vessel will be efficiently prevented and the water will have a tendency to deodorize the excrements. All water-closets holding a large body of water in the bowl (valve and plunger closets, washout-closets, and latrines) have this advantage. In other closets, where the body of water is in the trap (hoppers), this latter should be as near as possible to the bowl (short hoppers are preferable on this account), and the rear side of the vessel should be designed nearly vertical and straight, to prevent foul matter from soiling the bowl before passing into water.

A further requirement is *durability and simplicity of the working apparatus*. The less moving parts a water-closet has the better will it be. We must bear in mind the rough usage to which such fixtures are sometimes subjected, especially in public places. Complicated or delicate mechanisms frequently get out of order or fail to work properly under

children's or servants' hands. Nobody can deny that, so far as this point is concerned, hopper and washout closets are vastly superior to pan, valve, and plunger closets.

Each water-closet should be separated from the drain or soil pipe by an *efficient trap*, placed either above or below the floor, and protected, whenever necessary, against siphonage. I consider one good trap as entirely sufficient, and do not have much faith in the additional water-seal afforded by the water in the pan of a pan-closet, or the water in the bowl of a valve or plunger closet. The copper pan quickly corrodes through the action of sewer-air in the container, and the flap-valve gets leaky in time, while with plunger-closets flushed from a cistern the bowl may lose its water if the outlet is imperfectly closed, as may happen when paper remains clinging to the seat of the plunger. Washout-closets are sometimes provided with a double trap, which is an obstacle to a proper flushing, and which may accumulate filth in the hidden

and usually unventilated space between both traps. I consider a double trap as unnecessary here as on the main house-drain. Washout-closets, the basin of which is shaped so as to form an efficient trap, and short-hopper closets with trap above the floor, should not have a second trap (of either iron or lead) underneath.

The contents of a water-closet trap should be thoroughly changed at each use of the closet, which can be accomplished by an efficient and liberal flush. This leads us to consider the supply of water to such apparatus.

FLUSHING OF WATER-CLOSETS.

A water-closet should have a *copious supply* of water completely to wash at each use the bowl and trap as well as all surfaces coming in contact with foul matter. I do not, however, wish to be understood as favoring *reckless waste*, for it is well known that allowing the water to run continuously through a water-closet cannot be regarded as *flushing*. Two or three gallons properly applied at

each use will cleanse a water-closet more thoroughly than an uninterrupted, trickling flow of water. In order to be efficient the *flushing-water should come down "in a sudden dash."* To make the flush effective the supply-pipe from the cistern to the bowl should be of large diameter, never less than 1 inch, and increasing up to 1½ inches as the head (or height of bottom of cistern over the bowl) diminishes. The force of the flush largely depends upon the shape of the bowl and upon the head of water available in each case. With closet-bowls circular in shape a flush introduced in the direction of the tangent will whirl around its circumference, losing its force without effecting much cleansing. An oval bowl provided with a fan-flush is a vast improvement. Square or "French" bowls with flushing-rim are used occasionally. The best bowls are those provided around the upper edge with a proper "*flushing-rim*," into which the water from the supply-pipe enters simultaneously at all sides, and is directed so as to rush vertically downward, thorough-

ly washing the sides of the closet, and retaining sufficient force to expel the foul contents of the water-closet trap.

To flush a water-closet from the main supply-pipe of the house is decidedly objectionable, especially with closets located in upper stories of city houses. If water is drawn from a faucet in the basement the pressure is often reduced so much as to create a slight vacuum in the upper part of the pipe. If the valve of a water-closet happens to be opened at such times, air, if not foul matter, rushes into the pipe from the bowl; thus the purity of the drinking-water is endangered, while the closet remains without a flush. This risk can be partially avoided by the use of a check-valve on the supply-pipe to the closet-valve. Such check-valves, however, are not always reliable, and often fail to shut properly.

Water-closets should be flushed from flushing-tanks, never directly from the main supply-pipe. Cisterns intended for storage of water to be drawn for drinking and cooking purposes should not be used

for flushing water-closets. In all cases the use of a *special cistern* for each closet or for a group of closets is recommended. Such water-closet cisterns are manufactured in great variety by all water-closet makers.

They are supplied with water either from the rising main or the large tank in the attic, by ball-cocks, made sufficiently strong to withstand the maximum pressure of water. In their simplest form cisterns have only one compartment, with a pipe attached to their bottom, leading to the closet, and with a valve at the outlet of the cistern, operated by a chain and lever. An overflow-pipe is provided to prevent accidents through leakage of the ball-cock. Such tanks are only adapted to hopper-closets, and should not be used where water is scarce, as with them a large waste is likely to occur.

Closets holding water in the bowl (pan, valve, plunger, and washout closets) require an "after-flush" to refill the bowl, and the cisterns should be provided for such purpose with a service-box,

holding a certain quantity of water. The outlet from the cistern to the service-box must be closed by a large-sized valve, in order to secure a quick filling of the service-box.

Cisterns arranged with a view of preventing the waste of water are desirable wherever the water-supply is apt to become scanty during the hottest and coldest months of the year. They have, in this case, three compartments—a large tank, supplied by a ball-cock ; a measuring-cistern, holding the quantity of water fixed for each flush, and a service-box for the after-flush.

Water-waste preventers for hoppers, however, require only two compartments, the receiving-tank and the measuring-cistern.

Water-closet cisterns are operated either by the common pull-up arrangement, a handle being connected to one end of a lever, the fulcrum of which is firmly secured to the floor, while the other end of the lever is connected by a brass safety-chain to the lever operating

the cistern-valve. Such an arrangement is common for pan, valve, and plunger closets. Or else the lever and valve in the cistern are operated directly by pulling down a chain with tassel or ebony handle, which arrangement seems best adapted to hoppers and washout closets (and slop-sinks).

An automatic "seat arrangement"—in other words, the operating of the cistern by a depression of the seat through the weight of the person—seems most suitable for public places, schools, factories, etc., where people using the closet are apt to forget to attend to the flushing. With the seat arrangement cisterns with double compartments and double valves must be used. A service-box is attached to the cistern for closets requiring an after-flush. The depression of the water-closet seat opens the valve from the cistern to the measuring-box, which latter quickly fills; relieving the seat of its weight causes the valve to close, and the outlet of the measuring-box to be opened, allowing the contents of the latter to rush into the water-

closet bowl. As the valve closing the outlet of the measuring-box is of large size (generally 4 inches), the water rushes into the service-box quicker than it passes out through the $1\frac{1}{4}$ or $1\frac{1}{2}$ inch supply-pipe, thus securing to the bowl the after-wash.

A different automatic flushing arrangement, operated from the seat, is the following : A closed iron tank, able to withstand heavy inside pressure, is placed at the usual height above the closet. It is supplied directly from the supply-pipes through a valve, which, ordinarily, is kept closed by a weighted lever. If a pressure is brought on to the seat, a rod, connecting the seat and the lever, opens the valve, and water flows into the vessel, compressing the air contained in the vessel. Relieving the seat of its pressure causes the direct supply-valve to close, while it opens a valve leading from the tank to the closet-bowl. The water rushes down with considerable force, effectually washing bowl and trap of the closet.

The annoyance frequently caused by

the leakage of cistern-valves has led to the invention of other forms of water-closet cisterns.

A flushing-cistern, lately introduced into this country, is very simple and efficient in its action. It contains an annular siphon, very much like Rogers Field's siphon. The inner limb (usually of cast-iron) is firmly fastened in the centre of the cistern, passing through its bottom, where it is connected with the supply-pipe to the closet-bowl. The outer limb, made of copper, with a dome head, allows of a vertical movement around the inner limb, this movement being effected by a lever, working in a slot, one end of which is attached to the outer limb of siphon, while the other carries at its end a counterweight. A chain is attached at that extreme end of the lever holding the siphon, and the cistern is operated by a handle attached to the chain. By suddenly pulling downward the copper limb of the siphon water is forced over the top of the inner limb and the siphon started at once. The outer limb is held down by

the suction until all water is discharged, when the counterweight brings the siphon into its original position. The tank is supplied with water by a ball-cock, rising with the water ; the inner limb serves as overflow-pipe and renders a special pipe for that purpose unnecessary.

Another water-waste-preventing cistern is provided with a common siphon-pipe, the longer limb of which passes through the bottom of cistern and leads to the water-closet bowl. Near the bottom of the cistern a branch pipe leads into the longer limb, reaching to within a few inches from the level of the water in the cistern, where it is closed by a valve. This valve is attached to one end of a lever, the other end of which is operated by a chain with handle attached. To flush the closet the chain is pulled, opening the valve, and thus water flows through the connection-pipe into the longer limb of siphon, causing a partial vacuum, which starts its action. The siphon continues to discharge until the


contents of the cistern are withdrawn, when it completely breaks. The cisterns described do not give (in their usual shape) an after-flush, and are consequently only suitable for hopper-closets, slop-sinks, or urinals.

Among automatic arrangements for flushing water-closets I mention flush-tanks working on the principle of the siphon, or tanks working by gravity, prominent among the latter being McFarland's tilting-tank. They are useful in railroad depots, schools, large factories, places of amusement, and in exposed localities where standing water would be apt to freeze. Such tanks collect a continuous dribble from the supply-cock until filled, their capacity being proportioned to the number of closets, and then discharge the full contents at once into the bowl (see chapter on flushing appliances).

The question of ventilation of water-closets will be referred to later in speaking of the general arrangement of water-closet apartments.

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456
457
458
459
460
461
462
463
464
465
466
467
468
469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487
488
489
490
491
492
493
494
495
496
497
498
499
500
501
502
503
504
505
506
507
508
509
510
511
512
513
514
515
516
517
518
519
520
521
522
523
524
525
526
527
528
529
530
531
532
533
534
535
536
537
538
539
540
541
542
543
544
545
546
547
548
549
550
551
552
553
554
555
556
557
558
559
560
561
562
563
564
565
566
567
568
569
570
571
572
573
574
575
576
577
578
579
580
581
582
583
584
585
586
587
588
589
590
591
592
593
594
595
596
597
598
599
600
601
602
603
604
605
606
607
608
609
610
611
612
613
614
615
616
617
618
619
620
621
622
623
624
625
626
627
628
629
630
631
632
633
634
635
636
637
638
639
640
641
642
643
644
645
646
647
648
649
650
651
652
653
654
655
656
657
658
659
660
661
662
663
664
665
666
667
668
669
670
671
672
673
674
675
676
677
678
679
680
681
682
683
684
685
686
687
688
689
690
691
692
693
694
695
696
697
698
699
700
701
702
703
704
705
706
707
708
709
710
711
712
713
714
715
716
717
718
719
720
721
722
723
724
725
726
727
728
729
730
731
732
733
734
735
736
737
738
739
740
741
742
743
744
745
746
747
748
749
750
751
752
753
754
755
756
757
758
759
760
761
762
763
764
765
766
767
768
769
770
771
772
773
774
775
776
777
778
779
780
781
782
783
784
785
786
787
788
789
790
791
792
793
794
795
796
797
798
799
800
801
802
803
804
805
806
807
808
809
810
811
812
813
814
815
816
817
818
819
820
821
822
823
824
825
826
827
828
829
830
831
832
833
834
835
836
837
838
839
840
841
842
843
844
845
846
847
848
849
850
851
852
853
854
855
856
857
858
859
860
861
862
863
864
865
866
867
868
869
870
871
872
873
874
875
876
877
878
879
880
881
882
883
884
885
886
887
888
889
890
891
892
893
894
895
896
897
898
899
900
901
902
903
904
905
906
907
908
909
910
911
912
913
914
915
916
917
918
919
920
921
922
923
924
925
926
927
928
929
930
931
932
933
934
935
936
937
938
939
940
941
942
943
944
945
946
947
948
949
950
951
952
953
954
955
956
957
958
959
960
961
962
963
964
965
966
967
968
969
970
971
972
973
974
975
976
977
978
979
980
981
982
983
984
985
986
987
988
989
990
991
992
993
994
995
996
997
998
999
1000





Fig

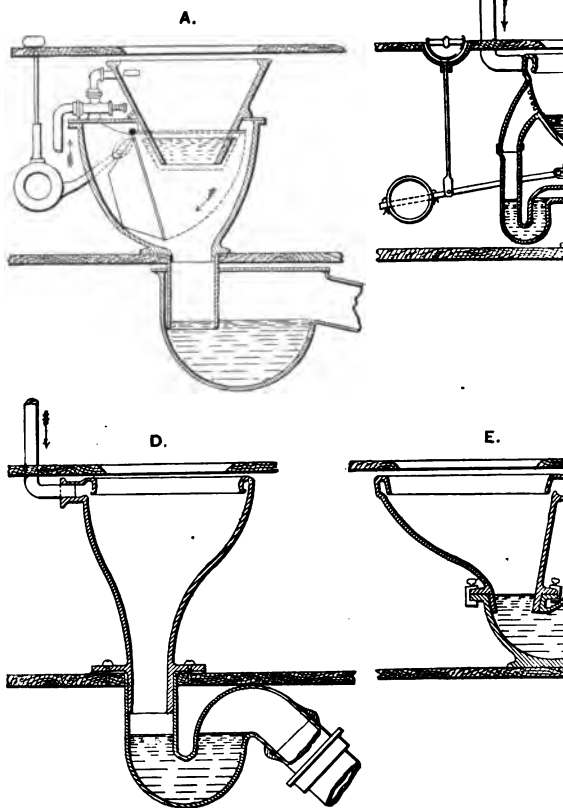

**A Pan-closet.
B Valve-closet.**

**TYPES OF WA
C Plunger
D Long-ho**

g. 3.

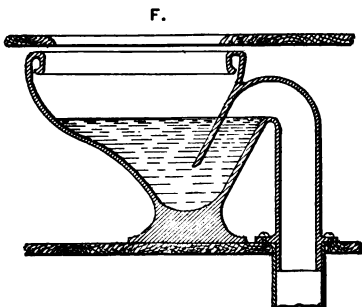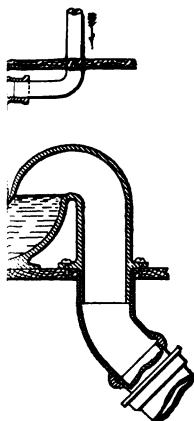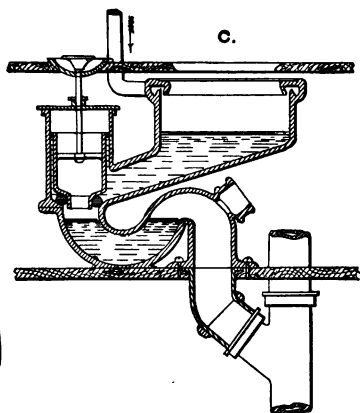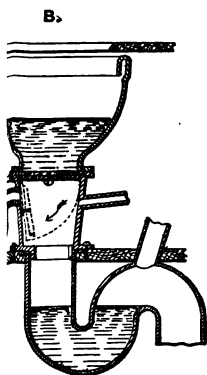

WATER-CLOSETS.

Short-hopper closet.
Hopper closet.

E Short-hopper closet
F Wash-down closet.

A properly trapped, water-closet, provided with a good flush from a special cistern, with a flushing-rim bowl of improved shape, located in a well-ventilated apartment, judiciously used and well taken care of, should be inoffensive to sight or smell.

TYPES OF WATER-CLOSETS.

Bearing in mind the general principles just stated, we will now examine the various types of water-closets. There are six distinct classes, viz.: *pan-closets*, *valve-closets*, *plunger-closets*, *hopper-closets*, *wash-out-closets*, and *trough-closets* (*latrines*).

These types are illustrated in Fig. 3 and Fig. 4. The closets shown, however, are not intended to illustrate any manufacturer's special make; they merely represent the various *types of closets*.

A shows the pan-closet, flushed by a valve, supplied directly from the rising main, its bowl being closed by a pan, held in place by the counterweight, the closet outlet being trapped by a large D-trap under the floor.

B is an illustration of a valve-closet with cistern-flush, the bowl having improved flushing-rim and a special trapped overflow-pipe, and being closed by a flap-valve held in place by the counterweight; the container is provided with an escape-pipe for foul gases, and the S-trap under the floor has a vent-pipe attached to prevent the loss of its water by siphonage.

C is a plunger-closet with improved flushing-rim bowl, supplied with water from a cistern, the outlet of the closet being on one side and closed by a plunger working in a chamber, and to be operated by knob and pull. The trap is above the floor, and provided with a hub to attach a vent-pipe.


While these three closets are operated by more or less complicated machinery, the three following types are free from any movable parts :

D is a long flushing-rim hopper having an S-trap under the floor.

E is a short flushing-rim hopper with S-trap above the floor.

F is a washout-closet, holding water in

Fig. 4.

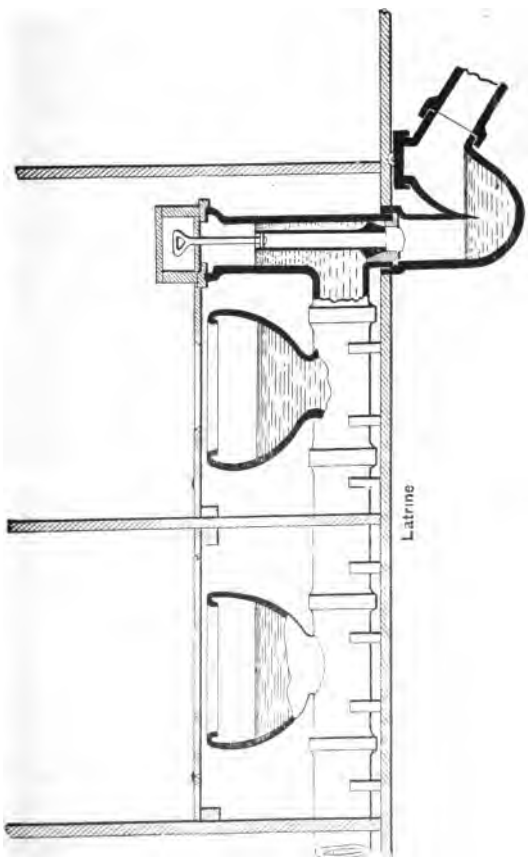

1. The first part of the document discusses the importance of maintaining accurate records of all transactions and activities. It emphasizes that proper record-keeping is essential for transparency and accountability, particularly in the context of public administration and financial management. The text outlines various methods for collecting and organizing data, including the use of standardized forms and digital databases.

2. The second part of the document focuses on the role of technology in improving record-keeping and data management. It highlights the benefits of using modern software solutions, such as cloud storage and data analytics, to streamline processes and reduce the risk of errors. The text also discusses the importance of ensuring that all data is securely stored and protected from unauthorized access.

3. The third part of the document addresses the challenges of implementing and maintaining a robust record-keeping system. It identifies common obstacles, such as limited resources, lack of training, and resistance to change, and provides strategies to overcome these challenges. The text emphasizes the need for ongoing monitoring and evaluation to ensure that the system remains effective and up-to-date.

4. The fourth part of the document discusses the importance of regular audits and reviews to ensure the integrity and accuracy of the records. It outlines the steps involved in conducting an audit, including the selection of auditors, the development of audit plans, and the implementation of corrective actions. The text also highlights the role of external stakeholders, such as regulatory bodies and the public, in ensuring transparency and accountability.

5. The fifth part of the document provides a summary of the key findings and recommendations. It reiterates the importance of maintaining accurate records and the need for continuous improvement. The text concludes by emphasizing the role of leadership and commitment in ensuring the success of any record-keeping initiative.

the basin, which is shaped so as to form a trap.

Fig. 4 shows the general characteristics of a trough-closet (latrine).

In the following pages we will briefly discuss the chief features of each type of closets.

PAN-CLOSETS.

The name "valve" closet given to many closets of this type is an improper one, and leads to confounding these closets with those of the second type. The name is derived from the usual manner of supplying the flushing-water to the closet by joining the supply-pipe to a more or less slow-shutting valve, worked by the pull or handle of the closet. These valves are unreliable, wear out, and leak, especially when subjected to varying pressure from the street-main. Pan-closets may, however, be flushed by a special cistern with lever arrangement, and therefore the above serious defect is not one characteristic to this kind of closets.

The real defects of the pan-closets will

be at once apparent by inspection of Fig. 3A. The excrements are received in a bowl closed at the bottom by a copper pan, holding a few inches of water and forming a seal against the air from the container. The contents of the bowl or pan are discharged by tilting the pan by means of a lever, while a flush is started simultaneously. This pan works in an iron receiver or "container," upon which the bowl is usually fastened with putty. The outlet of the receiver is trapped by the common S-trap, although it is not uncommon to find in old houses a D-trap under the water-closet, a second "container" of foul matters. The foulest part of the pan-closet is the receiver, for the solids gradually accumulate on its sides, as these receive no washing from the flush. The filth soon undergoes decomposition, and the resulting gases, having been confined by the double water-seal of the pan and the trap, are expelled into the apartment at each use of the closet. They also frequently find an exit at the hole through which the spindle tilting the

pan passes. And, finally, the putty-joint between bowl and receiver may become untight and afford means for the passage of sewer-air. The flush is, as a rule, insufficient to clean the bowl; it certainly loses all its force before reaching the container; foulness accumulates here and excremental matter lodges in the trap, as the flush is not strong enough to drive it out through the dip or water-seal.

Some of the enumerated defects may be obviated by enamelling the inside of the cast-iron receiver; by ventilating it by an inlet-pipe for fresh air and a vent-pipe; by having special flushing arrangements for the container; by using a bowl with an improved flushing-rim or a fan-spray, the water for the flush being derived from a special tank. But by all these costly improvements the *only* merit of the pan-closet, its cheapness, is annihilated, and a better water-closet may as well be used. *As long as a house is fitted with pan-closets, of whatever pattern, it may be said not to have reached the standard of safety from a sanitary point of view.*

VALVE-CLOSETS.

The valve-closets (Fig. 3B) are certainly a vast improvement upon the pan-closet. Instead of being closed by a pan, the bottom of the bowl is closed by a flap-valve, from which the closet takes its name. This valve is tightly held in place by a counterweight on a lever, to which the pull is attached. By lifting the pull the valve, which is hinged, is turned downward, and allows the contents of the bowl to drop into the trap. The container is much smaller than in the case of pan-closets. It generally has a ventilating-pipe to remove foul gases. The bowl holds a large quantity of water, into which the solids are dropped and instantly deodorized. It is provided, with some of the best closets of this type, with a superior flushing rim, and is flushed by a special cistern. As the flap closes tightly against the bottom of the bowl, this must be provided with an overflow, which should have a trapped connection to the container. Unless some water is furnished to this trap

at each flush it is liable to lose its seal by evaporation, thus establishing a direct connection between the container and the atmosphere of the water-closet apartment. Such dribble to the trap of the overflow is supplied at each flush in the better valve-closets. There is some danger of the fouling of the container. To prevent this the better closets have the inside of the container enamelled, and as a larger body of water rushes from the bowl through the container at each discharge, the danger is much less than with the pan-closet.

If such closets are flushed from a valve the solids will be driven out of the closet-trap only after repeated flushing. Better closets of this class have suitably-arranged cisterns, which deliver quickly a large body of water to bowls with improved flushing-rims, and thus the danger from foul matter being retained in the trap is much reduced. After continued use the flap-valve is liable to leak; excrements or paper may stick to it and prevent its tight closing, and all water will leak out of the bowl. Thus the additional water-seal is

lost, and the bowl is more liable to become fouled.

The outlet of some valve-closets is placed at the side, not at the bottom, and is closed by a vertical flap-valve hinged to spindle and lever, and held in place by a counterweight. Such valves may be less liable to be fouled with solid matters and may close more tightly on this account. The water rushing out of the bowl in a large body will effectually flush the outlet of the closet.

Other valve-closets have sliding-valves to close the outlet of the bowl at the side or at its bottom. None of these closets, however, are used to any great extent.

Some of the valve-closets do away with the trap, and rely for exclusion of sewer-air only upon the flap-valve and the water in the bowl. In speaking of traps under fixtures I have already stated that each fixture should have a trap, and I would much prefer dispensing with the additional water-seal in the bowl than with the trap underneath the closet. Such trapless closets are not safe, for, should the mech-

anism of the flap-valve get out of order, the house would be entirely open to the invasion of sewer-air from the soil-pipes and drains.

PLUNGER-CLOSETS.

The characteristic detail of all these (see Fig. 3C) is the plunger closing the outlet of the bowl, which is placed at the side of the closet. The foul matters drop into a large body of water in the bowl, are therefore partly deodorized and easily removed from the bowl. By lifting the plunger the contents of the bowl are rapidly discharged into the soil-pipe, and the rush of the water leaving the bowl is so great as effectually to drive all matters through the dip of the trap. The latter must be efficiently protected against siphonage, which is more likely to occur with plunger-closets than with the pan, valve, or hopper closets. The danger with closets of this class lies in the fouling of the plunger-chamber. Waste matters and paper may stick to the seat of the plunger or to its sides; the outlet will then be

imperfectly closed, allowing the water to leak out of the bowl. Closets having a small plunger-chamber are the better ones, not only because they will be cleaner, but because with large chambers the waste of water must necessarily be large.

Plunger-closets flushed by a special cistern require no supply-valve nor float in the plunger-chamber, which, therefore, may be of smaller dimensions, and hence are superior to other closets of this type.

In some plunger-closets a special spray arrangement is intended to wash the sides of the plunger and its chamber at each use of the closet, but, while it may be efficient, it tends to complicate the closet. The better closets of this class provide the top of the bowl with an improved flushing-rim, or wash the sides of the bowl by an effective fan or water-spreader. In order to provide for an overflow the plunger is sometimes made hollow, and when trapped it is so arranged that the water forming a seal is renewed at each flush. Otherwise it is liable to evaporate; and this is especially dangerous with plunger-closets that are trapless.

Trapless plunger-closets are not safe for same reasons as stated for trapless valve-closets.

In some closets an independent overflow is arranged. The majority of plunger-closets are flushed by a valve worked by a float in the plunger-chamber. These valves are not always reliable, especially under varying pressures, and it is much better to flush these closets from a special cistern.

HOPPER-CLOSETS.

There are many varieties of hoppers, made in iron and in earthenware. The latter are much preferable, and the former should never be used unless well enamelled on the inside. Hoppers are either of the "*long*" type, requiring a trap of iron or lead below the floor, or else they are so-called "*short*" hoppers, with a trap of iron or earthenware above the floor.

Hoppers (Figs. 3, D and E) are sometimes liable to become soiled at the sides

of the bowl, and for this reason have not become favorites with many. The hopper lacks the advantage of the pan, valve, and plunger closets, in which the excrements immediately drop into a more or less large body of water, and, thus carried in suspension by the water, are easily removed from the bowl by tilting the pan or valve or by lifting the plunger. A good practice is to wet the sides of the hopper before use ; and where the hopper is flushed by a special cistern such a device has been arranged to work automatically (" preliminary wash "). The rear part of a hopper should be vertical and straight, so that matters will drop immediately into the water of the trap without touching the sides of the hopper. The inside of hoppers should be very smooth, and for this reason earthenware is much preferred to enamelled iron, because the enamel scales off gradually. In order to have as little surface as possible exposed to fouling, the sides of the hopper should be short, which may be accomplished by having the trap above the floor. The ap-

parent greater cleanliness of the pan, valve, or plunger closets is simply a delusion. It is true the hopper will sometimes have its sides soiled with excrementitious matter if the supply or the manner of flush is inadequate. But the defect is in sight ; it shows itself to the person using or in care of the closet, and it can easily be remedied by proper occasional application of hot water, soap, and a scrubbing-brush.

Not so with the other closets. The dirty matter may be out of sight, but it often remains hidden in those parts of the closet which are not easily accessible, and therefore never cleaned or inspected until a leakage occurs, or until some foul odor compels the householder to call for the plumber.

The great merit of hoppers lies in their simplicity and in the total absence of any mechanical parts, which, sooner or later, fail to work properly, especially when the closet is carelessly used. Much depends, with a hopper-closet, upon the manner of flush. The practice of turning a stop-

cock and thus introducing a feeble stream into the hopper, which whirls around its inside, is objectionable. Hopper-closets should always be provided with *flushing-cisterns*, allowing a *bountiful supply* to rush vertically downward through a *large supply-pipe* and a *well-shaped flushing-rim*.

A porcelain-seated hopper is a cleanly device for hospitals, schools, factories, railroad depots, public buildings, etc., provided it is well flushed, and only where the apartment can be well heated in winter, as otherwise, the seat being cold, the closet is liable to be improperly used. Hoppers with wooden rims for a seat attached to the bowl will answer better than the above hopper in exposed places, the only objection being the possible absorption of urine through the wood.

WASHOUT-CLOSETS.

I have grouped a number of recently-invented water-closets into this last class, which I consider, *in principle*, far superior to any of the other closets for the

following reasons: They are usually made in one single piece of earthenware, and are entirely free from any movable parts (see Fig. 3F). Moreover, the bowl of the best closets of this type is shaped in such a manner that its outlet or discharging limb forms a very efficient water-seal trap, thus obviating the necessity of a trap under the closet.* All washout-closets have their basin so shaped as to contain a certain quantity of water; the advantages of such an arrangement have been already stated. A washout-closet is, in fact, only a modified and improved form of short or long hopper, and with the improved short hoppers the volume of water in the basin is generally quite large.

In England closets of the "washout" type are preferred of late to other closets, and in this country quite a number of such closets have been introduced.

Different means are employed with the closets of this class to effect a discharge of the bowl. In many the downward rush of water, directed through proper

* Such closets are really *improved short hoppers*.

flushing-rims, so as to concentrate its main force at the outlet of the basin, drives the contents of the bowl into the overflow, and thus into the soil-pipe. In others a jet of water is introduced into the outlet-pipe and carries all water from the bowl, partly by the force of the jet, and partly by starting a siphoning action. In still others a partial vacuum is created by different means in the outlet limb, and a true siphonage established.

LATRINES.

Latrines and trough water-closets are frequently used in public places, schools, railroad stations, factories, hospitals, military barracks, etc. Latrines (Fig. 4) consist of a series of strong stoneware or cast-iron porcelain-lined pans connected with each other by a suitable vitrified or cast-iron pipe at the bottom of the pan or bowl, and forming one piece with it. At the end of the last section a discharge-valve is placed, being an upright pipe in which a plunger works, the latter being

hollow so as to serve also as an overflow. As the plunger closes the outlet tightly, water is held back in the latrines to the height of the overflow in the plunger. The plunger or discharge-valve is under control of a janitor, who raises this plug as often as found necessary to empty and clean the latrines. The water then rushes out of all the bowls with great force and in great quantity, and everything is effectually carried out of the plunger-chamber and trap underneath. Moreover, each bowl is provided with a supply-pipe to rinse its sides each time the plug is raised. As soon as the plug is dropped the bowls and connecting pipes fill with water, and are in a few moments again ready for use. The bowls are generally formed so that no excremental matter can strike their sides; everything drops at once into water and is partly deodorized. The only part which may get foul in time is the plunger-chamber—although this is not as likely to occur with latrines as with a single plunger-closet.

Trough water-closets are constructed

in different manners, generally of brick-work with vertical side-walls and round bottom, but sometimes of iron or of earthenware, holding a large quantity of water, with the bottom of trough inclined to the end, where the outlet is situated, and with a single or double row of seats placed above them. They are frequently flushed with success by means of automatic siphon or tilting tanks. They are somewhat less expensive than latrines, and fulfil, in many cases, a good purpose.

A good substitute for latrines and trough-closets may be found in a number of flushing-rim, all-earthen hoppers with wooden rim attached to the bowl as a seat, each provided with a trap, and flushed automatically either by Field's annular siphon-tank or McFarland's tilting-tank, as often as desired, the operation of emptying and flushing the closet being thus made entirely independent of the carelessness or forgetfulness of the persons using the closet.

GENERAL ARRANGEMENT OF WATER-
CLOSET APARTMENTS.

In speaking of plumbing fixtures in general I have decidedly condemned the usual manner of encasing fixtures with tight woodwork. While this is objectionable with all kinds of plumbing apparatus, it is decidedly bad practice in the case of water-closets. With a tightly boxed-up water-closet ventilation is impossible under the seat; the frequent cleaning of the apparatus is neglected, the floor often becomes wetted with urine drippings or water spilled in carelessly using the closet as a receptacle for slops; the filthy liquid soaks into the absorbent floor, which constantly remains damp and emits unpleasant odors into the apartment.

As an abundant supply of water is most essential to the interior of the bowl and closet, so is plenty of light and air indispensable to the outside of the closet. A water-closet should stand free on the floor, readily accessible on all sides. The only woodwork necessary is the seat; this should be without a cover, and can be

hinged and leaned against the rear or side wall when the closet is not in use. Such an arrangement looks especially neat where the floor is laid in tiles, and where the water-closet is entirely of white crockery-ware—for instance, a long or short flushing-rim hopper or an earthenware wash-out closet.

Col. Geo. E. Waring, Jr., thus describes such an arrangement: a closet, “made of white earthenware, and standing as a white vase in a floor of white tiles, the back and side walls being similarly tiled, there being no mechanism of any kind under the seat, is not only most cleanly and attractive in appearance, but entirely open to inspection and ventilation. The seat for this closet is simply a well-finished, hardwood board resting on cleats a little higher than the top of the vase, and hinged so that it may be conveniently turned up, exposing the closet for thorough cleansing, or for use as a urinal or slop-hopper. Such closets ought entirely to do away with the use of urinals in private houses, and if, for convenience or to prevent the possibility

of baths being improperly used, separate slop-sinks are desired, these should be constructed like the hopper-closet, the outlet being protected with a movable basket of wire-cloth made for the purpose."

The arrangement suggested adds, of course, to the expense of a water-closet, but where white Minton tiles should prove too costly a plain cement floor, or slabs of slate, or else enamelled tin may be substituted for them. A tight, hard-wood floor is well suitable, and may be covered, if desired, with oil-cloth.

Wherever woodwork is used for the sake of better appearance of closets having mechanical parts (plunger-closets, valve-closets), at least the riser should be arranged with lattice-work or a great number of perforated holes to provide ventilation under the seat.

It is desirable to locate water-closets near an outer wall, in order to give the apartment ample light, and a window opening on the exterior of the house for ventilation. Where such an arrangement

cannot be secured—and it is seldom possible to do so in American city dwellings—the apartment should have borrowed light, and special means for its ventilation should be provided. A dark, unventilated, narrow space for a water-closet opening into a dressing-room, or situated off a staircase-landing, or even close to sitting-rooms, is an abomination. In England water-closets are “constructed inside a house with an intermediate vestibule, with a cross-current of air, so as to cut off the air in the house from that in the closet.” The rigor of the climate in our Northern States forbids such an arrangement, but in moderate climates it is quite practicable to locate water-closet and slop-sink apartments in a tower connected to the main building by a passage or hall, which, however, is separated from it by double doors, the hall being efficiently ventilated by two windows on opposite sides. If located in the centre of the house such apartments need sometimes artificial lighting by gas, in which case the heat of the gas-flame can be utilized to create a

constant draught, and thus to ventilate the closet apartment by means of tin or galvanized-iron pipes extended—independently for each apartment—through the roof. Fresh air should, in such a case, be supplied to the room either by blinds in the door or else by keeping the bottom of the door about six inches above the floor level.

Sometimes, in order to remove noxious gases generated in using the closet, a special vent-pipe is attached to the closet-bowl, leading into a constantly-heated flue, used for this purpose *only*; or else an upward draught is created in the vent-pipe by connecting it with a chamber, in which a gas-jet is burning, and the outlet-pipe of which enters the flue or extends up to the roof.

Sometimes the local ventilation is applied directly under the seat by using an annular flat zinc tube, provided with a number of openings at the inner edge, and connected to a special flue.

It would be a serious mistake to run such vent-pipes into a kitchen flue, and far more so to run them into any other

chimney of a building. There is at times a downward draught in these—even in the kitchen flue, the fire of which may go out over-night—and thus offensive gases from the closet would be carried into the house. Another reason against such a course is that small vent-pipes would soon become obstructed by soot. The best course, where a special flue has not been arranged, is to run the vent-pipes along some heated flue up to the roof, and terminate their ends at a point where they are well exposed to the currents of air. These remarks apply also to the vent-pipes of containers of pan or valve-closets.

It would almost seem superfluous to state that vent-pipes from closet-bowls should never enter a soil or waste pipe, or a vent-pipe from traps. But such cases are not rare, and instances of such pernicious practice—which should be considered either as criminal carelessness or else as utter stupidity and inability of the mechanic—are frequently discovered in making sanitary inspections of plumbing work.

While speaking of the proposed use of kitchen flues for vent-pipes of closet-bowls

or containers, I might mention the fact that it has repeatedly been proposed to utilize the heat of the kitchen chimney for the ventilation of soil-pipes by running these from above the highest fixtures into such heated flue. Such practice is not permissible under any circumstances whatever, for there are at times down-draughts, which would force soil-pipe air into the house. Besides this, it is well known that bricks absorb gases, and would thus in time become impregnated with sewer-air.

For public places, such as railroad depots, schools, colleges, hotels, etc., where water-closets are likely to be used in rapid succession at certain times of the day, a *special ventilation of the apartment* is necessary, even where windows are provided, to remove offensive smells from the use of the closets, which may arise, however well the closets may be trapped and flushed and the pipes ventilated. It would lead too far to consider in detail the best means for ventilating such apartments. Suffice it to say that providing only an exit for the foul gases cannot be regarded as *ventilation*. To preserve the purity of the at-

mosphere in such apartments it is necessary to introduce a sufficient quantity of pure air, moderately heated in winter time, and to provide an outlet for the foul air. A much-disputed question in locating this outlet is whether it should be near the floor or near the ceiling. The former may have advantages from an economical point of view, but from a sanitary point of view, which should only be taken into consideration in the ventilation of such apartments, I should always advise locating the outlet near the ceiling of the room.

No amount of ventilation, however, will keep the air of the apartment pure unless the water-closet is frequently and thoroughly washed and scrubbed. Such cleansing is much facilitated with the above-suggested open arrangement of a water-closet.

The following valuable remarks of Mr. Edward S. Philbrick upon this subject so fully express my own views that I quote them *in extenso*: "The location of plumbing fixtures in dark corners, under stairways, and in closed closets is always to be avoided. Such fixtures, even if of the best materials and design, need frequent

washing and even scalding to keep them sweet, and the more light and air can be admitted to them, the more likely will the occupant be to enforce such cleanliness. The best authorities in England recommend the location of water-closets outside the house walls, in towers or outside appendages. The rigor of our climate forbids such an arrangement in the Northern States, but they can often be so placed near the outer wall of the house as to allow of a window for the direct admission of light and air—*i.e.*, in the same apartment. This can be done in all suburban houses without an undue sacrifice of light in the living and sleeping rooms, though city houses can rarely afford anything better than skylight and well-light for them. . . . The water-closets on the basement floor are generally the source of much trouble by injudicious location and subsequent neglect. The rareness of the inspection generally given to such fixtures by heads of families renders it all the more needful to place them where they can be readily and easily cleaned and well aired. . . . But however good the appa-

ratus and however well located, nothing will compensate for *neglect* by the occupants of the house. Frequent applications of hot water and soap are just as needful to the surfaces of such fixtures as to the bodies of the persons who use them. Of course, the woodwork about them should be so put together as to be readily taken apart without tools by any housemaid, to be periodically cleaned and aired. What is the custom in this respect? Expensive apparatus is often seen so boxed up by screwed and even *nailed* joinery that the spaces so enclosed are practically inaccessible and soon become abominably foul from splatterings. The less amount of woodwork the better, but by all means have the whole so as to be ready of access without the need of so much as a screw-driver, and let every housemaid be taught the necessity of a regular routine in the cleansing operations, scalding and scouring every surface which has been exposed either to the splattering of urine, or even to the perspiration of the body. It may not be always possible to enforce such discipline, but the less it is enforced the

more important become the items of light, air, and simplicity of construction as aids in the same direction. The latter are generally under the control of the architect, and his mistakes of planning entail a *permanent* and incurable evil, which it is therefore all the more important to avoid. . . . While every aid should be given to cleanliness by simplifying the apparatus, no amount of perfection in this respect will avoid the need of constant thought and care on the part of those who use the fixtures, as well as those whose duty it may be to cleanse them. Such perfections of apparatus are but aids, and though not to be ignored by any means, are after all but of little avail if the people who use them are reckless and wanton in their habits. It is difficult enough to keep such apparatus in good order in private houses where not used by any one beyond the supervision of the head of the family, but the trouble increases in a manifold ratio where fixtures are applied in hotels or public places, or in tenements to be used by more than one family."

FLUSHING APPLIANCES.

Flushing-tanks should be provided in a system of house-drainage whenever it is impracticable to lay the drain at an inclination which will secure a sufficient cleansing flow. The idea underlying most of these flushing arrangements is the accumulation of a small flow of water—often merely a dribblet—which continuously running, at a sluggish rate, would not be able to remove deposits in the drain. Whenever this water has accumulated to a large volume the flush-tank is automatically emptied and its contents are driven with a sudden rush through the drain. As this may be repeated as often as found necessary, the inside walls of the drain may be kept thoroughly cleansed, and any decomposition of organic matter is thus effectually prevented.

Automatic flush-tanks are likewise frequently used for flushing a number of water-closets, urinals, or slop-sinks, and even a single water-closet, if in an exposed locality, where the water in the supply-pipes would be apt to freeze unless kept constantly running. It has been al-


ready stated that such continually-running dribblets are unable to produce an effective flush, but, by collecting the dribblets in a flush-tank discharging automatically when filled, the desired purpose may easily be accomplished.


There are many varieties of flush-tanks, such as Field's siphon-tank, Adams's patent deep-trap automatic siphon flush-tank, Doulton's flush-tank, McFarland's tilting-tank, Shone's flush-tank, Maguire's, Rhoads's, Hydes's, Ivers's, Wilson's, Guinier's tanks, Jordan's automatic tilting flushing-tank, and others.

Field's flush-tank, the invention of the well-known English engineer, Rogers Field, has been used with success in this country. One of his tanks has a common siphon, and is started only by a sudden addition of a larger quantity of water. The other tank is provided with an annular siphon, the outer and inner limb being concentric. This tank is started by a small trickling flow. It may be constructed of small size, to flush a row of hopper closets or urinals automatically.

Larger tanks are used for flushing house-drains and town sewers, and are also adapted for sewage disposal by surface or sub-surface irrigation.

Fig. 5, A, shows a Field flush-tank with annular siphon, the tank being of wood lined with sheet lead. The longer inner limb of siphon reaches into the trapping-box suspended underneath, in which the water-level is kept about one-sixteenth of an inch below the end of the inner limb of siphon by means of the second "auxiliary" siphon. The working of the tank is as follows: As soon as the water from the faucet has filled the tank so that the water rises to the top of the longer (inner) limb of siphon, it commences to overflow, but is guided by a conical-shaped adjunctage to drop clear of the sides, and seals the mouth of lower limb. In falling, the water carries air with it, which is thus displaced and driven out at mouth of inner limb in trapping-box. A slight vacuum is gradually created in the discharging-limb sufficient to start the siphon, which rapidly empties the tank. As soon as air is admitted through the outer (shorter) limb of siphon its action is stopped, all




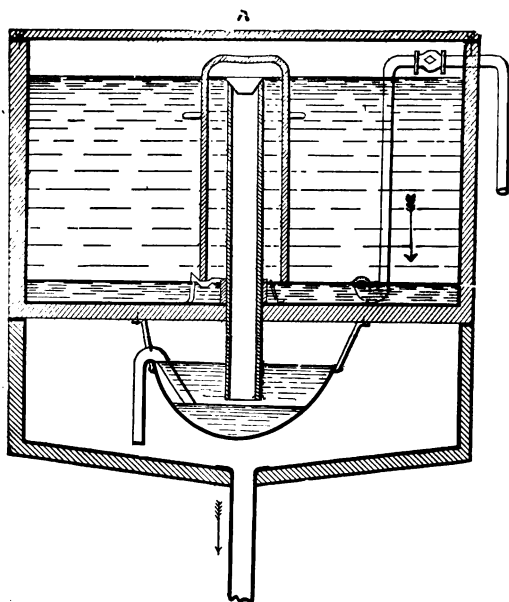

A Siphon-tank.


FLUE

Fig. 5.

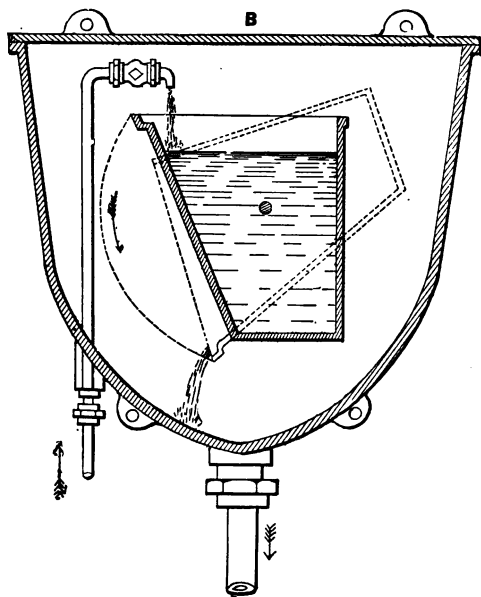

HING-TANKS.

B Tilting-tank.



the water in the inner limb drops into the water-chamber, and the auxiliary siphon lowers the water-line in trapping-box about one-sixteenth of an inch below the mouth of inner limb. Air enters at this place and completely breaks the siphon; the tank is then ready for another discharge. The stop-cock can be regulated to fill the tank more or less rapidly according to option.

McFarland's tank is shown in Fig. 5, B. It works by gravity, and is simply a bucket hung in a cistern, working in brass journals. As soon as filled from a faucet regulated to let the water in slowly or quickly, as desired, the bucket tips over and empties the entire contents at once. This tank is very well adapted for flushing closets, slop-sinks, and urinals.

REMOVAL OF ROOF, YARD, AND SURFACE WATER.

Upright pipes for the removal of roof-water (leaders or conductors), located outside of a house, may be of metal (copper, galvanized sheet-iron, or tin); when laid inside of a house they should be of cast or

wrought-iron, and their joints treated in all respects as those of soil-pipes. Upright leaders should be 3 inches and upward in diameter, their size and number being in proportion to the amount of roof-water to be removed. Before joining the house-drain leaders should be trapped, if they are of metal and pass near windows, and also, in case they are of iron with tight joints, if they should open at the top below or near attic windows or ventilating flues. The traps of leaders should be placed sufficiently deep in the ground to prevent the water from freezing, and the water-seal should be sufficient in depth so as not to be readily lost by evaporation. It is preferable to place leader-traps inside the cellar-walls, where they will not freeze, and where they can be easily cleaned in case of obstruction by solid matters from the roof-gutters. Tight iron rain-leaders do not as a rule require a special trap, unless their top opens near dormitory windows or ventilating flues. Sometimes a leader delivers into the main trap of the drain, and thus helps to cleanse the trap. A portion of the roof-water should pre-

ferably be introduced at the head of the house-drain.

Rain-leaders should never be used as soil-pipes, nor should they be solely depended upon to ventilate the drain; and, on the other hand, soil-pipes should never be used to carry rain-water from the roof. In making a sanitary examination of the Executive Mansion at Washington, under direction of Col. Geo. E. Waring, Jr., the writer had occasion to see an instance of the violation of this rule. The main soil-pipe in the building was a 10-inch (!) cast-iron pipe, which served the double purpose of receiving the discharge from three water-closets, a urinal, a slop-sink, and some wash-bowls and bath-tubs, and also all the rain-water from the large roof. At each rain-fall this large pipe received ample flushing, but in times of prolonged droughts its inner walls became thoroughly slimed and foul with excremental and other matter. In times of violent rain-storms the water rushing down the 10-inch pipe, and passing the branch wastes, very likely siphoned all water out of the traps, thus leaving the house un-

protected against the foul gases of the soil-pipe.

Storm and surface waters from paved areas or court-yards should always be removed by yard-drains of ample size, which must join the house-drain by Y branches. Such drains should be properly trapped, not by the usual objectionable bell-traps in the shape of yard "cesspools," but by running traps, with deep seal to guard against evaporation, located preferably inside the cellar-walls, and provided at the lowest point of the trap with a removable plug, to facilitate the removal of sand or obstructions.

DRAINAGE OF CELLARS.

It remains to discuss the proper method of removal of excessive moisture from the soil under and around a dwelling. Unless this is properly attended to, cellars of houses will be continually damp, the brick or stone walls will readily absorb the moisture by capillary attraction, and an excess of watery vapor will fill the house. The well-known researches of Dr. Bowditch of Massachusetts, and of Dr. Buchanan of

England, have clearly established the relation of excessive soil moisture to certain diseases, notably *consumption*, bronchitis, pneumonia, and other diseases of the lungs.

Dr. Parkes in his admirable "Manual of Practical Hygiene" speaks about diseases connected with moisture and ground-water as follows: "Dampness of soil may presumably affect health in two ways—(1) by the effect of the water, *per se*, causing cold soil, a misty air, and a tendency in persons living on such a soil to catarrh and rheumatism; and (2) by aiding the evolution of organic emanations. The decomposition which goes on in the soil is owing to four factors—viz., presence of decomposable organic matters (animal or vegetable), heat, air, and moisture. These emanations are at present known only by their effects; they may be mere chemical agencies, but more probably they are low forms of life which grow and propagate in these conditions. At any rate, moisture appears to be an essential element in their production. The ground-water is presumed to affect health by rendering the soil above it moist, either by evaporation

or capillary attraction, or by alternate wettings and dryings. A moist soil is cold, and is generally believed to predispose to rheumatism, catarrh, and neuralgia. It is a matter of general experience that most persons feel healthier on a dry soil."

In order to keep the level of the sub-soil water below a certain depth artificial channels should be provided laid at that depth and sloping towards some proper outlet which will remove all surplus water. These channels, which carry off only clean water, are also called *drains* (this being the original meaning of the word).

Near the foundation-walls of the house trenches dug for this purpose should be filled with loose or broken stones. Drains (common tiles) should be placed two or three feet below and under the cellar-floor, with open joints, care being taken to prevent any intrusion of earth at the joints by wrapping tarred paper or strips of cotton around them. The drain can then be covered up and buried. The size of the tile-drains will depend on the character of the soil. As

a general rule 1½-inch tiles are quite sufficient, except in the case of a spring in the cellar, when it may be necessary to use pipes of 2 inches, and sometimes even larger sizes.

The only difficulty, from a sanitary point of view, consists in finding a proper outlet. If the house is a country residence with ample ground around it, and especially if the land is not level, but slopes to some distant valley or creek, it is very easy to continue the main cellar-drain with a sufficient pitch to some gutter or open ditch, into which it may discharge.

The case becomes difficult with city houses, on narrow lots, with no other outlet available but the sewer under the street. A direct connection between the cellar-drain and the sewer is forbidden for well-known reasons, and even the interposition of an ordinary water-seal trap may not be regarded as a sufficient safeguard, for during periods of droughts the water evaporates, allowing the gases from the sewer to pollute the ground under the house.

The drain should run into a mason's trap with *deep* water-seal, and filled with coarse sand or fine gravel; and before joining the sewer the drain should be trapped by a running trap, into which, if practicable, a leader should discharge. Another arrangement is to trap the cellar-drain, and to provide an outlet for gases which may force the trap, by a vertical pipe, on the house side of the trap, and opening on the surface of the ground. This is sometimes done when the sewer is located in an alley at the rear of the house, and an open yard gully may be connected to the vertical vent-pipe to supply the running trap with water.

It is equally important to have a dry, impervious floor in the cellar, which can be secured by first laying a base of concrete, upon which a layer of about $\frac{1}{4}$ inch of asphaltum should be placed. This makes the floor practically impervious. It should then be properly finished with a layer of best Portland cement.

Openings in the cellar-floor connecting to the house-sewer are highly objection-

able, unless trapped by some deep trap, the water-seal of which is not easily lost by evaporation. In localities subject to back-water from tides a flap-valve or ball-valve may be required.

Better than either arrangement is a pipe, carried up from the main house-drain to the cellar floor, and closed tightly by a plug screwed into the outlet of such pipe, which plug may be removed should it become necessary to carry off water from the cellar-floor.

DAMPNESS OF WALLS.

In order to prevent dampness of walls, that part of the wall below the level of the ground should be constructed with particular care. Nothing will better prevent dampness in walls than a "damp-course" of some impervious material. Asphaltum is probably best for this purpose, though layers of slate in concrete or damp-proof tiles are very efficient. If at all practicable, there should be a dry area all around the foundation-walls in order to prevent any dampness in the walls origi-

nating from the earth surrounding it at the sides. If such an area cannot be provided a *double* wall with an air-space between inner and outer walls should be used.

RECORD AND PLAN OF DRAINAGE AND PLUMBING INSPECTION.

It cannot be too strongly recommended to every householder to keep for future reference, for cases of inspection or repairs and alterations, a complete plan of all the drain, soil, and waste pipes in and outside of the house, a record of the depth of the drain at all principal points, of the sizes and material of pipes, of the location of junctions, traps, fresh-air pipes, access-pipes or cleaning Y's, of all fixtures on every floor, etc.

Frequent inspections of the plumbing of buildings are by no means superfluous. They are very important in the case of public buildings, schools, hospitals, asylums, jails, hotels, but especially so for such buildings as are occupied only a part of the year (summer residences, sea-

side hotels, mountain resorts, etc.) In some cities "sanitary associations" have been organized, such as at Newport, R. I.; Lynn, Mass.; Brooklyn, N. Y.; Montreal, Canada; Savannah, Ga., and other places. The members in several of these associations can avail themselves of the services of an inspector of plumbing employed by the association, in order to assure themselves by frequent inspections of the sanitary condition of the plumbing in the house, of its outside drainage and water-supply, its ventilation, etc.

In the case of new buildings the architect's plans should show the exact location of the proposed plumbing work, fixtures, supply, soil, waste, and air pipes in the house. The work should be done according to detailed written specifications, carefully drawn up by the architect or a sanitary engineer, under whose immediate direction the plumber should work. It is a mistake—but, alas! how often is it made—to give the plumbing work of a new building out by contract. The slight amount saved in first expense is almost

always followed by an increased outlay for extra work or for repairing and altering defects, which appear only after the house is occupied. A prudent house-owner will prefer to have his plumbing done by day labor, by honest, conscientious plumbers—and these are by no means rare, as the universal cry against them would seem to indicate—who care more about their reputation than about a few dollars earned through dishonest and careless work.

PLUMBING REGULATIONS.

In many of our large cities plumbing is now regulated by law. The health authorities have issued carefully-drawn regulations for the drainage and plumbing of buildings. They require the plans for plumbing to be submitted to them for approval and for filing. As the plumber proceeds with his work it is examined from time to time by intelligent inspectors appointed by the Board of Health. When the work is finished, and before any pipes are covered up, a final inspection is made,

including in recent years the testing of the pipe-system under hydrostatic pressure, or with oil of peppermint.

Such inspections and the enforcement of certain rules in regard to details of plumbing work will certainly tend to lessen the frequent complaints about bad plumbing in houses, and the consequent entrance of sewer-air. They will contribute much toward the lowering of a high death-rate, and no city of importance should be without such regulations.

Since experts in house-drainage are by no means agreed upon many details of plumbing work, it cannot be expected that any such regulations may as yet be perfect. Some of the rules even seem ill-advised—for instance, the requirement that the top of soil-pipes should be covered with a “cowl,” or “return bend,” which rule entirely ignores the important experiments at Kew on the action of ventilators or cowls. Again, I fail to find in any of the plumbing regulations which I have seen a rule prohibiting the use

of sanitary appliances universally acknowledged as bad. Not one of them, for instance, even advises against the use of that worst of all apparatus, the pan-closet. It has always seemed to me that sanitary science had advanced sufficiently far to justify Boards of Health in *positively prohibiting* pan-closets in buildings of any kind.*

But, taken as a whole, most plumbing regulations are excellent, and cannot fail to elevate the standard of plumbing work.


SYSTEM OF HOUSE-DRAINAGE.

Fig. 6 represents a section through a dwelling-house, illustrating the essential elements of a system of house-drainage.

A is the gravel-trap, into which the subsoil-drain B discharges, and which serves to prevent the gases from the sewer from entering the drain-tiles and permeating the cellar. The drain B for cellar-drainage should be of common $1\frac{1}{4}$ to 2-inch tile-drains, laid with open joints, around

* This was written in 1884, since which time the writer has seen a number of plumbing regulations in which pan-closets were entirely prohibited.

Fig. 6.

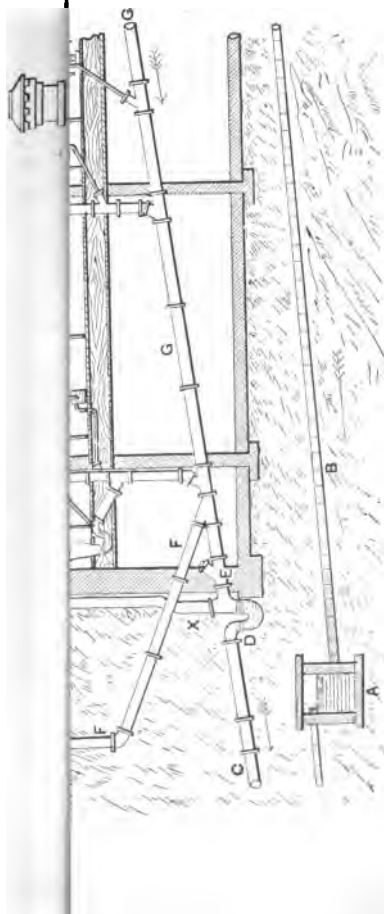

SYSTEM OF HOUSE-DRAINAGE.

which tarred paper or cotton-rags may be wrapped to prevent any stoppage of the tiles from dirt falling in at the joints.

C is the house-drain, which should consist of 4-inch vitrified pipe with well cemented joints to within 10 feet from the cellar-wall. D is the running-trap on the main drain to disconnect the house from the sewer. Into it the rain-leader X discharges. E is a Y branch, closed with a brass trap-screw or a plug, for cleaning purposes. F is a fresh-air pipe, 4 inches in diameter, entering the house-drain above the trap, and carried some distance away from the house, its mouth being hidden from view by shrubbery, and covered with a wire basket for protection against obstructions.

G is the 4-inch house-drain, of heavy iron pipe, with well-tightened joints, carried with sufficient fall along the cellar-wall to the furthest point, where it receives either a soil-pipe or a rain-leader.

H H are the 4-inch iron soil-pipes, which join the iron drain in cellar by Y branches and eighth-bends. They are ex-

tended full size through the roof, and their outlets I I are protected by strong wire baskets.

J is a small refrigerator which wastes into a movable pail. K is the large tank in the attic, which is supplied through a ball-cock from street-pressure. Its overflow-pipe L is shown trapped by an S-trap with deep seal, and emptying into the gutter of the roof. The blow-off N from tank runs down vertically and delivers over the kitchen sink.

M M are small cisterns for flushing the water-closets and slop-hopper *only*.

O O are oval earthenware wash-bowls with $1\frac{1}{2}$ -inch waste-pipes and overflow-pipes of lead, trapped by anti-siphoning or mechanical traps, and delivering into $4" \times 2"$ Y branches of the soil-pipes.

P is a pantry-sink, of heavy tinned and planished copper, with overflow and $1\frac{1}{2}"$ waste-pipe of lead trapped by an anti-siphoning or mechanical trap, and entering a Y branch of the soil-pipe.

Q are slate, cement-stone, soap-stone, or ceramic wash-tubs, with $1\frac{1}{2}"$ waste-pipe,

properly trapped as before described, for wash-bowls.

R is an all-earthenware flushing-rim slop-hopper, trapped by a vented S-trap, and flushed from a special cistern.

S is the kitchen-sink, of galvanized or enamelled iron, or of earthenware with a $1\frac{1}{2}$ " lead waste-pipe, properly and securely trapped.

T is a bath-tub, of enamelled iron or heavy planished copper, or of porcelain. It is provided with a standing-waste, and trapped by an anti-siphoning or mechanical trap.

T' is a small hip-bath of copper, provided with overflow and $1\frac{1}{2}$ " waste-pipe, trapped by a vented S-trap.

V is a 2-inch air-pipe to prevent the siphonage of the water-closet and slop-hopper traps. It is extended through the roof, and enlarged to a 4-inch outlet, which should be left without any other covering than a wire basket. The water-closet trap at the right of the bath-tub is not shown with a vent, because the water-closet is of the *improved short-hopper*

type, holding water to the depth of six inches in the bowl, which seal could never be broken by siphonage or capillary attraction.*

W W W are water-closets, the types shown being the long and short hopper and the washout closets. Each of these is provided with a special flushing-cistern M M M.

X X is a copper, cast-iron or wrought-iron rain-leader delivering the water into the running-trap of the house-drain.

Y is the blow-off from the boiler, which

*The diagram does not make provision for vertical air-pipes with branches to *all* traps. As stated in the paragraph "Venting of Traps and Trap-Siphonage," it is my opinion that such air-pipe is not necessary in *all* cases, and that in many cases the old proverb applies to trap-ventilation: "*Incidit in Scyllam qui vult vitare Charybdim.*" While we try to prevent loss of water-seal by siphonage by venting traps, we increase the amount of evaporation, and if fixtures remain unused for several days, the water-seal may be lost, which would not happen with an unventilated deep anti-siphoning trap. Other reasons have been given against such trap-ventilation, notably the great complication and increased cost of the work. Finally, it has been ascertained by careful experiments made for the Boston City Board of Health by Mr. J. Pickering Putnam that simple discharges from certain forms of water-closets (plunger-closets) will, under certain conditions frequently met in plumbing-work, *destroy the water-seal of a well-ventilated S-trap*. Consequently trap-ventilation is not a reliable cure in all cases.

W. P. G.

wastes into a Y branch of the iron drain in cellar.

The system described and illustrated differs from the methods of house-drainage as practised in England in one essential point. There, it is the rule to keep soil-pipes separate from waste-pipes ; to deliver to the former, in the words of Prof. Fleming Jenkin, "such foul matters as would certainly be tainted when contagious disease occurs in the house"—in other words, the waste water from water-closets, urinals, slop-sinks, and probably laundry-tubs. A second system "receives all liquids, which may be called dirty, but not foul—the water from baths, kitchen-sinks, and wash-hand basins." It is, moreover, the rule in England to locate the soil-pipe outside of the house-walls, and to deliver the waste-pipes over an open gully in the yard, from whence the wastes run into the house-drain. Both arrangements are entirely impracticable in this country on account of the severity of the climate, and the separation of the two systems by discriminating between

foul and dirty waste water leads to unnecessary complications. With well-jointed, thoroughly ventilated soil-pipes of iron, it seems quite permissible in American plumbing to run into them the wastes from any fixture in the house, if it be near the soil-pipe, and where vertical stacks of waste-pipes are run for bathtubs and wash-basins, these waste-pipes, if properly jointed, may with perfect safety deliver into the iron cellar-drain, which receives the soil-pipes of the house.

If all the rules on house-drainage heretofore explained are carefully observed the system of drainage of a dwelling will be as perfectly as possible in accordance with the present knowledge of sanitary science. Time and experience may find out hitherto unknown faults, but will also, it is believed, teach the proper remedies. *With pipes of proper material, properly joined, properly laid, and properly and sufficiently often flushed with air and water, the object of a system of house-drainage seems to be attained—viz., the instant removal from the house of all liquid*

and semi-liquid waste matter, and the perfect oxidation and constant dilution of the air contained in the pipes.

Says Mr. J. C. Bayles: "The conclusion I have reached is that when sewer-air finds its way into a house through the soil and waste pipes the fault lies somewhere between the architect, the builder, and the plumber. In any case it is without excuse. I know that houses can be drained into sewers without bringing sewer-air into them. The existence of foul sewers is in itself a perpetual danger to the public health, but there is no reason why we should bring that danger into our houses by providing channels through which the poisonous air of the sewer can find a means of ingress. I know of houses into which no sewer-air ever comes—unless, possibly, through the windows, borne in with the air of the street—and I have no hesitation in saying that, when the tenants of houses demand immunity from the dangers of unhealthful conditions, architects and builders will find a means of correcting the evils now complained of as practically ir-

remediable. Sanitary reform in cities only waits until those to be benefited by it shall demand it."

I have endeavored in this volume to explain what means and devices should be used, and what rules must be followed, speedily and safely to remove by the water-carriage system all liquid and semi-liquid wastes from habitations.

Further information on this branch of domestic and sanitary engineering may be found in a companion volume, in the Van Nostrand Science Series, published in a second, enlarged edition in 1890, and entitled "*Recent Practice in the Sanitary Drainage of Buildings.*"

The all-important question of how to dispose of the waste matters of the household in the *safest*, least disagreeable, most efficient and most economical manner has not been referred to herein.

The discharge of sewage into water-courses or into the sea, its treatment by chemical processes, filtration of sewage,

surface and sub-surface irrigation, intermittent downward filtration of sewage, the processes of dry removal, by pail or tubs, earth-closets, ash-closets, cesspools, privies, vaults, manure pits and kindred subjects, the removal of garbage, kitchen slops, ashes, etc., in other words, "*The Disposal of Household Wastes*," is made the subject of a third volume in the Science Series, published in 1890.

Just Published:
VAN NOSTRAND'S SCIENCE SERIES, NO. 111.
Price 50 cents.

Gas-Lighting and Gas-Fitting,

INCLUDING

**SPECIFICATIONS AND RULES FOR GAS PIPING,
NOTES ON THE ADVANTAGES OF GAS FOR
COOKING AND HEATING, AND USEFUL
HINTS TO GAS CONSUMERS.**

A Pocket-book for Gas Companies, Gas Engineers, and Gas Fitters, for Manufacturers of Gas Fixtures and Dealers in Gas Appliances, for Gas Consumers, Architects and Builders, Health Officers and Sanitary Inspectors.

Second Edition, Rewritten and Enlarged.

BY

WM. PAUL GERHARD, C.E.,
Consulting Engineer for Sanitary Works, New York City.



D. VAN NOSTRAND COMPANY,
23 MURRAY AND 27 WARREN STREET, NEW YORK.

CATALOGUE

OF THE

SCIENTIFIC PUBLICATIONS

OF

D. VAN NOSTRAND COMPANY,

23 MURRAY STREET AND 27 WARREN STREET, N. Y.

A. B. C. CODE. (See Clausen-Thue.)

ABBOTT (A. V.). The Electrical Transmission of Energy. A Manual for the Design of Electrical Circuits. Second edition, revised. Fully illustrated. 8vo, cloth..... \$4 50

ABBOT (Gen'l HENRY L.). The Defence of the Seacoast of the United States. Lectures delivered before the U. S. Naval War College. 8vo, red cloth. 2 00

ADAMS (J. W.). Sewers and Drains for Populous Districts. Embracing Rules and Formulas for the dimensions and construction of works of Sanitary Engineers. Fifth edition. 8vo, cloth. ... 3 50

A1. CODE. (See Clausen-Thue.)

AIKMAN (C. M., Prof.). Manures and the Principles of Manuring. 8vo, cloth..... 2 50

ALEXANDER (J. H.). Universal Dictionary of Weights and Measures, Ancient and Modern, reduced to the Standards of the United States of America. New edition, enlarged. 8vo, cloth..... 3 50

ALEXANDER (S. A.). Broke Down: What Should I Do? A Ready Reference and Key to Locomotive Engineers and Firemen, Round House Machinists, Conductors, Train Hands and Inspectors. With 5 folding plates. 12mo, cloth..... 1 50

ALLEN (C. F.). Tables for Earthwork Computation. 8vo, cloth .. 1 50

-
- ANDERSON (J. W.).** The Prospector's Hand-book; A Guide for the Prospector and Traveller in search of Metal-bearing or other Valuable Minerals. Seventh edition, thoroughly revised and much enlarged. 8vo, cloth. 1 50
- ANDERSON (WILLIAM).** On the Conversion of Heat into Work. A Practical Hand-book on Heat-Engines. Third edition. Illustrated. 12mo, cloth. 2 25
- ANDES (LOUIS).** Vegetable Fats and Oils; their Practical Preparation, Purification and Employment for various purposes. Their Properties. Adulteration and Examination. A Hand-book for Oil Manufacturers and Refiners, Candle, Soap and Lubricating Oil Manufacturers and the Oil and Fat Industry in general. Translated from the German. With 94 illustrations. 8vo, cloth. 4 00
- Animal Fats and Oils. Their Practical Production, Purification and Uses for a great variety of purposes, their Properties, Falsification and Examination. A Hand-book for Manufacturers of Oil and Fat Products, Soap and Candle Makers, Agriculturists, Tanners, etc. Translated by Charles Salter. With 62 illustrations. 8vo, cloth. net 4 00
- ARNOLD (Dr. R.).** Ammonia and Ammonium Compounds. A Practical Manual for Manufacturers, Chemists, Gas Engineers and Drysalter. Second edition. 12mo, cloth. 2 00
- ARNOLD (E.).** Armature Windings of Direct Current Dynamos. Extension and Application of a General Winding Rule. Translated from the original German by Francis B. DeGress, M. E. With numerous illustrations. (In Press.)
- ATKINSON (PHILIP).** The Elements of Electric Lighting, including Electric Generation, Measurement, Storage, and Distribution. Ninth edition. Fully revised and new matter added. Illustrated. 12mo, cloth. 1 50
- The Elements of Dynamic Electricity and Magnetism. Third edition. 120 illustrations. 12mo, cloth. 2 00

-
- ATKINSON (PHILIP).** Power Transmitted by Electricity and its Application by the Electric Motor, including Electric Railway Construction. New edition, thoroughly revised, and much new matter added. Illustrated. 12mo, cloth.... 2 00
- Elements of Static Electricity, with full description of the Holtz and Topler Machines, and their mode of operating. Illustrated. 12mo, cloth 1 50
- AUCHINCLOSS (W. S.).** Link and Valve Motions Simplified. Illustrated with 29 woodcuts and 20 lithographic plates, together with a Travel Scale, and numerous useful tables, Thirteenth edition, revised. 8vo, cloth..... 2 00
- AXON (W. E. A.).** The Mechanic's Friend. A Collection of Receipts and Practical Suggestions. 12mo, cloth 1 50
- BACON (F. W.).** A Treatise on the Richards, Steam-Engine Indicator, with directions for its use. By Charles T. Porter. Revised, with notes and large additions as developed by American practice; with an appendix containing useful formulæ and rules for engineers. Illustrated. Fourth edition. 12mo, cloth 1 00
- BADT (F. B.).** New Dynamo Tender's Hand book. With 140 illustrations. 18mo, cloth..... 1 00
- Bell Hangers' Hand-book. With 97 illustrations. Second edition. 18mo, cloth..... 1 00
- Incandescent Wiring Hand-book. With 35 illustrations and five tables. Fifth edition. 18mo, cloth. 1 00
- Electric Transmission Hand-book. With 22 illustrations and 27 tables. 18mo, cloth 1 00
- BALE (M. P.).** Pumps and Pumping. A Hand-book for Pump Users. 12mo, cloth..... 1 00
- BARBA (J.).** The Use of Steel for Constructive Purposes. Method of Working, App'ying, and Testing Plates and Bars With a Preface by A. L. Holley, C. E. 12mo, cloth 1 5
- BARKER (ARTHUR H.).** Graphic Methods of Engine Design. Including a Graphical Treatment of the Balancing of Engines. 12mo, cloth.... 1 5

-
- BARNARD (F. A. P.).** Report on Machinery and Processes of the Industrial Arts and Apparatus of the Exact Sciences at the Paris Universal Exposition, 1887. 152 illustrations and 8 folding plates. 8vo, cloth 5 00
- BARNARD (JOHN H.).** The Naval Militiaman's Guide. Full leather, pocket form. 1 25
- BARWISE (SIDNEY, M. D., London).** The Purification of Sewage. Being a brief account of the Scientific Principles of Sewage Purification and their Practical Application. 12mo, cloth. Illustrated. 2 00
- BAUMEISTER (R.).** The Cleaning and Sewage of Cities. Adapted from the German with permission of the author. By J. M. Goodell, C. E. Second edition, revised and corrected, together with an additional appendix. 8vo, cloth. Illustrated. 2 00
- BEAUMONT (ROBERT).** Color in Woven Design. With 82 Colored Plates and numerous original illustrations. Large 12mo. 7 50
- BEAUMONT, W. and DUGALD CLERK.** Automobiles and Horseless Carriages. (In Press.)
- BECKWITH (ARTHUR).** Pottery. Observations on the Materials and Manufacture of Terra-Cotta, Stoneware, Fire-Brick, Porcelain, Earthenware, Brick, Majolica, and Encaustic Tiles. 8vo, paper. Second edition 60
- BERNTHSEN (A.).** A Text-Book of Organic Chemistry. Translated by George M'Gowan, Ph. D. Third English edition. Revised and extended by author and translator. Illustrated. 12mo, cloth. 2 50
- BERTIN (L. E.).** Marine Boilers: Their Construction and Working, dealing more especially with Tubulous Boilers. Translated by Leslie S. Robertson, Upward of 250 illustrations. Preface by Sir William White. 8vo, cloth. Illustrated. 7 50
- BIGGS (C. H. W.).** First Principles of Electricity and Magnetism. Being an attempt to provide an Elementary Book for those intending to enter the profession of Electrical Engineering. Second edition. 8mo, cloth. Illustrated. 2 00

- BLAKE (W. P.).** Report upon the Precious Metals. Being Statistical Notices of the principal Gold and Silver producing regions of the world, represented at the Paris Universal Exposition. 8vo, cloth..... 2 00
- Ceramic Art. A Report on Pottery, Porcelain, Tiles, Terra-Cotta, and Brick. 8vo, cloth..... 2 00
- BLAKESLEY (T. H.).** Alternating Currents of Electricity. For the use of Students and Engineers. Third edition, enlarged. 12mo, cloth..... 1 50
- BLOUNT (BERTRAM).** Electro-Metallurgy
(In Press.)
- BLYTH (A. WYNTER, M. R. C. S., F. C. S.).**
Foods: their Composition and Analysis. A Manual for the use of Analytical Chemists, with an Introductory Essay on the History of Adulterations, with numerous tables and illustrations. Fourth edition, revised and enlarged. 8vo, cloth 7 50
- Poisons: their Effects and Detection. A Manual for the use of Analytical Chemists and Experts, with an Introductory Essay on the growth of Modern Toxicology. Third edition, revised and enlarged. 8vo, cloth..... 7 50
- BODMER (G. R.).** Hydraulic Motors; Turbines and Pressure Engines, for the use of Engineers, Manufacturers and Students. Second edition, revised and enlarged. With 304 illustrations. 12mo, cloth..... 5 00
- BOILEAU (J. T.).** A New and Complete Set of Traverse Tables. Showing the Difference of Latitude and Departure of every minute of the Quadrant and to five places of decimals. 8vo, cloth. 5 00
- BOTTONE (S. R.).** Electrical Instrument Making for Amateurs. A Practical Hand-book. With 48 illustrations. Fifth edition, revised. 12mo, cloth..... 50
- Electric Bells, and all about them. A Practical Book for Practical Men. With more than 100 illustrations. 12mo, cloth. Fourth edition, revised and enlarged..... 50
- The Dynamo: How Made and How Used. A Book for Amateurs. Eighth edition. 12mo, cloth... 1 00

BOTTONE (S. R.). Electro Motors: How Made and How Used. A Hand-book for Amateurs and Practical Men. Second edition. 12mo, cloth.....	50
BONNEY (G. F.). The Electro-Platers' Hand-book. A Manual for Amateurs and Young Students on Electro-Metallurgy. 60 illustrations, 12mo, cloth..	1 20
BOW (R. H.). A Treatise on Bracing. With its application to Bridges and other Structures of Wood or Iron. 156 illustrations. 8vo, cloth.....	1 50
BOWSER (Prof. E. A.). An Elementary Treatise on Analytic Geometry. Embracing Plane Geometry, and an Introduction to Geometry of three Dimensions. 12mo, cloth. Nineteenth edition.....	1 75
— An Elementary Treatise on the Differential and Integral Calculus. With numerous examples. 12mo, cloth. Sixteenth edition....	2 25
— An Elementary Treatise on Analytic Mechanics. With numerous examples. 12mo, cloth. Twelfth edition.....	3 00
— An Elementary Treatise on Hydro-Mechanics. With numerous examples. 12mo, cloth Fifth edition.....	2 50
— A Treatise on Roofs and Bridges. With Numerous Exercises. Especially adapted for school use. 12mo, cloth. Illustrated.....	2 25
— Academic Algebra. Third edition. 12mo, cloth..	1 25
— College Algebra. Fourth edition. 12mo, cloth..	1 75
— Elements of Plane and Solid Geometry. 12mo, cloth. Second edition.....	1 40
BOWIE (AUG. J., Jun., M. E.). A Practical Treatise on Hydraulic Mining in California. With Description of the Use and Construction of Ditches, Flumes, Wrought-iron Pipes and Dams; Flow of Water on Heavy Grades, and its Applicability, under High Pressure, to Mining. Fifth edition. Small quarto, cloth. Illustrated.....	5 00
BURGH (N. P.). Modern Marine Engineering, applied to Paddle and Screw Propulsion. Consisting of 36 colored plates, 259 practical woodcut illustrations,	

- and 403 pages of descriptive matter. The whole being an exposition of the present practice of James Watt & Co., J. & G. Rennie, R. Napier & Sons, and other celebrated firms. Thick quarto, half morocco. 10 00
- BURT (W. A.).** Key to the Solar Compass, and Surveyor's Companion. Comprising all the rules necessary for use in the field; also description of the Linear Surveys and Public Land System of the United States. Notes on the Barometer, Suggestions for an Outfit for a Survey of Four Months, etc. Fifth edition. Pocket-book form, tuck 2 50
- CALDWELL, (G. C.), and A. A. BRENNEMAN.** Manual of Introductory Chemical Practice. For the use of Students in Colleges and Normal and High Schools. Fourth edition, revised and corrected. 8vo, cloth Illustrated..... 1 50
- CAMPIN (FRANCIS).** On the Construction of Iron Roofs. A Theoretical and Practical Treatise, with wood cuts and Plates of Roofs recently executed. 8vo, cloth..... 2 00
- CARTER (E. T.).** Motive Power and Gearing for Electrical Machinery. A Treatise on the Theory and Practice of the Mechanical Equipment of Power Stations for Electric supply and for Electric Traction. 8vo, cloth. Illustrated..... 5 00
- CHAMBER'S MATHEMATICAL TABLES,** consisting of logarithms of Numbers 1 to 108,000, Trigonometrical, Nautical, and other tables. New edition. 8vo, cloth..... 1 75
- CHAUVENET (Prof. W.).** New Method of Correcting Lunar Distances, and Improved Method of Finding the Error and Rate of a Chronometer, by Equal Altitudes. 8vo, cloth 2 00
- CHRISTIE (W. WALLACE).** Chimney Design and Theory. A Book for Engineers and Architects, with numerous half-tone illustrations and plates of famous chimneys. 12mo, cloth..... 3 00
- CHURCH (JOHN A.).** Notes of a Metallurgical Journey in Europe. 8vo, cloth..... 2 00
- CLARK D. (KINNEAR, C. E.).** A Manual of Rules, Tables and Data for Mechanical Engineers. Based

- on the most recent investigations. Illustrated with numerous diagrams. 1,012 pages. 8vo, cloth. Sixth edition 5 00
 Half morocco..... 7 50
- ◀ **CLARK D. (KINNEAR, C. E.).** Fuel; its Combustion and Economy, consisting of abridgements of Treatise on the Combustion of Coal. By C. W. Williams; and the Economy of Fuel, by T. S. Prideaux. With extensive additions in recent practice in the Combustion and Economy of Fuel, Coal, Coke, Wood, Peat, Petroleum, etc. Fourth edition. 12mo, cloth.... 1 50
- The Mechanical Engineer's Pocket-book of Tables, Formulæ, Rules and Data. A Handy Book of Reference for Daily Use in Engineering Practice. 16mo, morocco. Second edition..... 8 00
- Tramways, their Construction and Working, embracing a comprehensive history of the system, with accounts of the various modes of traction, a description of the varieties of rolling stock, and ample details of Cost and Working Expenses. Second edition. Re-written and greatly enlarged, with upwards of 400 illustrations. Thick 8vo. cloth. 9 00
- The Steam Engine. A Treatise on Steam Engines and Boilers; comprising the Principles and Practice of the Combustion of Fuel, the Economical Generation of Steam, the Construction of Steam Boilers, and the Principles, Construction and Performance of Steam Engines, Stationary, Portable, Locomotive and Marine, exemplified in Engines and Boilers of recent date. 1,300 figures in the text, and a series of folding plates drawn to scale. 2 vols. 8vo, cloth. 15 00
- ◀ **CLARK (JACOB M.).** A new System of Laying Out Railway Turn-outs instantly, by inspection from Tables. 12mo, leatherette.... 1 00
- ◀ **CLAUSEN-THU: (W.).** The A. B. C. Universal Commercial Electric Telegraphic Code, especially adapted for the use of Financiers, Merchants, Ship-owners, Brokers, Agent, etc. Fourth edition 8vo, cloth. 5 00
- The A1 Universal Commercial Electric Telegraphic Code. Over 1,240 pp., and nearly 90,000 variations. 8vo, cloth..... 7 50

- CLEEMANN (THOS. M.).** The Railroad Engineer's Practice. Being a Short but Complete Description of the Duties of the Young Engineer in the Preliminary and Location Surveys and in Construction. Fourth edition. Revised and enlarged. Illustrated. 13mo, cloth 1 50
- CLERK (DUGALD).** Auto-cars or Horseless Vehicles. About 300 pp., 60 illustrations..... (In Press.)
- CLEVINGER (S. R.).** A Treatise on the Method of Government Surveying as prescribed by the U. S. Congress and Commissioner of the General Land Office, with complete Mathematical, Astronomical and Practical Instructions for the use of the United States Surveyors in the field. 16mo, morocco..... 2 50
- COFFIN (Prof. J. H. C.).** Navigation and Nautical Astronomy. Prepared for the use of the U. S. Naval Academy. New Edition. Revised by Commander Charles Belknap. 52 woodcut illustrations. 12mo, cloth net. 3 50
- COLE (R. S., M. A.).** A Treatise on Photographic Optics. Being an account of the Principles of Optics, so far as they apply to Photography. 12mo, cloth, 103 illustrations and folding plates..... 2 50
- COLLINS (JAS. E.).** The private Book of Useful Alloys, and Memoranda for Goldsmiths, Jewelers, etc. 18mo, cloth ... 50
- CORNWALL (Prof. H. B.).** Manual of Blow-pipe Analysis, Qualitative and Quantitative. With a Complete System of Descriptive Mineralogy. 8vo, cloth. With many illustrations..... 2 50
- CRAIG (B. F.).** Weights and Measures. An Account of the Decimal System, with Tables of Conversion for Commercial and Scientific Uses. Square 82mo, limp cloth 50
- CROCKER (F. B.).** Electric Lighting. A Practical Exposition of the Art, for use of Engineers, Students, and others interested in the Installation or Operation of Electrical Plants. Second edition. Revised. 8vo, cloth. Vol. 1. The Generating Plant 3 00
Vol. 2..... (In Press.)

-
- CROCKER, (F. B.), and S. S. WHEELER.** The Practical Management of Dynamos and Motors. Fourth edition (eighth thousand). Revised and enlarged. With a special chapter by H. A. Foster. 12mo, cloth. Illustrated..... 1 00
- CUMMING (LINNÆUS, M. A.).** Electricity treated Experimentally. For the use of Schools and Students. New edition. 12mo, cloth..... 1 50
- DAVIES (E. H.).** Machinery for Metalliferous Mines. A Practical Treatise for Mining Engineers, Metallurgists and Manufacturers. With upwards of 300 illustrations. 8vo, cloth 5 00
- DAVIS (JOHN W., C. E.).** Formulæ for the Calculation of Railroad Excavation and Embankment, and for finding Average Haul. Second edition. Octavo, half roan..... 1 50
- DAY (CHARLES).** The Indicator and its Diagrams. With Chapters on Engine and Boiler Testing; Including a Table of Piston Constants compiled by W. H. Fowler. 12mo, cloth. 125 illustrations..... 2 00
- DERR (W. L.).** Block Signal Operation. A Practical Manual. Oblong, cloth..... 1 50
- DIXON (D. B.).** The Machinist's and Steam Engineer's Practical Calculator. A Compilation of Useful Rules and Problems arithmetically solved, together with General Information applicable to Shop-Tools, Mill-Gearing, Pulleys and Shafts, Steam-Boilers and Engines. Embracing valuable Tables and Instruction in Screw cutting, Valve and Link Motion, etc. 16mo, full morocco, pocket form... 1 25
- DODD (GEO.).** Dictionary of Manufactures, Mining, Machinery, and the Industrial Arts. 12mo, cloth ... 1 50
- DORR (B. F.).** The Surveyor's Guide and Pocket Table Book. 18mo, morocco flaps. Third edition... 2 00
- DRAPER (C. H.).** An Elementary Text Book of Light, Heat and Sound, with Numerous Examples. Fourth edition. 12mo, cloth. Illustrated.. 1 00
- Heat and the Principles of Thermo-Dynamics. With many illustrations and numerical examples. 12mo, cloth..... 1 50

-
- DUBOIS (A. J.).** The New Method of Graphical Statics. With 60 illustrations. 8vo, cloth..... 1 50
- EDDY (Prof. H. T.).** Researches in Graphical Statics. Embracing New Constructions in Graphical Statics, a New General Method in Graphical Statics, and the Theory of Internal Stress in Graphical Statics. 8vo, cloth..... 1 50
- Maximum Stresses under Concentrated Loads. Treated graphically. Illustrated. 8vo, cloth..... 1 50
- EBSSLER (M.).** The Metallurgy of Gold; a Practical Treatise on the Metallurgical Treatment of Gold-Bearing Ores, including the Processes of Concentration and Chlorination, and the Assaying, Melting and Refining of Gold. Fourth Edition, revised and greatly enlarged. 187 illustrations. 12mo, cloth 5 00
- The Metallurgy of Silver; a Practical Treatise on the Amalgamation, Roasting and Lixivation of Silver Ores, including the Assaying, Melting and Refining of Silver Bullion. 124 illustrations. Second edition, enlarged, 12mo, cloth 4 00
- The Metallurgy of Argentiferous Lead; a Practical Treatise on the Smelting of Silver Lead Ores and the Refining of Lead Bullion. Including Reports on Various Smelting Establishments and Descriptions of Modern Smelting Furnaces and Plants in Europe and America. With 183 illustrations. 8vo, cloth 5 00
- Cyanide Process for the Extraction of Gold and its Practical Application on the Witwatersrand Gold Fields in South Africa. Second edition. Enlarged. 8vo, cloth. Illustrations and folding plates..... 3 00
- A Hand-book on Modern Explosives, being a Practical Treatise on the Manufacture and use of Dynamite, Gun Cotton, Nitro-Glycerine and other Explosive Compounds, including the manufacture of Collodion-Cotton, with chapters on explosives in practical application. Second edition, enlarged with 150 illustrations. 12mo, cloth..... 5 00
- ELIOT (C. W.), and STORER (F. H.).** A comprehensive Manual of Qualitative Chemical Analysis. Revised with the co-operation of the authors, by Prof. William R. Nichols. Illustrated. Nineteenth edition, newly revised by Prof. W. B. Lindsay, 12mo. cloth..... 1 25

-
- ELLIOT (Maj. GEO. H.).** European Light-House Systems. Being a Report of a Tour of Inspection made in 1878. 51 engravings and 21 woodcuts. 8vo, cloth 5 00
- ELLISON, (LEWIS M.).** Practical Application of the Indicator. With reference to the adjustment of Valve Gear on all styles of Engines. Second edition, revised. 8vo. cloth, 100 illustrations... 2 00
- EVERETT (J. D.).** Elementary Text book of Physics. Illustrated. Seventh edition 12mo, cloth 1 50
- EWING (Prof. A. J.).** The Magnetic Induction in Iron and other metals. 159 illustrations. 8vo, cloth 4 00
- FANNING (J. T.).** A Practical Treatise on Hydraulic and Water-Supply Engineering. Relating to the Hydrology, Hydro-dynamics, and Practical Construction of Water-Works in North America. 180 illustrations. 8vo, cloth. Fourteenth edition, revised, enlarged, and new tables and illustrations added. 650 pages..... 5 00
- FISH (J. C. L.).** Lettering of Working Drawings. Thirteen plates, with descriptive text. Oblong, 9x12½, boards..... 1 00
- FISKE (Lieut. BRADLEY A., U. S. N.).** Electricity in Theory and Practices or, The Elements of Electrical Engineering. Eighth edition. 8vo, cloth 2 50
- FISHER (H. K. C. and DABBY, W. C.).** Students' Guide to Submarine Cable Testing. 8vo, cloth..... 2 50
- FISHER (W. C.).** The Potentiometer and its Adjuncts. 8vo, cloth..... 2 25
- FLEISCHMANN (W.).** The Book of the Dairy. A Manual of the Science and Practice of Dairy Work. Translated from the German, by C. M. Aikman and R. Patrick Wright. 8vo, cloth..... 4 00
- FLEMING (Prof. J. A.).** The Alternate Current Transformer in Theory and Practice. Vol. 1—The Induction of Electric Currents; 611 pages. New edition. Illustrated. 8vo, cloth..... 5 00
- Vol. 2. The Utilization of Induced Currents. Illustrated. 8vo, cloth 5 00
- Electric Lamps and Electric Lighting. Being a course of four lectures delivered at the Royal Institution, April-May, 1894. 8vo, cloth, fully illustrated 3 00

-
- FLEMING (Prof. J. A.).** Electrical Laboratory Notes and Forms, Elementary and advanced. 4to, cloth, illustrated..... 5 00
- FOLEY (NELSON), and THOS. PRAY, Jr.** The Mechanical Engineers' Reference Book for Machine and Boiler Construction, in 2 parts. Part 1—General Engineering Data. Part 2—Boiler Construction. With fifty-one plates and numerous illustrations, specially drawn for this work. Folio, half mor ... 25 00
- FORNEY (MATTHIAS N.).** Catechism of the Locomotive. Second edition, revised and enlarged. Forty-sixth thousand. 8vo, cloth..... 3 50
- FOSTER (Gen. J. G., U. S. A.).** Submarine Blasting in Boston Harbor, Massachusetts. Removal of Tower and Corwin Rocks. Illustrated with 7 plates. 4to, cloth..... 3 50
- FOSTER (H. A.).** Electrical Engineers' Pocket Book. 1000 pages with the collaboration of Eminent Specialists .. (In press)
- FOSTER (JAMES).** Treatise on the Evaporation on Saccharine, Chemical and other Liquids by the Multiple System in Vacuum and Open Air. Second edition. Diagrams and large plates. 8vo, cloth.... 7 50
- FOWLER.** Mechanical Engineers' Pocket Book for 1900..... 1 00
- FOX (WM.), and C. W. THOMAS, M. E.** A Practical Course in Mechanical Drawing. 12mo, cloth with plates 1 25
- FRANCIS (JAS. B., C. E.).** Lowell Hydraulic Experiments. Being a selection from experiments on Hydraulic Motors, on the Flow of Water over Weirs, in open Canals of uniform rectangular section, and through submerged Orifices and diverging Tubes. Made at Lowell, Mass. Fourth edition, revised and enlarged, with many new experiments, and illustrated with 23 copper-plate engravings. 4to, cloth..... 15 00
- FROST (GEO. H.).** Engineer's Field Book. By C. S. Cross. To which are added seven chapters on Railroad Location and Construction. Fourth edition. 12mo, cloth ... 1 00

- FULLER (GEORGE W.).** Report on the Investigations into the Purification of the Ohio River Water at Louisville, Kentucky, made to the President and Directors of the Louisville Water Company. Published under agreement with the Directors. 4to, cloth. 8 full page plates.....net 10 00
- GEIPEL (WM.), and KILGOUR, (M. H.)** A Pocketbook of Electrical Engineering Formula. Illustrated. 18mo, morocco..... 8 00
Large paper edition, wide margins. 8vo, morocco, gilt edges 5 00
- GERBER (NICHOLAS).** Chemical and Physical Analysis of Milk, Condensed Milk and Infant's Milk-Food. 8vo, cloth..... 1 25
- GIBBS (WILLIAM F.).** Lighting by Acetylene, Generators, Burners and Electric Furnaces. With 66 illustrations. Second edition revised. 12mo, cloth.. 1 50
- GILLMORE (GEN. Q. A.).** Treatise on Limes, Hydraulic Cements, and Mortars. Papers on Practical Engineering, United States Engineer Department, No 9, containing Reports of numerous Experiments conducted in New York City during the years of 1858 to 1861, inclusive. With numerous illustrations. 8vo cloth..... 4 00
- Practical Treatise on the Construction of Roads, Streets, and Pavements, with 70 illustrations. 12mo, cloth..... 2 00
- Report on Strength of Building Stones in the United States, etc. 8vo, illustrated cloth..... 1 00
- GOLDING (HENRY A.).** The Theta-Phi Diagram. Practically applied to Steam, Gas, Oil and Air Engines. 12mo, cloth. Illustrated.net 1 25
- GOODEVE (T. M.).** A Text-Book on the Steam Engine. With a Supplement on Gas-Engines. Twelfth Edition, enlarged. 143 illustrations. 12mo, cloth... 2 00
- GORDON (J. E. H.).** School Electricity. Illustrations. 12mo, cloth..... 2 00
- GORE (G., F. R. S.).** The Art of Electrolytic Separation of Metals, etc. (Theoretical and Practical.) Illustrated. 8vo, cloth..... 3 50
- Electro Chemistry Inorganic. Third Edition. 8vo, cloth..... 80

-
- GOULD (E. SHERMAN).** The Arithmetic of the Steam Engine. 8vo, cloth..... 1 00
- GRIFFITHS (A. D., Ph. D.).** A Treatise on Manures, or the Philosophy of Manuring. A Practical Handbook for the Agriculturist, Manufacturer and Student. 12mo, cloth..... 3 00
- GROVER (FREDERICK).** Practical Treatise on Modern Gas and Oil Engines. 8vo, cloth. Illustrated 2 00
- GURDEN (RICHARD LLOYD).** Traverse Tables: computed to 4 places Decimals for every ° of angle up to 100 of Distance. For the use of Surveyors and Engineers. New Edition. Folio, half morocco. .. 7 50
- GUY ARTHUR (F.).** Electric Light and Power, giving the Result of Practical Experience in Central Station Work. 8vo, cloth. Illustrated.. .. 2 50
- HAEDER (HERMAN C. E.).** A Hand book on the Steam Engine. With especial reference to small and medium sized engines. English edition re-edited by the author from the second German edition, and translated with considerable additions and alterations by H. H. P. Powels. 12mo, cloth. Nearly 1100 illustrations..... 3 00
- HALL (WM. S. Prof.).** Elements of the Differential and Integral Calculus. Second edition. 8vo, cloth. Illustrated.....net 2 25
- HALSEY (F. A.).** Slide Valve Gears; an Explanation of the action and Construction of Plain and Cut-off Slide Valves. Illustrated. 12mo, cloth. Sixth edition..... 1 50
- The Use of the Slide Rule. Illustrated with diagrams and folding plates. 16mo, boards..... 50
- HAMILTON (W. G.).** Useful Information for Railway Men. Tenth Edition, revised and enlarged. 562 pages, pocket form. Morocco, gilt..... 2 00
- HANCOCK (HERBERT).** Text Book of Mechanics and Hydrostatics, with over 500 diagrams. 8vo, cloth ... 1 75
- HARRISON (W. B.).** The Mechanics' Tool Book. With Practical Rules and Suggestions for use of Machinists, Iron-Workers, and others. Illustrated with 44 engravings. 12mo, cloth..... 1 50

HASKINS (C. H.). The Galvanometer and Its Uses. A Manual for Electricians and Students. Fourth edition. 12mo, cloth.....	1 50
HAWKE (WILLIAM H.). The Premier Cipher Telegraphic Code Containing 100,000 Words and Phrases. The most complete and most useful general code yet published. 4to, cloth	5 00
— 100,000 Words; Supplement to the Premier Code. All the words are selected from the official vocabulary. Oblong quarto, cloth	4 20
HAWKINS (C. C.) and WALLIS (F.). The Dynamo; its Theory, Design and Manufacture. 190 illustrations, 12mo, cloth	3 00
HAY (ALFRED). Principles of Alternate-Current Working. 12mo, cloth, illustrated	2 00
HEAP (Major D. P., U. S. A.). Electrical Appliances of the Present Day. Report of the Paris Electrical Exposition of 1881. 250 illustrations. 8vo, cloth.....	2 00
HEAVISIDE (OLIVER). Electromagnetic Theory. 8vo, cloth, two volumes (ac).....	5 00
HENRICI (OLAUS). Skeleton Structures, Applied to the Building of Steel and Iron Bridges. Illustrated	1 50
HERRMANN (GUSTAV). The Graphical Statics of Mechanism. A Guide for the Use of Machinists, Architects, and Engineers; and also a Text-book for Technical Schools. Translated and annotated by A. P. Smith, M. E. 12mo, cloth, 7 folding plates. Third Edition.....	2 00
HERMANN (FELIX). Painting on Glass and Porcelain and Enamel Painting. On the Basis of Personal Practical Experience of the Condition of the Art up to date. Translated by Charles Salter. Second greatly enlarged edition. 8vo, cloth, Illustrations, net.....	3 50
HEWSON (WM.). Principles and Practice of Embanking Lands from River Floods, as applied to the Levees of the Mississippi. 8vo, cloth.....	2 00
HILL (JOHN W.). The Purification of Public Water Supplies. Illustrated with valuable Tables, Diagrams and Cuts. 8vo, cloth, 304 pages.....	3 00
— The Interpretation of Water Analyses..(In Press)	

HOBBS (W. R. P.). The Arithmetic of Electrical Measurements with numerous examples. Fully Worked, 12mo, cloth.....	.50
HOFF (WM. B., Com. U. S. Navy.). The Avoidance of Collisions at Sea. 18mo, morocco75
HOLLEY (ALEXANDER L.). Railway Practice. American and European Railway practice in the Economical Generation of Steam. 77 lithographed plates. Folio, cloth	12 00
HOLMES (A. BROMLEY). The Electric Light Popularly Explained. Fifth Edition. Illustrated. 12mo, paper40
HOPKINS (NEVIL M.). Model Engines and small Boats. New Methods of Engine and Boiler Making with a chapter on Elementary Ship Design and Construction. 12mo, cloth.....	1 25
HOSPITALIER (E.). Polyphased Alternating Currents. Illustrated. 8vo, cloth.	1 40
HOWARD (C. R.). Earthwork Mensuration on the Basis of the Prismoidal Formulae. Containing Simple and Labor-saving Methods of obtaining Prismoidal Contents directly from End Areas. Illustrated by Examples and accompanied by Plain Rules for Practical Uses. Illustrated. 8vo, cloth... ..	1 50
HUMBER (WILLIAM, C. E.). A Handy Book for the Calculation of Strains in Girders and Similar Structures, and their Strength; Consisting of Formulae and Corresponding Diagrams, with numerous details for practical application, etc. Fourth Edition. 12mo, cloth.....	2 50
HURST (GEORGE H.). Colour; A Hand-book of the Theory of Colour. Containing ten coloured plates and 72 diagrams. 8vo, cloth. Illustrated. Price....	2 50
— Lubricating Oils, Fats and Greases. Their Origin, Preparation, Properties, Uses and Analysis. 313 pages, with 65 illustrations. 8vo, cloth.....	3 00
— Soaps; A Practical Manual of the Manufacture of Domestic, Toilet and other Soaps. Illustrated with 66 Engravings. 8vo, cloth.....	5 00

-
- HUTCHINSON (W. B.).** Patents and How to Make Money out of Them. Member of New York Bar. 12mo, cloth. New York, 1899 1 25
- HUTTON (W. S.).** Steam Boiler Construction. A Practical Hand-book for Engineers, Boiler Makers and Steam Users. Containing a large collection of rules and data relating to recent practice in the design, construction, and working of all kinds of stationary, locomotive and marine steam boilers. With upwards of 500 illustrations. Third edition. Carefully revised and much enlarged. 8vo, cloth... 6 00
- **Practical Engineer's Hand-book**, Comprising a treatise on Modern Engines and Boilers, Marine, Locomotive and Stationary. Fourth edition. Carefully revised with additions. With upwards of 570 illustrations. 8vo, cloth..... 7 00
- **The Works' Manager's Hand-book of Modern Rules, Tables, and Data for Civil and Mechanical Engineers.** Millwrights and Boiler Makers, etc., etc. With upwards of 150 illustrations. Fifth edition. Carefully revised, with additions. 8vo, cloth..... 6 00
- INNES (CHARLES H.).** Problems in Machine Design. For the Use of Students, Draughtsmen and others. 12mo, cloth..... 1 50
- **Centrifugal Pumps, Turbines and Water Motors.** Including the Theory and Practice of Hydraulics. 12mo, cloth..... 1 50
- ISHERWOOD (B. F.).** Engineering Precedents for Steam Machinery. Arranged in the most practical and useful manner for Engineers. With illustrations. 2 vols. in 1. 8vo, cloth..... 2 50
- JAMESON (CHARLES D.).** Portland Cement. Its Manufacture and Use. 8vo, cloth..... 1 50
- JAMIESON (ANDREW C. E.).** A Text-Book on Steam and Steam Engines. Specially arranged for the use of Science and Art, City and Guilds of London Institute, and other Engineering Students. Tenth edition. Illustrated. 12mo, cloth..... 3 00
- **Elementary Manual on Steam and the Steam Engine.** Specially arranged for the use of First-Year Science and Art, City and Guilds of London Institute, and other Elementary Engineering Students. Third edition. 12mo, cloth 1 40

- JANNETTAZ (EDWARD).** A Guide to the Determination of Rocks: being an Introduction to Lithology. Translated from the French by G. W. Plympton, Professor of Physical Science at Brooklyn Polytechnic Institute. 12mo, cloth..... 1 50
- JOHNSTON, Prof. J. F. W., and CAMERON, Sir CHAS.** Elements of Agricultural Chemistry and Geology. Seventeenth edition. 12mo, cloth..... 2 00
- JOYNSON (F. H.).** The Metals used in Construction. Iron, Steel, Bessemer Metal, etc. Illustrated. 12mo, cloth 75
- Designing and Construction of Machine Gearing. Illustrated. 8vo, cloth.. 2 00
- KANSAS CITY BRIDGE (THE.)** With an Account of the Regimen of the Missouri River and a Description of the Methods used for Founding in that River. By O. Chanute, Chief Engineer, and George Morrison, Assistant Engineer. Illustrated with 5 lithographic views and 12 plates of plans. 4to, cloth... 6 00
- KAPP (GISBERT C. E.).** Electric Transmission of Energy and its Transformation, Subdivision, and Distribution. A Practical Hand-book. Fourth edition, revised. 12mo, cloth..... 3 50
- Dynamos, Alternators and Transformers. 138 Illustrations. 12mo, cloth..... 4 00
- KEMPE (H. R.).** The Electrical Engineer's Pocket-Book of Modern Rules, Formulæ, Tables and Data. Illustrated. 32mo, mor. gilt..... 1 75
- KENNELLY (A. E.).** Theoretical Elements of Electro Dynamic Machinery. 8vo, cloth..... 1 50
- KILGOUR, M. H., SWAN, H., and BIGGS, C. H.** W. Electrical Distribution; its Theory and Practice. 174 Illustrations. 12mo, cloth..... 4 00
- KING (W. H.).** Lessons and Practical Notes on Steam. The Steam Engine, Propellers, etc., for Young Marine Engineers, Students, and others. Revised by Chief Engineer J. W. King, United States Navy. Nineteenth edition, enlarged. 8vo, cloth ... 2 00
- KINGDON (J. A.).** Applied Magnetism. An introduction to the Design of Electromagnetic Apparatus. 8vo, cloth..... 3 00

-
- KIRKALDY (WM. G.).** Illustrations of David Kirkaldy's System of Mechanical Testing, as Originated and Carried On by him during a Quarter of a Century. Comprising a Large Selection of Tabulated Results, showing the Strength and other Properties of Materials used in Construction. with explanatory Text and Historical Sketch. Numerous engravings and 25 lithographed plates. 4to, cloth..... 20 00
- KIRKWOOD (JAS. P.).** Report on the Filtration of River Waters for the supply of Cities, as practised in Europe, made to the Board of Water Commissioners of the City of St. Louis. Illustrated by 80 double-plate engravings. 4to, cloth..... 7 50
- LARRABEE (C. S.).** Cipher and Secret Letter and Telegraphic Code, with Hog's Improvements. The most perfect Secret Code ever invented or discovered. Impossible to read without the key. 18mo, cloth..... 60
- LAZELLE (H. M.).** One Law in Nature. A New Corpuscular Theory comprehending Unity of Force, Identity of Matter, and its Multiple Atom Constitution, etc. 12mo, cloth..... 1 50
- LEASK (A. RITCHIE).** Breakdowns at Sea and How to Repair Them. With eighty-nine illustrations. 8vo, cloth. Second edition..... 2 00
- Triple and Quadruple Expansion Engines and Boilers and their Management. With fifty-nine illustrations. Third edition, revised. 12mo, cloth... 2 00
- Refrigerating Machinery: Its Principles and Management. With sixty-four illustrations. 12mo, cloth..... 2 00
- LECKY (S. T. S.).** "Wrinkles" in Practical Navigation. With 130 illustrations. 8vo, cloth. Ninth edition, revised..... 8 40
- LEVY (C. L.).** Electric Light Primer. A Simple and Comprehensive Digest of all of the most important facts connected with the running of the dynamo, and electric lights, with precautions for safety. For the use of persons whose duty it is to look after the plant. 8vo, paper..... 50

- LIVACHE (ACH., Ingenieur Civil Des Mines).** The Manufacture of Varnishes, Oil Crushing, Refining and Boiling and Kindred Industries. Translated from the French and greatly extended, by John Geddes McIntosh. 8vo, cloth. Illustrated.....net 5 00
- LOCKE (ALFRED G., and CHARLES G.)** A Practical Treatise on the Manufacture of Sulphuric Acid. With 77 Constructive Plates drawn to scale Measurements, and other Illustrations. Royal 8vo, cloth. 10 00
- LOCKERT (LOUIS).** Petroleum Motor-Cars. 12mo, cloth 1 50
- LOCKWOOD (THOS. D.).** Electricity, Magnetism, and Electro-Telegraphy. A Practical Guide for Students, Operators, and Inspectors. 8vo, cloth. Third edition..... 2 50
- Electrical Measurement and the Galvanometer; its Construction and Uses. Second edition. 32 illustrations. 12mo, cloth..... 1 50
- LODGE (OLIVER J.)** Elementary Mechanics, including Hydrostatics and Pneumatics. Revised edition. 12mo, cloth 1 50
- LORING (A. E.).** A Pocket-Book of the Electro-Magnetic Telegraph. For use of the U. S. Navy. Cloth. 50
Morocco..... 75
..... 1 00
- LUCE (Com. S. B.).** Pocket-Book of Seamanship. The Equipping and Hoisting of Vessels under Sail or Steam. For the use of the U. S. Naval Academy. Revised and enlarged edition, by Lt. Wm. S. Benson. 8vo, cloth.....10 00
- LUNGE (GEO.).** A Theoretical and Practical Treatise on the Manufacture of Sulphuric Acid and Alkali with the Collateral Branches. Vol. I. Sulphuric Acid, Second edition, revised and enlarged. 342 illustrations. 8vo, cloth.....15 00
Vol. II. Second edition, revised and enlarged. 8vo, cloth.....16 80
Vol III. 8vo, cloth. New edition, 1896.....15 00
- LUNGE. (GEO.), and HURTER, F.** The Alkali Maker's Pocket-Book. Tables and Analytical Methods for Manufacturers of Sulphuric Acid, Nitric Acid, Soda, Potash and Ammonia. Second edition. 12mo, cloth 3 00

-
- LUQUER (LEA McILVAINE, Ph. D.). Minerals in Rock Sections.** The Practical Method of Identifying Minerals in Rock Sections with the microscope. Especially arranged for students in Technical and Scientific Schools. 8vo. cloth. Illustrated...net 1 50
- MACCORD (Prof. C. W.). A Practical Treatise on the Slide-Valve by Eccentrics,** examining by methods the action of the Eccentric upon the Slide-Valve, and explaining the practical processes of laying out the movements, adapting the Valve for its various duties in the Steam Engine. Second edition. Illustrated. 4to, cloth..... 2 50
- MAGUIRE (Capt. EDWARD, U. S. A.). The Attack and Defence of Coast Fortifications.** With Maps and Numerous Illustrations. 8vo, cloth..... 2 50
- MAGUIRE (WM. R.). Domestic Sanitary Drainage and Plumbing Lectures on Practical Sanitation.** 332 illustrations. 8vo..... 4 00
- MARKS (EDWARD C. R.). Mechanical Engineering Materials: their Properties and Treatment in Construction.** 12mo, cloth. Illustrated..... 60
- Notes on the Construction of Cranes and Lifting Machinery. 12mo, cloth... .. 1 00
- MARKS (G. C.). Hydraulic Machinery Employed in the Concentration and Transmission of Power.** 12mo, cloth..... 1 25
- MAVER (WM.). American Telegraphy: Systems, Apparatus, Operation.** 450 illustrations. 8vo, cloth. 3 50
- MAYER (Prof. A. M.). Lecture Notes on Physics.** 8vo, cloth..... 2 00
- McCULLOCH (Prof. R. S.). Elementary Treatise on the Mechanical Theory of Heat, and its application to Air and Steam Engines.** 8vo, cloth..... 3 50
- McNEILL (BEDFORD). McNeill's Code.** Arranged to meet the requirements of Mining, Metallurgical and Civil Engineers, Directors of Mining, Smelting and other Companies, Bankers, Stock and Share Brokers, Solicitors, Accountants, Financiers, and General Merchants. Safety and Secrecy. 8vo, cloth. 6 00

- MERRILL (Col. WM. E., U. S. A.).** Iron Truss Bridges for Railroads. The method of calculating strains in Trusses, with a careful comparison of the most prominent Trusses, in reference to economy in combination, etc. Illustrated. 4to, cloth. Fourth Edition 5 00
- METAL TURNING.** By a Foreman Pattern Maker. Illustrated with 81 engravings. 12mo, cloth 1 50
- MINIFIE (WM.).** Mechanical Drawing. A Text-book of Geometrical Drawing for the use of Mechanics and Schools, in which the Definitions and Rules of Geometry are familiarly explained; the Practical Problems are arranged from the most simple to the more complex, and in their description technicalities are avoided as much as possible. With Illustrations for Drawing Plans, Sections, and Elevations of Railways and Machinery; an Introduction to Isometrical Drawing, and an Essay on Linear Perspective and Shadows. Illustrated with over 200 diagrams engraved on steel. Ninth thousand. With an appendix on the Theory and Application of Colors. 8vo, cloth 4 00
- Geometrical Drawing. Abridged from the Octavo edition, for the use of schools. Illustrated with 48 steel plates. Ninth edition. 12mo, cloth 2 00
- MODERN METEOROLOGY.** A Series of Six Lectures, delivered under the auspices of the Meteorological Society in 1870. Illustrated. 12mo, cloth . 1 50
- MOREING (C. A.), and NEAL (THOMAS).** Telegraphic Mining Code Alphabetically arranged. Second edition. 8vo, cloth 8 40
- MORRIS (E.).** Easy Rules for the Measurement of Earthworks by means of the Prismoidal Formula. 8vo, cloth. Illustrated 1 50
- MOSES (ALFRED J.), and PARSONS, C. L.** Elements of Mineralogy, Crystallography and Blowpipe Analysis from a practical standpoint. Second thousand. 8vo, cloth. 366 illustrations. net 2 00
- MOSES (ALFRED J.).** The Characters of Crystals. An Introduction to Physical Crystallography, containing 321 Illustrations and Diagrams. 8vo, 211 pp. net 2 00

- MOELLER (F. C. G.).** Krupp's Steel Works. With 88 illustrations. By Felix Schmidt and Montan. Authorized Translation from the German. 4to, cloth.....(In Press.)
- MULLIN (JOSEPH P., M. E.).** Modern Moulding and Pattern-Making. A Practical Treatise upon Pattern Shop and Foundry Work; embracing the Moulding of Pulleys, Spur Gears, Worm Gears, Balance-Wheels, Stationary Engine and Locomotive Cylinders, Globe Valves, Tool Work, Mining Machinery, Screw Propellers. Pattern-Shop Machinery, and the latest improvements in English and American Cupolas; together with a large collection of original and carefully selected Rules and Tables for everyday use in the Drawing Office, Pattern-Shop and Foundry. 12mo, cloth. Illustrated..... 2 50
- MUNRO (JOHN C. E.), and JAMIESON ANDREW C. E.** A Pocket-book of Electrical Rules and Tables for the use of Electricians and Engineers. Thirteenth edition, revised and enlarged. With numerous diagrams. Pocket size. Leather.. 2 50
- MURPHY (J. G., M. E.).** Practical Mining. A Field Manual for Mining Engineers. With Hints for Investors in Mining Properties. 16mo, morocco tucks..... 1 00
- NAQUET (A.).** Legal Chemistry. A Guide to the Detection of Poisons, Falsification of Writings, Adulteration of Alimentary and Pharmaceutical Substances, Analysis of Ashes, and examination of Hair, Coins, Arms, and Stains, as applied to Chemical Jurisprudence. Translated from the French, by J. P. Battershall, Ph. D., with a preface by C. F. Chaudier, Ph. D., M. D., LL. D. 12mo, cloth..... 2 00
- NASMITH (JOSEPH).** The Student's Cotton Spinning. Third edition, revised and enlarged. 8vo, cloth. 622 pages. 250 Illustrations..... 3 00
- NEWALL (JOHN W.).** Plain Practical Directions for Drawing, Sizing and Cutting Bevel-Gears, showing how the Teeth may be cut in a Plain Milling Machine or Gear Cutter so as to give them a correct shape from end to end; and showing how to get out all particulars for the Workshop without making any Drawings. Including a Full Set of Tables of Reference. Folding plates. 8vo, cloth..... 1 50

- NEWCOMB (EDWARD W.).** Stepping Stones to Photography. 12mo, cloth. Illustrated. N. Y. 1899. (In Press.)
- NEWLANDS (JAMES).** The Carpenters' and Joiners' Assistant: being a Comprehensive Treatise on the Selection, Preparation and Strength of Materials, and the Mechanical Principles of Framing. Illustrated. Folio, half morocco..... 15 00
- NIPHER (FRANCIS E., A. M.).** Theory of Magnetic Measurements, with an appendix on the Method of Least Squares. 12mo, cloth 1 00
- NOAD (HENRY M.).** The Students' Text-Book of Electricity. A new edition, carefully revised. With an Introduction and additional chapters by W. H. Preece. With 471 illustrations. 12mo, cloth..... 4 00
- NUGENT (E.).** Treatise on Optics; or, Light and Sight theoretically and practically treated, with the application to Fine Art and Industrial Pursuits. With 103 illustrations. 12mo, cloth. 1 50
- O'CONNOR (HENRY).** The Gas Engineer's Pocket-Book. Comprising Tables, Notes and Memoranda; relating to the Manufacture, Distribution and Use of Coal Gas and the Construction of Gas Works. 12mo, full leather, gilt edges.... 3 50
- ODIN (M. A.).** Standard Polyphase Apparatus and Systems. Fully illustrated 3 00
- PAGE (DAVID).** The Earth's Crust, A Handy Outline of Geology. 16mo, cloth..... 75
- PALAZ (A., ScD.).** A Treatise on Industrial Photometry, with special application to Electric Lighting. Authorized translation from the French, by George W. Patterson, Jr. Second edition, revised. 8vo, cloth. Illustrated..... 4 00
- PARSHALL (H. F.), and HOBART H. M.** Armature Windings of Electric Machines. With 140 full page plates, 65 tables, and 165 pages of descriptive letter-press. 4to, cloth..... 7 50
- PARSHALL (H. F.), and EVAN PARR.** Electrical Equipment of Tramways..... (In Press.)
- PEIRCE (B.).** System of Analytic Mechanics. 4to, cloth 10 00
- Linear Associative Algebra. New edition, with addenda and notes, by C. L. Pierce. 4to, cloth ... 4 00

- PERRINE (F. A. C., A. M., D. Sc.).** Conductors for Electrical Distribution; their Manufacture and Materials, the Calculation of Circuits, Pole Line Construction, Underground Working and other Uses. (In Press.)
- PERRY (JOHN).** Applied Mechanics. A Treatise for the use of students who have time to work experimental, numerical and graphical exercises illustrating the subject. 8vo, cloth. 650 pages., net 2 50
- PHILLIPS (JOSHUA).** Engineering Chemistry. A Practical Treatise for the use of Analytical Chemists, Engineers, Iron Masters, Iron Founders, students and others. Comprising methods of Analysis and Valuation of the principal materials used in Engineering works, with numerous Analyses, Examples and Suggestions. 314 illustrations. Second edition, revised and enlarged. 8vo, cloth..... 4 00
- PICKWORTH (CHAS. N.).** The Indicator Handbook. A Practical Manual for Engineers. Part I. The Indicator: Its Construction and Application. 81 illustrations. 12mo, cloth..... 1 50
- The Slide Rule. A Practical Manual of Instruction for all Users of the Modern Type of Slide Rule, exhibiting the Application of the Instrument to the Everyday Work of the Engineer,—Civil, Mechanical and Electrical. 12mo, flexible cloth. Fifth edition. 80
- PLANE TABLE (THE).** Its Uses in Topographical Surveying. From the Papers of the United States Coast Survey. Illustrated. 8vo, cloth..... 2 00
- PLANTE (GASTON).** The Storage of Electrical Energy, and Researches in the Effects created by Currents, combining Quantity with High Tension. Translated from the French by Paul B. Elwell. 89 illustrations. 8vo..... 4 00
- PLATTNER.** Manual of Qualitative and Quantitative Analysis with the Blow-Pipe. From the last German edition, revised and enlarged, by Prof. Th. Richter, of the Royal Saxon Mining Academy. Translated by Prof. H. B. Cornwall, assisted by John H. Caswell. Illustrated with 87 wood cuts and one lithographic plate. Seventh edition, revised. 560 pages. 8vo, cloth..... 5 00

- PLYMPTON (Prof. GEO. W.).** The Blow Pipe. A Guide to its use in the Determination of Salts and Minerals. Compiled from various sources. 12mo, cloth 1 50
- The Aneroid Barometer: its Construction and Use. Compiled from several sources. Fourth edition. 16mo, boards. Illustrated... 50
Morocco..... 1 00
- POCKET LOGARITHMS,** to Four Places of Decimals, including Logarithms of Numbers, and Logarithmic Sines and Tangents to Single Minutes. To which is added a Table of Natural Sines, Tangents, and Co-Tangents. 16mo, boards..... 50
- POPE (F. L.).** Modern Practice of the Electric Telegraph. A Technical Hand-book for Electricians, Managers and Operators. Fifteenth edition, rewritten and enlarged, and fully illustrated. 8vo, cloth. 1 50
- POPPLEWELL (W. C.).** Elementary Treatise on Heat and Heat Engines. Specially adapted for engineers and students of engineering. 12mo, cloth. Illustrated..... 3 00
- POWLES (H. H.).** Steam Boilers.....(In Press.)
- PRAY (Jr., THOMAS).** Twenty Years with the Indicator; being a Practical Text-Book for the Engineer or the Student, with no complex Formulæ. Illustrated. 8vo, cloth..... 2 50
- Steam Tables and Engine Constant. Compiled from Regnault, Rankine and Dixon directly, making use of the exact records. 8vo, cloth..... 2 00
- PRACTICAL IRON FOUNDING.** By the Author of "Pattern Making," &c., &c. Illustrated with over one hundred engravings. 12mo, cloth..... 1 50
- PREECE (W. H.).** Electric Lamps(In Press.)
- PREECE (W. H.), and STUBBS, A. T.** Manual of Telephony. Illustrations and plates. 12mo, cloth. 4 50
- PREMIER CODE.** (See Hawk, Wm. H.)
- PRESCOTT (Prof. A. B.).** Organic Analysis. A Manual of the Descriptive and Analytical Chemistry of certain Carbon Compounds in Common Use: a Guide in the Qualitative and Quantitative Analysis of Organic Materials in Commercial and Pharma-

- ceutical Assays, in the estimation of Impurities under Authorized Standards, and in Forensic Examinations for Poisons, with Directions for Elementary Organic Analysis. Fourth edition. 8vo, cloth..... 5 00
- PRESCOTT (Prof. A. B.).** Outlines of Proximate Organic Analysis, for the Identification, Separation, and Quantitative Determination of the more commonly occurring Organic Compounds. Fourth edition. 12mo, cloth 1 75
- **First Book in Qualitative Chemistry.** Eighth edition. 12mo, cloth 1 50
- **and Otis Coe Johnson.** Qualitative Chemical Analysis. A Guide in the Practical Study of Chemistry and in the work of Analysis. Fourth fully revised edition. With Descriptive Chemistry extended throughout..... 3 50
- PRITCHARD (O. G.).** The Manufacture of Electric Light Carbons. Illustrated. 8vo, paper 60
- PULLEN (W. W. F.).** Application of Graphic Methods to the Design of Structures. Specially prepared for the use of Engineers. 12mo, cloth. Illustrated. net 2 50
- PULSIFER (W. H.).** Notes for a History of Lead. 8vo, cloth, gilt tops..... 4 00
- PYNCHON (Prof. T. R.).** Introduction to Chemical Physics, designed for the use of Academies, Colleges, and High Schools. Illustrated with numerous engravings, and containing copious experiments with directions for preparing them. New edition, revised and enlarged, and illustrated by 269 illustrations on wood. 8vo, cloth..... 3 00
- RADFORD (Lieut. CYRUS S.).** Hand-book on Naval Gunnery. Prepared by Authority of the Navy Department. For the use of U. S. Navy, U. S. Marine Corps and U. S. Naval Reserves. Revised and enlarged, with the assistance of Stokely Morgan, Lieut. U. S. N. Third edition. 12mo, flexible leather. 2 00
- RAFTER (GEO. W.), and M. N. BAKER.** Sewage Disposal in the United States. Illustrations and folding plates. Second edition. 8vo, cloth..... 6 00
- RAM (GILBERT S.).** The Incandescent Lamp and its Manufacture. 8vo, cloth.. 3 00

-
- RANDALL (J. E.).** A Practical Treatise on the Incandescent Lamp. Illustrated. 16mo, cloth..... 50
- RANDALL (P. M.).** Quartz Operator's Hand-book. New edition, revised and enlarged, fully illustrated. 12mo, cloth..... 2 00
- RANKINE (W. J. MACQUORN.)** Applied Mechanics. Comprising the Principles of Statics and Cinematics, and Theory of Structures, Mechanism, and Machines. With numerous diagrams. Fifteenth edition. Thoroughly revised by W. J. Millar. 8vo, cloth... 5 00
- Civil Engineering. Comprising Engineering Surveys, Earthwork, Foundations, Masonry, Carpentry, Metal Work, Roads, Railways, Canals, Rivers, Water Works, Harbors, etc. With numerous tables and illustrations. Twentieth edition. Thoroughly revised by W. J. Millar. 8vo, cloth... 6 50
- Machinery and Millwork. Comprising the Geometry, Motions, Work, Strength, Construction, and Objects of Machines, etc. Illustrated with nearly 800 wood cuts. Seventh edition. Thoroughly revised by W. J. Millar. 8vo, cloth..... 5 00
- The Steam Engine and other Prime Movers. With diagram of the Mechanical Properties of Steam-folding plates, numerous tables and illustrations. Thirteenth edition. Thoroughly revised by W. J. Millar. 8vo, cloth.... 5 00
- Useful Rules and Tables for Engineers and Others. With appendix, tables, tests, and formulæ for the use of Electrical Engineers. Comprising Submarine Electrical Engineering, Electric Lighting, and Transmission of Power. By Andrew Jamieson, C. E., F. R. S. E. Seventh edition. Thoroughly revised by W. J. Millar. Crown 8vo, cloth. 4 00
- A Mechanical Text-Book. By Prof. Macquorn Rankine and E. F. Bamber, C. E. With numerous illustrations. Fourth edition. 8vo, cloth..... 3 50
- RAPHAEL (F. C.).** Localisation of Faults in Electric Light Mains. 8vo, cloth..... 2 00
- BECKENZAUN (A.).** Electric Traction on Railways and Tramways. 218 illustrations. 12mo, cloth.... 4 00

- REED'S ENGINEERS' HAND-BOOK** to the Local Marine Board Examinations for Certificates of Competency as First and Second Class Engineers. By W. H. Thorn. With the answers to the Elementary Questions. Illustrated by 297 diagrams and 36 large plates. Sixteenth edition, revised and enlarged. 8vo, cloth..... 5 00
- Key to the Sixteenth Edition of Reed's Engineer's Hand-book to the Board of Trade Examinations for First and Second Class Engineers and containing the working of all the questions given in the examination papers By W. H. Thorn. 8vo, cloth..... 3 00
- Useful Hints to Sea-going Engineers, and How to Repair and Avoid "Break Downs;" also Appendices Containing Boiler Explosions, Useful Formulæ, etc. With 36 diagrams and 4 plates. Second edition, revised and enlarged. 12mo, cloth..... 1 40
- Marine Boilers: A Treatise on the Causes and Prevention of their Priming, with Remarks on their General Management. Illustrated. 12mo, cloth... 2 00
- REINHARDT (CHAS. W.)**. Lettering for Draftsmen, Engineers and Students. A Practical System of Free-hand Lettering for Working Drawings. Fourth thousand. Oblong, boards..... 1 00
- RICE (J. M.), and JOHNSON, W. W.** On a New Method of obtaining the Differential of Functions, with especial reference to the Newtonian Conception of Rates or Velocities. 12mo, paper.... 50
- RINGWALT (J. L.)**. Development of Transportation Systems in the United States, Comprising a Comprehensive Description of the leading features of advancement from the colonial era to the present time. With illustrations. Quarto, half morocco.. 7 50
- RIPPER (WILLIAM)**. A Course of Instruction in Machine Drawing and Design for Technical Schools and Engineer Students. With 52 plates and numerous explanatory engravings. Folio, cloth..... 6 00
- ROEBLING (J. A.)**. Long and Short Span Railway Bridges. Illustrated with large copperplate engravings of plans and views. Imperial folio, cloth..... 25 00

ROGERS (Prof. H. D.). The Geology of Pennsylvania. A Government Survey, with a General View of the Geology of the United States, essays on the Coal Formation and its Fossils, and a description of the Coal Fields of North America and Great Britain. Illustrated with plates and engravings in the text. 3 vols., 4to, cloth, with portfolio of maps. 15 00

ROSE (JOSHUA, M. E.). The Pattern Makers' Assistant. Embracing Lathe Work, Branch Work, Core Work, Sweep Work, and Practical Gear Constructions, the Preparation and Use of Tools, together with a large collection of useful and valuable Tables. Eighteenth edition. Illustrated with 250 engravings. 8vo, cloth. 2 50

— Key to Engines and Engine-running. A Practical Treatise upon the Management of Steam Engines and Boilers for the Use of Those who Desire to Pass an Examination to Take Charge of an Engine or Boiler. With numerous illustrations, and Instructions Upon Engineers' Calculations, Indicators, Diagrams, Engine Adjustments, and other Valuable Information necessary for Engineers and Firemen. 12mo, cloth. 2 50

SABINE (ROBERT). History and Progress of the Electric Telegraph. With descriptions of some of the apparatus. Second edition, with additions. 12mo, cloth. 1 25

SAELTZER (ALEX.). Treatise on Acoustics in connection with Ventilation. 12mo, cloth. 1 00

SALOMONS (Sir DAVID, M. A.). Electric Light Installations. A Practical Hand-book. Eighth edition, revised and enlarged, with numerous illustrations. Vol. I. The management of Accumulators. 12mo, cloth. 1 50
Vol. II., Apparatus, 296 illustrations. 12mo, cloth 2 25
Vol. III., Applications. 12mo, cloth. 1 50

SANFORD (P. GERALD). Nitro-Explosives. A Practical Treatise concerning the Properties, Manufacture and Analysis of Nitrated Substances, including the Fulminates, Smokeless Powders and Celluloid. 8vo, cloth, 270 pages. 8 00

SAUNNIER (CLAUDIUS). Watchmaker's Hand-book. A Workshop Companion for those engaged

- in Watchmaking and allied Mechanical Arts. Translated by J. Tripplin and E. Rigg. Second edition, revised with appendix. 12mo, cloth 8 50
- SHELLEN (Dr. H.).** Magneto-Electric and Dynamo-Electric Machines: their Construction and Practical Application to Electric Lighting, and the Transmission of Power. Translated from the third German edition, by N. S. Keith and Percy Neymann, Ph. D. With very large additions and notes relating to American Machines, by N. S. Keith. Vol. I., with 353 illustrations. Second edition 5 00
- SCHUMANN (F.).** A Manual of Heating and Ventilation in its Practical Application, for the use of Engineers and Architects. Embracing a series of Tables and Formulæ for dimensions of heating, flow and return pipes for steam and hot water boilers, flues, etc. 12mo, illustrated, full roan. 1 50
- SCRIBNER (J. M.).** Engineers' and Mechanics' Companion. Comprising United States Weights and Measures. Mensuration of Surfaces and Solids, Tables of Squares and Cubes, Square and Cube Roots, Circumference and Areas of Circles, the Mechanical Powers, Centres of Gravity, Gravitation of Bodies, Pendulums, Specific Gravity of Bodies, Strength, Weight, and Crush of Materials, Water-Wheels, Hydrostatics, Hydraulics, Statics, Centres of Percussion and Gyration, Friction Heat, Tables of the Weight of Metals, Scantling, etc., Steam and the Steam Engine. Twentieth edition revised. 16mo, full morocco 1 50
- SEATON (A. E.).** A Manual of Marine Engineering. Comprising the Designing, Construction and Working of Marine Machinery. With numerous tables and illustrations reduced from Working Drawings. Fourteenth edition. Revised throughout, with an additional chapter on Water Tube Boilers. 8vo., cloth 6 00
- and **ROUNTHWAITE (H. M.).** A Pocket-book of Marine Engineering Rules and Tables. For the use of Marine Engineers and Naval Architects, Designers, Draughtsmen, Superintendents, and all engaged in the design and construction of Marine Machinery, Naval and Mercantile. Fifth edition, revised and enlarged. Pocket size. Leather, with diagrams. Reprinting.

- SEXTON (A. HUMBOLDT).** Fuel and Refractory Materials. 8vo, cloth..... 2 00
- SHIELDS (J. E.).** Notes on Engineering Construction Embracing Discussions of the Principles involved, and Descriptions of the Material employed in Tunnelling, Bridging, Canal and Road Building, etc. 12mo, cloth..... 1 50
- SHOCK (WM. H.).** Steam Boilers: Their Design, Construction and Management. 4to, half morocco. 15 00
- SHREEVE (S. H.).** A Treatise on the Strength of Bridges and Roofs. Comprising the determination of Algebraic formulas for strains in Horizontal, Inclined or Rafter, Triangular, Bowstring, Lenticular, and other Trusses, from fixed and moving loads, with practical applications and examples, for the use of Students and Engineers. 87 woodcut illus. Fourth edition. 8vo, cloth..... 3 50
- SHUNK (W. F.).** The Field Engineer. A Handy Book of practice in the Survey, Location, and Truck-work of Railroads, containing a large collection of Rules and Tables, original and selected, applicable to both the Standard and Narrow Gauge, and prepared with special reference to the wants of the young Engineer. Eleventh edition, revised and enlarged. 12mo, morocco, tucks..... 2 50
- SIMMS (F. W.).** A Treatise on the Principles and Practice of Levelling. Showing its application to purposes of Railway Engineering, and the Construction of Roads, etc. Revised and corrected, with the addition of Mr. Laws' Practical Examples for setting out Railway Curves. Illustrated. 8vo, cloth..... 2 50
- SIMMS (W. F.).** Practical Tunnelling. Fourth edition, revised and greatly extended. With additional chapters illustrating recent practice by D. Kinnear Clark. With 36 plates and other illustrations. Imperial 8vo, cloth..... 12 00
- SLATER (J. W.).** Sewage Treatment, Purification, and Utilization. A Practical Manual for the Use of Corporations, Local Boards, Medical Officers of Health, Inspectors of Nuisances, Chemists, Manufacturers, Riparian Owners, Engineers, and Rate-payers. 12mo, cloth..... 2 25

-
- SMITH (ISAAC W., C. E.).** The Theory of Deflections and of Latitudes and Departures. With special applications to Curvilinear Surveys, for Alignments of Railway Tracks. Illustrated. 16mo, morocco, tucks.. 3 00
- SNELL (ALBION T.).** Electric Motive Power: The Transmission and Distribution of Electric Power by Continuous and Alternate Currents With a Section on the Applications of Electricity to Mining Work. Second edition. 8vo, cloth, illustrated..... 4 00
- SPEYERS (CLARENCE L.).** Text-Book of Physical Chemistry. 8vo, cloth.. 2 25
- STAHL (A. W.), and A. T. WOODS.** Elementary Mechanism. A Text-Book for Students of Mechanical Engineering. Fourth edition, enlarged. 12mo, cloth..... 2 00
- STALEY (CADY), and PIERSON, GEO. S.** The Separate System of Sewerage: its Theory and Construction. Third edition, revised. 8vo, cloth. With maps, plates and illustrations..... 3 00
- STEVENSON (DAVID, F.R.S.N.).** The Principles and Practice of Canal and River Engineering. Revised by his sons David Alan Stevenson, B. Sc., F. R. S.E., and Charles Alexander Stevenson, B. Sc., F. R. S.E., Civil Engineer. Third edition, with 17 plates, 8vo, cloth..... 10 00
- The Design and Construction of Harbors, A Treatise on Maritime Engineering. Third edition with 24 plates, 8vo, cloth..... 9 00
- STEWART (R. W.).** A Text Book of Light, Adapted to the Requirements of the Intermediate Science and Preliminary Scientific Examinations of the University of London, and also for General Use, Numerous Diagrams and Examples. 12mo, cloth.. 1 00
- STEWART (R. W.).** A Text Book of Heat, Illustrated, 8vo, cloth..... 1 00
- A Text Book of Magnetism and Electricity, 160 illus. and Numerous Examples. 12mo, cloth..... 1 00
- STILES (AMOS).** Tables for Field Engineers. Designed for use in the field. Tables containing all the functions of a one degree curve, from which a corresponding one can be found for any required

degree. Also, Tables of Natural Sines and Tangents. 12mo, morocco, tucks	2 00
STILLMAN (PAUL). Steam Engine Indicator and the Improved Manometer Steam and Vacuum Gauges; their Utility and Application. New edition. 12mo, flexible cloth	1 00
STONE (General ROY). New Roads and Road Laws in the United States. 200 pages, with numerous illustrations. 12mo, cloth	1 00
STUART (C. B., U. S. N.). Lives and Works of Civil and Military Engineers of America. With 10 steel- plate engravings. 8vo, cloth	5 00
— The Naval Dry Docks of the United States. Illus- trated with 24 fine Engravings on Steel. Fourth edition. 4to, cloth	6 00
SWINTON (ALAN A. CAMPBELL). The Element- ary Principle of Electric Lighting. Illustrated. 12mo, cloth	60
TEMPLETON (WM.). The Practical Mechanic's Work-shop Companion. Comprising a great variety of the most useful rules and formulæ in Mechanical Science, with numerous tables of practical data and calculated results facilitating mechanical opera- tions. Revised and enlarged by W. S. Hutton. 12mo, morocco	2 00
THOM (CHAS.), and WILLIS H. JONES. Tele- graphic Connections: embracing Recent Methods in Quadruplex Telegraphy. Oblong, 8vo, cloth. 20 full page plates, some colored	1 50
THOMPSON (EDWARD P., M. E.). How to Make Inventions; or, Inventing as a Science and an Art. A Practical Guide for Inventors. Second edition. 8vo, boards	1 00
— Roentgen Rays and Phenomena of the Anode and Cathode Principles, Applications and Theories. For Students, Teachers, Physicians, Photographers, Electricians and others. Assisted by Louis M. Pignolet, N. D. C. Hodges, and Ludwig Gutmann. E. E. With a Chapter on Generalizations, Arguments, Theories, Kindred Radiations and Phenomena. By Professor Wm. Anthony. 8vo, cloth. 50 Diagrams, 40 Half tones	1 50

- TODD (JOHN), and W. B. WHALL.** Practical Seamanship for Use in the Merchant Service: Including all ordinary subjects; also Steam Seamanship, Wreck Lifting, Avoiding Collision, Wire Splicing, Displacement, and everything necessary to be known by seamen of the present day. Second edition, with 247 illustrations and diagrams. 8vo, cloth..... 8 40
- TOOTHED GEARING.** A Practical Hand-book for Offices and Workshops. By a Foreman Pattern-maker. 184 Illustrations. 12mo, cloth..... 2 25
- TRATMAN (E. E. RUSSELL).** Railway Track and Track Work. With over two hundred illustrations. 8vo, cloth..... 3 00
- TREVERT (EDWARD).** How to Build Dynamo-Electric Machinery, embracing Theory Designing and Construction of Dynamos and Motors. With appendices on Field Magnet and Armature Winding, Management of Dynamos and Motors, and Useful Tables of Wire Gauges. Illustrated. 8vo, cloth..... 2 50
- Electricity and its Recent Applications. A Practical Treatise for Students and Amateurs, with an Illustrated Dictionary of Electrical Terms and Phrases. Illustrated. 12mo, cloth..... 2 00
- TUCKER (Dr. J. H.).** A Manual of Sugar Analysis, including the Applications in General of Analytical Methods to the Sugar Industry. With an Introduction on the Chemistry of Cane Sugar, Dextrose, Levulose, and Milk Sugar. 8vo, cloth. Illustrated. 8 05
- TUMLIRZ (Dr. O.).** Potential and its Application to the Explanation of Electric Phenomena, Popularly Treated. Translated from the German by D. Robertson. Illustrated. 12mo, cloth..... 1 25
- TUNNER (P. A.).** Treatise on Roll-Turning for the Manufacture of Iron. Translated and adapted by John B. Pearse, of the Pennsylvania Steel Works, with numerous engravings, wood-cuts. 8vo, cloth, with folio atlas of plates..... 10 00
- URQUHART (J. W.).** Electric Light Fitting. Embodying Practical Notes on Installation Management. A Hand-book for Working Electrical Engineers—with numerous illustrations. 12mo, cloth..... 2 00
- Electro-Plating. A Practical Hand-book on the Deposition of Copper, Silver, Nickel, Gold, Brass, Aluminum, Platinum, etc. Fourth edition. 12mo.. 2 00

- UROUHART, (J. W.).** Dynamo Construction: a Practical Hand book for the Use of Engineer Constructors and Electricians in Charge, embracing Frame Work Building, Field Magnet and Armature Winding and Grouping, Compounding, etc., with Examples of Leading English, American and Continental Dynamos and Motors, with numerous illustrations. 12mo, cloth 3 00
- Electric Ship Lighting. A Hand-book on the Practical Fitting and Running of Ship's Electrical Plant. For the Use of Ship Owners and Builders, Marine Electricians and Sea Going Engineers-in-Charge. Numerous illustrations. 12mo, cloth 3 00
- UNIVERSAL TELEGRAPH CIPHER CODE.**
Arranged for General Correspondence. 12mo, cloth. 1 00
- VAN NOSTRAND'S ENGINEERING MAGAZINE.** Complete sets, 1869 to 1886 inclusive.
Complete sets, 35 vols., in cloth 60 00
Complete sets, 35 vols., in half morocco 100 00
- VAN WAGENEN (T. F.).** Manual of Hydraulic Mining. For the Use of the Practical Miner.
Revised and enlarged edition. 18mo, cloth 1 00
- WALKER (SIDNEY F.).** Electric Lighting for Marine Engineers, or How to Light a Ship by the Electric Light and How to Keep the Apparatus in Order. 103 illustrations. 8vo, cloth. Second edition. 2 00
- WALLIS-TAYLER (A. J.).** Modern Cycles. A Practical Hand-book on their Construction and Repair. With 800 illustrations. 8vo, cloth 4 00
- Motor Cars, or Power Carriages for Common Roads. 8vo, cloth, with numerous illustrations. 1 80
- Bearings and Lubrication. A Hand book for every user of Machinery. 8vo, cloth, fully illustrated 1 50
- Refrigerating and Ice-Making Machinery. A Descriptive Treatise for the use of persons employing refrigerating and ice-making installations and others. 8vo, cloth. Illustrated 3 00
- Sugar Machinery. A Descriptive Treatise, Devoted to the Machinery and Apparatus used in the Manufacture of Cane and Beet Sugars. 12mo, cloth. Illustrated 2 00

WANKLYN (J. A.). A Practical Treatise on the Examination of Milk and its Derivatives, Cream, Butter, and Cheese. 12mo, cloth.....	1 00
— Water Analysis. A Practical Treatise on the Examination of Potable Water. Tenth Edition. 12mo, cloth.....	2 00
WANSBROUGH (WM. D.). The A. B. C. of the Differential Calculus. 12mo, cloth.....	1 50
WARD (J. H.). Steam for the Million. A Popular Treatise on Steam, and its application to the Useful Arts, especially to Navigation. 8vo, cloth.....	1 00
WARING (GEO. E., Jr.). Sewerage and Land Drainage. Illustrated with wood-cuts in the text, and full-page and folding plates Quarto. Cloth. Third edition.....	6 00
— Modern Methods of Sewage Disposal for Towns, Public Institutions and Isolated Houses. Second edition, revised and enlarged. 260 pages. Illustrated. Cloth.....	2 00
— How to Drain a House. Practical Information for Householders. New and enlarged edition. 12mo, cloth.....	1 25
WATSON (E. P.). Small Engines and Boilers. A Manual of Concise and Specific Directions for the Construction of Small Steam Engines and Boilers of Modern Types from five Horse-power down to model sizes. 12mo, cloth. Illustrated with Numerous Diagrams and Half Tone Cuts. New York, 1899.....	1 25
WATT (ALEXANDER). Electro-Deposition, A Practical Treatise on the Electrolysis of Gold, Silver, Copper, Nickel, and other Metals, with Descriptions of Voltaic Batteries, Magneto and Dynamo-Electric Machines, Thermopiles, and of the Materials and Processes used in every Department of the Art, and several chapters on Electro-Metallurgy With numerous illustrations. Third edition, revised and corrected. Crown, 8vo, 568 pages.....	3 50
— Electro-Metallurgy Practically Treated. Tenth edition, considerably enlarged. 12mo, cloth.....	1 00
— The Art of Soap-Making. A Practical Hand-book of the Manufacture of Hard and Soft Soaps, Toilet Soaps, &c. Including many New Processes, and a Chapter on the Recovery of Glycerine from Waste Leas. With illustrations. Fourth edition, revised and enlarged. 8vo.....	3 00

- WATT (ALEXANDER).** The Art of Leather Manufacture. Being a Practical Hand-book, in which the Operations of Tanning, Currying, and Leather Dressing are Fully Described, and the Principles of Tanning Explained, and many Recent Processes Introduced. With numerous illustrations. Second edition. 8vo, cloth 4 00
- WEALE (JOHN).** A Dictionary of Terms Used in Architecture, Building, Engineering, Mining, Metallurgy, Archaeology, the Fine Arts etc., with explanatory observations connected with applied Science and Art. Fifth edition, revised and corrected. 12mo, cloth 2 50
- Weale's Rudimentary Scientific Series (Catalogue sent on application).
- WEBB (HERBERT LAWS).** A Practical Guide to the Testing of Insulated Wires and Cables. Illustrated. 12mo, cloth 1 00
- The Telephone Hand-book. 128 illustrations. 146 pages. 16mo, cloth 1 00
- WEEKES (R. W.).** The Design of Alternate Current Transformers. Illustrated. 12mo, cloth 1 00
- WEISBACH (JULIUS).** A Manual of Theoretical Mechanics. Ninth American edition. Translated from the fourth augmented and improved German edition, with an Introduction to the Calculus by Eckley B. Cox, A. M., Mining Engineer. 1,100 pages, and 902 wood-cut illustrations. 8vo, cloth... 6 00
- Sheep 7 50
- WESTON (EDMUND B.).** Tables Showing Loss of Head Due to Friction of Water in Pipes. Second edition. 12mo, cloth 1 50
- WEYMOUTH (F. MARTEN).** Drum Armatures and Commutators. (Theory and Practice.) A complete Treatise on the Theory and Construction of Drum Winding, and of commutators for closed-coil armatures, together with a full resume of some of the principal points involved in their design, and an exposition of armature re-actions and sparking. 8vo, cloth 3 00
- WEYRAUCH (J. J.).** Strength and calculations of Dimensions of Iron and Steel Construction, with reference to the Latest Experiments. 12mo, cloth, plates 1 00


WHEELER (Prof. J. B.). Art of War. A Course of Instruction in the Elements of the Art and Science of War, for the Use of the Cadets of the United States Military Academy, West Point, N. Y. 12mo, cloth.....	1 75
— Field Fortifications. The Elements of Field Fortifications, for the Use of the Cadets of the United States Military Academy, West Point, N. Y. 12mo.	1 75
WHIPPLE (S., C. E.). An Elementary and Practical Treatise on Bridge Building. 8vo, cloth.....	3 00
WILKINSON (H. D.). Submarine Cable-Laying, Repairing and Testing. 8vo, cloth.....	4 00
WILLIAMSON (R. S.). On the Use of the Barometer on Surveys and Reconnoissances. Part I. Meteorology in its Connection with Hypsometry. Part II. Barometric Hypsometry. With illustrative tables and engravings, 4to, cloth.....	15 00
WILLIAMSON (E. S.). Practical Tables in Meteorology and Hypsometry, in connection with the use of the Barometer. 4to, cloth.....	2 50
WILSON (GEO.). Inorganic Chemistry, with New Notation. Revised and enlarged by H. G. Madan. New edition. 12mo, cloth.....	2 00
WOODBURY (D. V.). Treatise on the Various Elements of Stability in the Well-Proportioned Arch. 8vo, half morocco.....	4 00
WRIGHT (T. W.). A Treatise on the Adjustment of Observations. With applications to Geodetic Work, and other measures of Precision. 8vo, cloth.....	4 00
— Elements of Mechanics; including Kinematics, Kinetics and Statics. With application. 8vo, cloth..	2 50
WYLIE (CLAUDE). Iron and Steel Founding. Illustrated with 39 diagrams. Second edition, revised and enlarged. 8vo, cloth.....	2 00
WYNKOOP (RICHARD). Vessels and Voyages, as Regulated by Federal Statutes and Treasury Instructions and Decisions. 8vo, cloth.....	2 00
YOUNG (J. ELTON). Electrical Testing for Telegraph Engineers, with Appendices consisting of Tables. 8vo, cloth. Illustrated.....	4 00
YOUNG SEAMAN'S MANUAL. Compiled from Various Authorities, and Illustrated with Numerous Original and Select Designs, for the Use of the United States Training Ships and the Marine Schools. 8vo, half roan.....	3 00

THE VAN NOSTRAND SCIENCE SERIES.


- No. 60.—STRENGTH OF WROUGHT-IRON BRIDGE MEMBERS.** By S. W. Robinson, C.E.
- No. 61.—POTABLE WATER AND METHODS OF DETECTING IMPURITIES.** By M. N. Baker.
- No. 62.—THE THEORY OF THE GAS-ENGINE.** By Dougald Clerk. Second edition. With additional matter. Edited by F. E. Idell, M.E.
- No. 63.—HOUSE DRAINAGE AND SANITARY PLUMBING.** By W. P. Gerhard. Sixth edition. Revised.
- No. 64.—ELECTRO-MAGNETS.** By A. N. Mansfield.
- No. 65.—POCKET LOGARITHMS TO FOUR PLACES OF DECIMALS.**
- No. 66.—DYNAMO-ELECTRIC MACHINERY.** By S. P. Thompson. With notes by F. L. Pope. Third edition.
- No. 67.—HYDRAULIC TABLES BASED ON "KUTTER'S FORMULA."** By P. J. Flynn.
- No. 68.—STEAM-HEATING.** By Robert Briggs. Third edition, revised, with additions by A. R. Wolff.
- No. 69.—CHEMICAL PROBLEMS.** By Prof. J. C. Foye. Third edition, revised and enlarged.
- No. 70.—EXPLOSIVE MATERIALS.** John P. Wisser, U. S. A.
- No. 71.—DYNAMIC ELECTRICITY.** By John Hopkinson, J. N. Shoolbred, and R. E. Day.
- No. 72.—TOPOGRAPHICAL SURVEYING.** By George J. Specht, Prof. A. S. Hardy, John B. McMaster, and H. F. Walling.
- No. 73.—SYMBOLIC ALGEBRA; OR, THE ALGEBRA OF ALGEBRAIC NUMBERS.** By Prof. W. Cain.
- No. 74.—TESTING MACHINES: THEIR HISTORY, CONSTRUCTION, AND USE.** By Arthur V. Abbott.
- No. 75.—RECENT PROGRESS IN DYNAMO-ELECTRIC MACHINES.** Being a Supplement to Dynamo-Electric Machinery. By Prof. Sylvanus P. Thompson.
- No. 76.—MODERN REPRODUCTIVE GRAPHIC PROCESSES.** By Lieut. James S. Pettit, U.S.A.
- No. 77.—STADIA SURVEYING.** The Theory of Stadia Measurements. By Arthur Winslow.
- No. 78.—THE STEAM-ENGINE INDICATOR, AND ITS USE.** By W. B. Le Van.
- No. 79.—THE FIGURE OF THE EARTH.** By Frank C. Roberts, C.E.
- No. 80.—HEALTHY FOUNDATIONS FOR HOUSES.** By Glenn Brown.

THE VAN NOSTRAND SCIENCE SERIES.

- No. 113.—**PHYSICAL PROBLEMS** and their Solution. By A. Bourgougnon, formerly Assistant at Bellevue Hospital.
- No. 114.—**MANUAL OF THE SLIDE RULE.** By F. A. Halsey, of the *American Machinist*.
- No. 115.—**TRAVERSE TABLES** showing the difference of Latitude and Departure for distances between 1 and 100 and for Angles to Quarter Degrees between 1 degree and 90 degrees. (Reprinted from Scribner's Pocket Table Book.)
- No. 116.—**WORM AND SPIRAL GEARING.** Reprinted from "American Machinist." By F. A. Halsey.



89088904016



b89088904016a